SAFETY INSTRUCTIONS

- Always follow safety instructions to prevent accidents and potential hazards from occurring.
- In this manual, safety messages are classified as follows:



Improper operation may result in serious personal injury or death.



Improper operation may result in slight to medium personal injury or property damage.

■ Throughout this manual we use the following two illustrations to make you aware of safety considerations:



Identifies potential hazards under certain conditions.

Read the message and follow the instructions carefully.



Identifies shock hazards under certain conditions.

Particular attention should be directed because dangerous voltage may be present.

- Keep operating instructions handy for quick reference.
- Read this manual carefully to maximize the performance of SV-iG5A series inverter and ensure its safe use.

! WARNING

- Do not remove the cover while power is applied or the unit is in operation. Otherwise, electric shock could occur.
- **Do not run the inverter with the front cover removed.**Otherwise, you may get an electric shock due to high voltage terminals or charged capacitor exposure.
- Do not remove the cover except for periodic inspections or wiring, even if the input power is not applied.

Otherwise, you may access the charged circuits and get an electric shock.

■ Wiring and periodic inspections should be performed at least 10 minutes after disconnecting the input power and after checking the DC link voltage is discharged with a meter (below DC 30V).

Otherwise, you may get an electric shock.

Operate the switches with dry hands.

Otherwise, you may get an electric shock.

■ Do not use the cable when its insulating tube is damaged.

Otherwise, you may get an electric shock.

Do not subject the cables to scratches, excessive stress, heavy loads or pinching.

Otherwise, you may get an electric shock.



Install the inverter on a non-flammable surface. Do not place flammable material nearby.

Otherwise, fire could occur.

■ Disconnect the input power if the inverter gets damaged.

Otherwise, it could result in a secondary accident and fire.

■ After the input power is applied or removed, the inverter will remain hot for a couple of minutes.

Otherwise, you may get bodily injuries such as skin-burn or damage.

Do not apply power to a damaged inverter or to an inverter with parts missing even if the installation is complete.

Otherwise, electric shock could occur.

■ Do not allow lint, paper, wood chips, dust, metallic chips or other foreign matter into the drive.

Otherwise, fire or accident could occur.

OPERATING PRECAUTIONS

(1)	На	ndling ar	nd installation					
		Handle	according to the weight of t	the product.				
		Do not	stack the inverter boxes hig	her than the number recommended.				
☐ Install according to instructions specified in this manual.								
		Do not	open the cover during delive	ery.				
		Do not	place heavy items on the in	verter.				
		Check	the inverter mounting orient	ation is correct.				
		Do not	drop the inverter, or subject	it to impact.				
		Follow	your national electrical code	e for grounding. Recommended Ground impedance for				
				for 400V class below 10 ohm.				
		iG5A s	eries contains ESD (Electros	static Discharge) sensitive parts. Take protective				
			·	ching the pcb for inspection or installation.				
			e inverter under the following					
	_							
		ment	Surrounding temperature	- 10 ~ 50 °C (non-freezing)				
			Relative humidity	90% RH or less (non-condensing)				
			Storage temperature	- 20 ~ 65 ℃				
		Environment	Location	Protected from corrosive gas, combustible gas, oil mist or dust				
		山	Altitude, Vibration	Max. 1,000m above sea level, Max. 5.9m/sec ² (0.6G) or less				
	L		Atmospheric pressure	70 ~ 106 kPa				
(0)	\ A / ' '							
(2)	Wiri	_						
				ection capacitor, surge suppressor, or RFI filter to the				
	_	•	of the inverter.					
				utput cables U, V, W to the motor will affect the				
	_		on of rotation of the motor.					
		Incorrect terminal wiring could result in the equipment damage.						
			• • • • •	erminals could damage the inverter.				
		Only au inspect		with LS inverter should perform wiring and				
		•		riring. Otherwise, you may get an electric shock or				

(3) Trial run

have bodily injury.

☐ Check all parameters during operation. Changing parameter values might be required depending on the load.

☐ Always apply permissible range of voltage to the each terminal as indicated in this manual. Otherwise, it could lead to inverter damage.

(4) Ope	ration precautions
	When the Auto restart function is selected, stay away from the equipment as a motor will
	restart suddenly after an alarm stop.
	The Stop key on the keypad is valid only when the appropriate function setting has been
	made. Prepare an emergency stop switch separately.
	If an alarm reset is made with the reference signal present, a sudden start will occur.
	Check that the reference signal is turned off in advance. Otherwise an accident could
	occur.
	Do not modify or alter anything inside the inverter.
	Motor might not be protected by electronic thermal function of inverter.
	Do not use a magnetic contactor on the inverter input for frequent starting/stopping of the
	inverter.
	Use a noise filter to reduce the effect of electromagnetic interference. Otherwise nearby
	electronic equipment may be affected.
	In case of input voltage unbalance, install AC reactor. Power Factor capacitors and
	generators may become overheated and damaged due to potential high frequency noise
	transmitted from inverter.
	Use an insulation-rectified motor or take measures to suppress the micro surge voltage
	when driving 400V class motor with inverter. A micro surge voltage attributable to wiring
	constant is generated at motor terminals, and may deteriorate insulation and damage
	motor.
	Before operating unit and prior to user programming, reset user parameters to default
	settings.
	Inverter can easily be set to high-speed operations, Verify capability of motor or
	machinery prior to operating unit.
	Stopping torque is not produced when using the DC-Break function. Install separate
	equipment when stopping torque is needed.
(5) Fau	It prevention precautions
	Provide a safety backup such as an emergency brake which will prevent the machine
	and equipment from hazardous conditions if the inverter fails.
(6) Mair	ntenance, inspection and parts replacement
	Do not conduct a megger (insulation resistance) test on the control circuit of the inverter.
	Refer to Chapter 12 for periodic inspection (parts replacement).
(7) Disp	
	Handle the inverter as an industrial waste when disposing of it.

(8) General instructions

Many of the diagrams and drawings in this instruction manual show the inverter without a circuit breaker, a cover or partially open. Never run the inverter like this. Always place the cover with circuit breakers and follow this instruction manual when operating the inverter.

Important User Information

- The purpose of this manual is to provide the user with the necessary information to install, program, start up and maintain the SV-iG5A series inverter.
- To assure successful installation and operation, the material presented must be thoroughly read and understood before proceeding.
- This manual contains...

Chapter	Title	Description
1	Basic information & precautions	Provides general information and precautions for safe use of the SV-iG5A series inverter.
2	Installation & Wiring	Provides instructions on how to install and wiring for power source & signal terminal of SV-iG5A inverter.
3	Basic configuration	Describes how to connect the optional peripheral devices to the inverter.
4	Programming keypad & Basic operation	Illustrates keypad features and display & Provides instructions for quick start of the inverter.
5	Function list	Parameter values are listed.
6	Control block diagram	Shows control flow to help users easily understand operation mode.
7	Basic functions	Provides information for basic functions in the SV-iG5A
8	Advanced functions	Indicates advanced functions used for system application.
9	Monitoring	Gives information on the operating status and fault information.
10	Protective functions	Outlines protective functions of the SV-iG5A.
11	RS 485	Provides specification of RS485 communication.
12	Troubleshooting & maintenance	Defines the various inverter faults and the appropriate action to take as well as general troubleshooting information.
13	Specifications & Option	Gives information on Input/Output rating, control type and more details of the SV-iG5A inverter. Explains options including Remote keypad, Conduit, EMC filter, DB resistor, DeviceNet Module.

Table of Contents

CHAPTER 1 -	Basic information & precautions	1-1
1.1Importan	t precautions	1-1
1.2 Product	Details	1-2
1.3 Product	assembling & disassembling	1-3
CHAPTER 2 -	Installation & Wiring	2-1
2.1 Installati	on precautions	2-1
2.2 Dimensi	ons	2-3
2.3 Termina	I wiring (Control I/O)	2-7
2.4 Specifica	ations for power terminal block wiring	2-9
2.5 Control	terminal specification	2-12
2.6 PNP/NP	N selection and connector for communication option	2-13
2.7 Termina	ting Resistor selection	2-14
CHAPTER 3 -	Basic configuration	3-1
3.1 Connect	tion of peripheral devices to the inverter	3-1
3.2 Recomn	nended MCCB	3-2
3.3 Recomn	nendable Fuse, Reactors	3-3
CHAPTER 4 -	Programming Keypad & Basic operation	4-1
4.1 Keypad	features	4-1
4.2 Alpha-nı	umeric view on the LED keypad	4-2
4.3 Moving	to other groups	4-3
4.4 How to	change the codes in a group	4-5
4.5 Paramet	ter setting	4-7
4.6 Monitori	ng of operation status	4-10
4.7 Frequen	cy Setting and Basic Operation	4-13
CHAPTER 5 -	Function list	5-1
CHAPTER 6 -	CONTROL BLOCK DIAGRAM	6-1
6.1 Frequen	ncy setting	6-2
6.2 Drive co	mmand setting	6-4
6.3 Accel/De	ecel setting and V/F control	6-5
CHAPTER 7 -	Basic Functions	7-1
7.1 Frequen	ncy mode	7-1
7.2 Multi-Ste	ep Frequency setting	7-7
7.3 Operatir	ng command setting method	7-8
7.4 Accel/De	ecel time and pattern setting	7-12
7.5 V/F cont	trol	7-17
•	thod select	
· ·	cy limit	
CHAPTER 8 -	Advanced functions	8-1
8.1 DC brak	e	8-1
8.2 Jog ope	ration	8-3

8.3 UP-DOWN Drive	8-4
8.4 3-Wire	8-7
8.5 Dwell operation	8-7
8.6 Slip compensation	8-8
8.7 PID control	8-9
8.8 Auto-tuning	8-13
8.9 Sensorless Vector Control	8-14
8.10 Energy-saving operation	8-15
8.11 Speed search	8-16
8.12 Auto restart try	8-18
8.13 Operating sound select (Carrier frequency change)	8-19
8.14 2 nd motor operation	8-19
8.15 Self-Diagnostic function	8-21
8.16 Frequency setting and 2 nd drive method select	8-22
8.17 Over voltage trip prevention deceleration and Power Braking	8-24
8.18 External brake control	8-24
8.19 Kinetic energy buffering	8-26
8.20 DRAW drive	8-26
8.21 2 Phase PWM drive	8-28
8.22 Cooling fan control	8-28
8.23 Operating mode select when cooling fan trip occurs	8-28
8.24 Parameter read/write	8-30
8.25 Parameter Initialize / Lock	8-31
CHAPTER 9 - Monitoring	9-1
9.1 Operating status monitoring	9-1
9.2 Monitoring the I/O terminal	9-3
9.3 Monitoring fault condition	9-4
9.4 Analog Output	9-6
9.5 Multi-function output terminal (MO) and Relay (3AC)	
9.6 Output terminal select at loder communication error	9-12
CHAPTER 10 - Protective functions	
10.1 Electronic Thermal	
10.2 Overload Warning and trip	
10.3 Stall prevention	
10.4 Output phase loss protection	
10.5 External trip signal	
10.6 Inverter Overload	
10.7 Speed command loss	
10.8 DB Resistor Enable Duty setting	
CHAPTER 11 - RS485 communication	
11.1 Introduction	
11.2 Specification	

11.3 Installation	11-2
11.4 Operation	11-2
11.5 Communication protocol (MODBUS-RTU)	11-3
11.6 Communication protocol (LS BUS)	11-3
11.7 Parameter code list <common area=""> (Note1)</common>	11-6
11.8 Troubleshooting	
11.9 Miscellaneous	11-12
CHAPTER 12 - Troubleshooting & Maintenance	12-1
12.1 Protective functions	12-1
12.2 Fault remedy	12-3
12.3 Precautions for maintenance and inspection	12-6
12.4Check points	
12.5 Part replacements	12-6
CHAPTER 13 - Specifications	13-1
13.1 Technical data	13-1
13.2 Temperature Derating Information	13-4
13.3 Remote option	
13.4 Conduit Kit	13-6
13.5 Braking resistor	13-7
13.6 DeviceNet/Ethernet Communication Module	
DECLARATION OF CONFIRMITY	I

CHAPTER 1 - BASIC INFORMATION & PRECAUTIONS

1.1Important precautions

Unpacking and inspection

Inspect the inverter for any damage that may have occurred during shipping.
 To verify the inverter unit is the correct one for the application you need, check the inverter type, output ratings on the nameplate and the inverter is intact.



SV	0	75	iG5A	-		2	(N)
	Мс	otor rating	Series Name			Input power	Keypad
	004	0.4 [kW]		2			
	800	0.75 [kW]	iG5A		1	Single Phase 200~230[V]	NON loader I/O Products
	015	1.5 [kW]			1		
er	022	2.2 [kW]					
LS Inverter	037	3.7 [kW]					
	040	4.0 [kW]			2	Three Phase	
ST	055	5.5 [kW]				200~230[V]	
	075	7.5 [kW]					
	110	11.0[kW]					
	150	15.0[kW]				Three Phase 380~480[V]	
	185	18.5[kW]			4		
	220	22.0[kW]					


Accessories

If you have found any discrepancy, damage, etc., contact your sales representative.

Preparations of instruments and parts required for operation	Instruments and parts to be prepared depend on how the inverter is operated. Prepare equipment and parts as necessary.
Installation	To operate the inverter with high performance for a long time, install the inverter in a proper place in the correct direction and with proper clearances
Wiring	Connect the power supply, motor and operation signals (control signals) to the terminal block. Note that incorrect connection may damage the inverter and peripheral devices


1.2 Product Details

Appearance

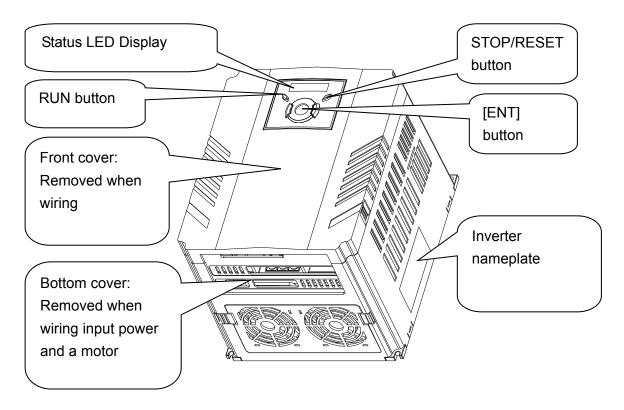


Inside view after front cover is removed

Refer to "1.3 To remove the front cover" for details.

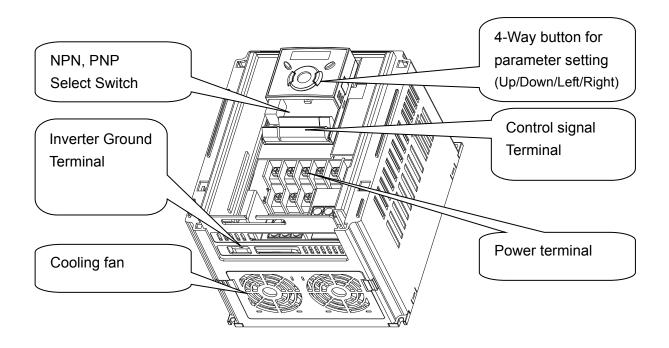


1.3 Product assembling & disassembling

• To remove the front cover: Press the both indented sides of the cover lightly and pull up.

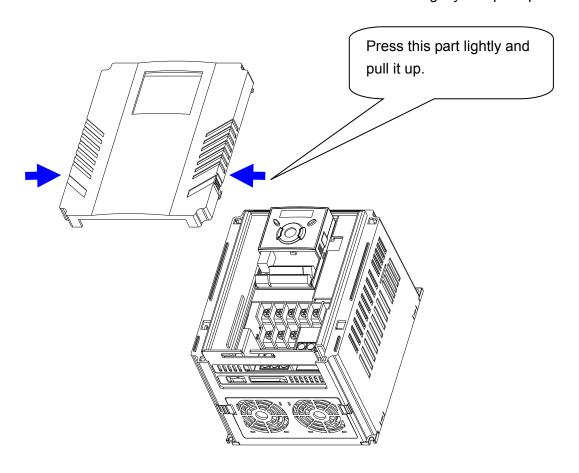

• To change the inverter fan: Press the both sides of bottom cover lightly and pull out to your side.

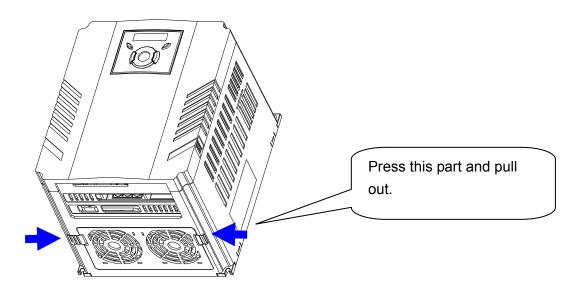


Notes:

CHAPTER 2 - INSTALLATION & WIRING

2.1 Installation precautions


! CAUTION

- Handle the inverter with care to prevent damage to the plastic components. Do not hold the inverter by the front cover. It may fall off.
- Install the inverter in a place where it is immune to vibration (5.9 m/s² or less).
- Install in a location where temperature is within the permissible range (-10~50°C).

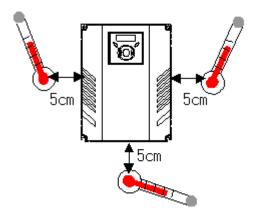

<Ambient Temp Checking Location>


- The inverter will be very hot during operation. Install it on a non-combustible surface.
- Mount the inverter on a flat, vertical and level surface. Inverter orientation must be vertical (top up) for proper heat dissipation. Also leave sufficient clearances around the inverter.

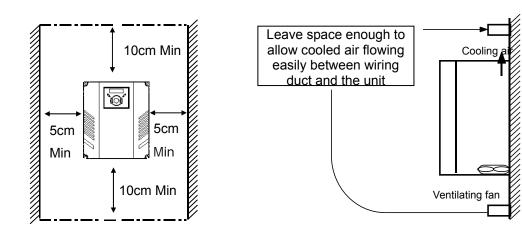


- Protect from moisture and direct sunlight.
- Do not install the inverter in any environment where it is exposed to waterdrops, oil mist, dust, etc. Install the inverter in a clean place or inside a "totally enclosed" panel any suspended matter is not entered.

- When two or more inverters are installed or a cooling fan is mounted in a panel, the inverters and fan must be installed in proper positions with extreme care to keep the ambient temperature below the permissible range.
- Installed the inverter using screws or bolts to insure the inverter is firmly fastened.

< For installing multiple inverters in a panel>

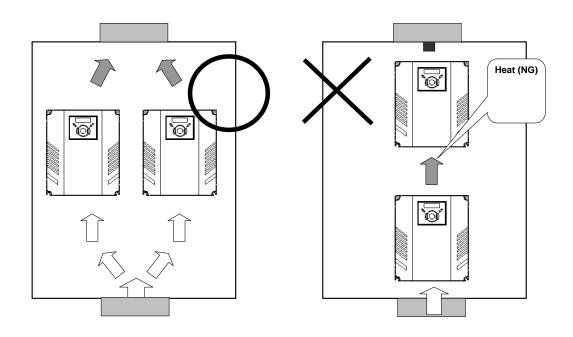


Take caution on proper heat ventilation when installing inverters and fans in a panel.

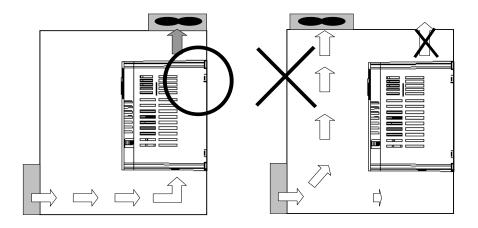


2.2 Dimensions

SV004iG5A-1 SV004iG5A-2 / SV008iG5A-2 SV004iG5A-4 / SV008iG5A-4

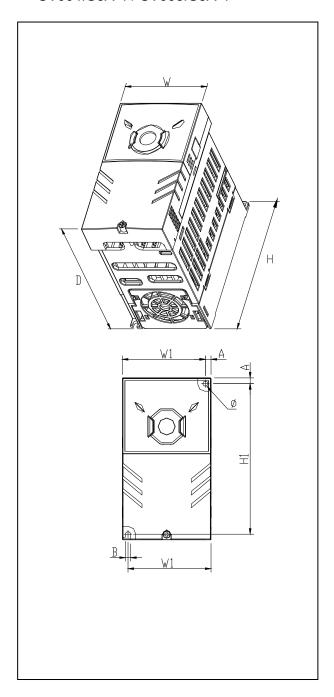



SV008iG5A-1 SV015iG5A-2 / SV015iG5A-4

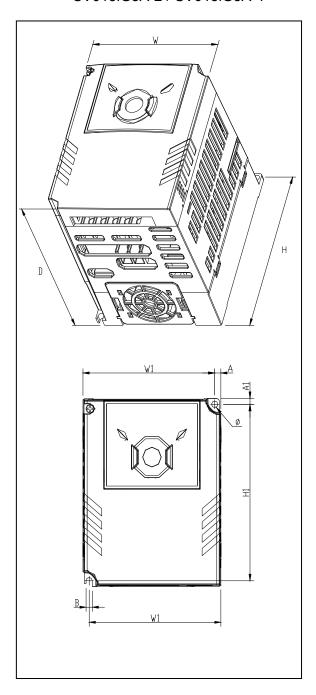

SV015iG5A-1 SV022iG5A-2 / SV037iG5A-2 / SV040iG5A-2 SV022iG5A-4 / SV037iG5A-4 / SV040iG5A-4


SV055iG5A-2 / SV075iG5A-2 SV055iG5A-4 / SV075iG5A-4

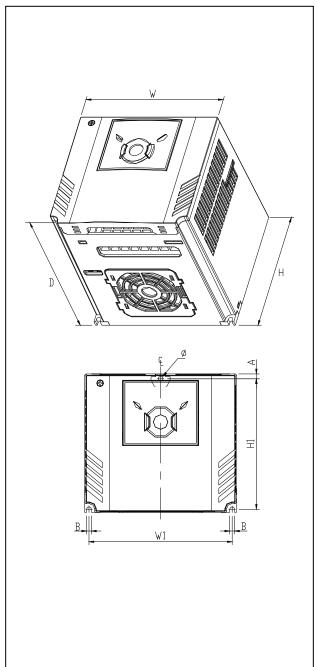


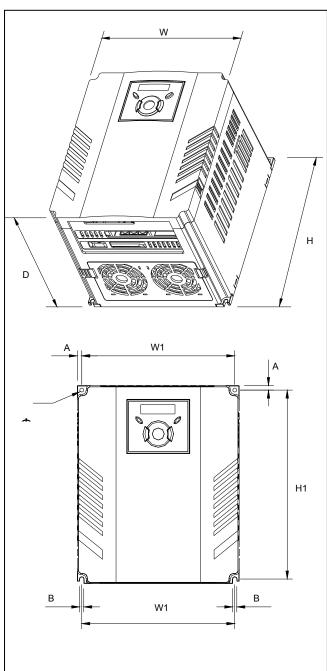

SV110iG5A-2 /SV150iG5A-2 SV110iG5A-4 / SV150iG5A-4


SV185iG5A-2 / SV220iG5A-2 SV185iG5A-4 / SV220iG5A-4

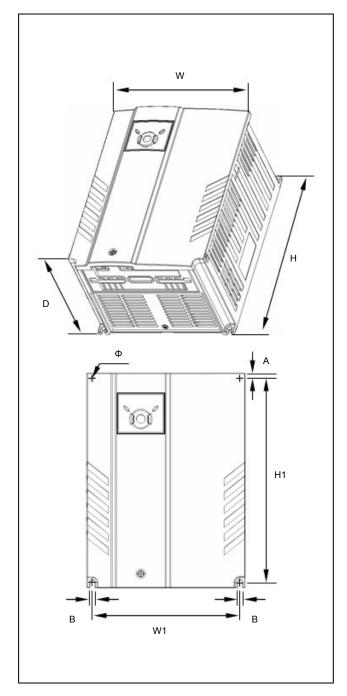

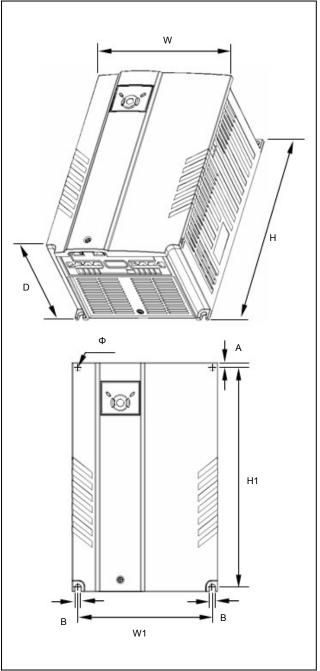



Inverter	[kW]	W [mm]	W1 [mm]	H [mm]	H1 [mm]	D [mm]	Ф	A [mm]	B [mm]	[Kg]
SV004iG5A-1	0.4	70	65.5	128	119	130	4.0	4.5	4.0	0.76
SV008iG5A-1	0.75	100	95.5	128	120	130	4.5	4.5	4.5	1.12
SV015iG5A-1	1.5	140	132	128	120.5	155	4.5	4.5	4.5	1.84
SV004iG5A-2	0.4	70	65.5	128	119	130	4.0	4.5	4.0	0.76
SV008iG5A-2	0.75	70	65.5	128	119	130	4.0	4.5	4.0	0.77
SV015iG5A-2	1.5	100	95.5	128	120	130	4.5	4.5	4.5	1.12
SV022iG5A-2	2.2	140	132	128	120.5	155	4.5	4.5	4.5	1.84
SV037iG5A-2	3.7	140	132	128	120.5	155	4.5	4.5	4.5	1.89
SV040iG5A-2	4.0	140	132	128	120.5	155	4.5	4.5	4.5	1.89
SV055iG5A-2	5.5	180	170	220	210	170	4.5	5.0	4.5	3.66
SV075iG5A-2	7.5	180	170	220	210	170	4.5	5.0	4.5	3.66
SV110iG5A-2	11.0	235	219	320	304	189.5	7.0	8.0	7.0	9.00
SV150iG5A-2	15.0	235	219	320	304	189.5	7.0	8.0	7.0	9.00
SV185iG5A-2	18.5	260	240	410	392	208.5	10.0	10.0	10.0	13.3
SV220iG5A-2	22.0	260	240	410	392	208.5	10.0	10.0	10.0	13.3
SV004iG5A-4	0.4	70	65.5	128	119	130	4.0	4.5	4.0	0.76
SV008iG5A-4	0.75	70	65.5	128	119	130	4.0	4.5	4.0	0.77
SV015iG5A-4	1.5	100	95.5	128	120	130	4.5	4.5	4.5	1.12
SV022iG5A-4	2.2	140	132	128	120.5	155	4.5	4.5	4.5	1.84
SV037iG5A-4	3.7	140	132	128	120.5	155	4.5	4.5	4.5	1.89
SV040iG5A-4	4.0	140	132	128	120.5	155	4.5	4.5	4.5	1.89
SV055iG5A-4	5.5	180	170	220	210	170	4.5	5.0	4.5	3.66
SV075iG5A-4	7.5	180	170	220	210	170	4.5	5.0	4.5	3.66
SV110iG5A-4	11.0	235	219	320	304	189.5	7.0	8.0	7.0	9.00
SV150iG5A-4	15.0	235	219	320	304	189.5	7.0	8.0	7.0	9.00
SV185iG5A-4	18.5	260	240	410	392	208.5	10.0	10.0	10.0	13.3
SV220iG5A-4	22.0	260	240	410	392	208.5	10.0	10.0	10.0	13.3

2.3 Terminal wiring (Control I/O)

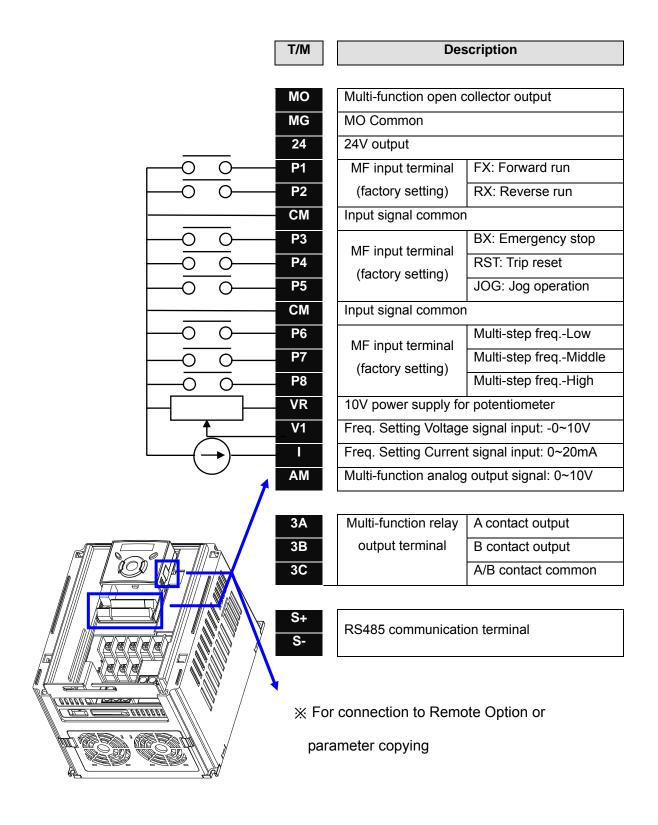

* Power terminal wiring (0.4 ~ 7.5kW)

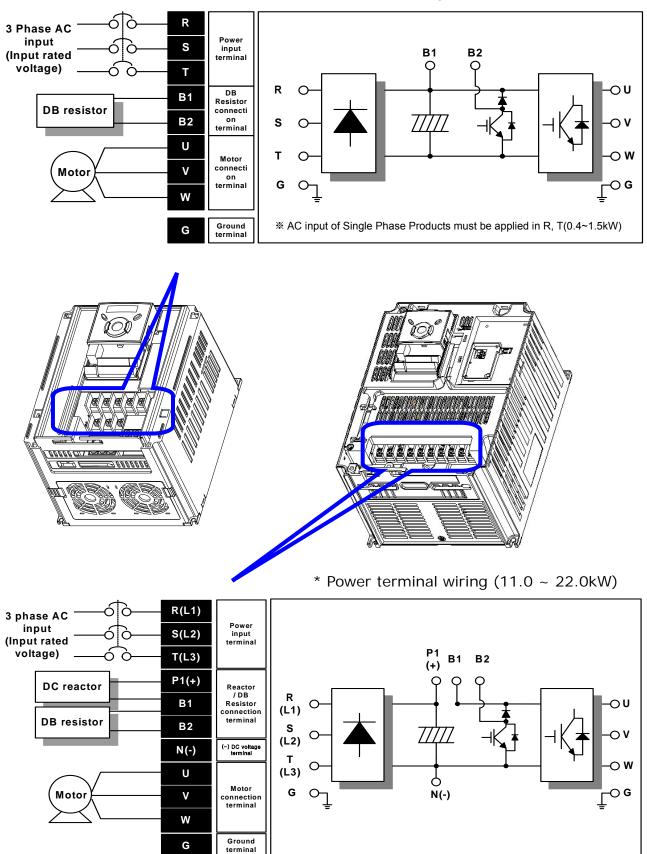

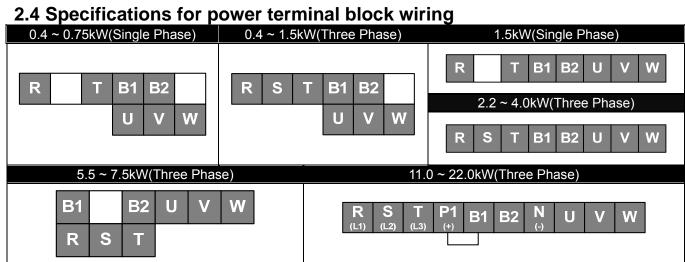

	R,S,	ΓSize	U,V,V	/ Size	Groui	nd Size	Terminal	Screw Torque
	mm²	AWG	mm²	AWG	mm²	AWG	Screw Size	(Kgf.cm)/lb-in
SV004iG5A-1	2	14	2	14	3.5	12	M3.5	10/8.7
SV008iG5A-1	2	14	2	14	3.5	12	M3.5	10/8.7
SV015iG5A-1	2	14	2	14	3.5	12	M4	15/13
SV004iG5A-2	2	14	2	14	3.5	12	M3.5	10/8.7
SV008iG5A-2	2	14	2	14	3.5	12	M3.5	10/8.7
SV015iG5A-2	2	14	2	14	3.5	12	M3.5	10/8.7
SV022iG5A-2	2	14	2	14	3.5	12	M4	15/13
SV037iG5A-2	3.5	12	3.5	12	3.5	12	M4	15/13
SV040iG5A-2	3.5	12	3.5	12	3.5	12	M4	15/13
SV055iG5A-2	5.5	10	5.5	10	5.5	10	M5	32/28
SV075iG5A-2	8	8	8	8	5.5	10	M5	32/28
SV110iG5A-2	14	6	14	6	14	6	M6	30.7/26.6
SV150iG5A-2	22	4	22	4	14	6	M6	30.7/26.6
SV185iG5A-2	30	2	30	2	22	4	M8	30.6/26.5
SV220iG5A-2	38	2	30	2	22	4	M8	30.6/26.5
SV004iG5A-4	2	14	2	14	2	14	M3.5	10/8.7
SV008iG5A-4	2	14	2	14	2	14	M3.5	10/8.7
SV015iG5A-4	2	14	2	14	2	14	M4	15/13
SV022iG5A-4	2	14	2	14	2	14	M4	15/13
SV037iG5A-4	2	14	2	14	2	14	M4	15/13
SV040iG5A-4	2	14	2	14	2	14	M4	15/13
SV055iG5A-4	3.5	12	2	14	3.5	12	M5	32/28
SV075iG5A-4	3.5	12	3.5	12	3.5	12	M5	32/28
SV110iG5A-4	5.5	10	5.5	10	8	8	M5	30.7/26.6
SV150iG5A-4	14	6	8	8	8	8	M5	30.7/26.6
SV185iG5A-4	14	6	8	8	14	6	M6	30.6/26.5
SV220iG5A-4	22	4	14	6	14	6	M6	30.6/26.5

^{*} Strip the sheaths of the wire insulation 7mm when a ring terminal is not used for power

connection. **←** 7.0mm

^{*}SV185iG5A-2 and SV220iG5A-2 must use Ring or Fork Terminal certainly approved by UL.

A CAUTION

- Apply the rated torque to terminal screws. Loosen screws can cause of short circuit and malfunction. Tightening the screw too much can damage the terminals and cause short circuit and malfunction.
- Use copper wires only with 600V, 75°C ratings for wiring.
- Make sure the input power is off before wiring.
- When power supply is switched off following operation, wait at least 10 minutes after LED keypad display is off before you start working on it.
- Applying input power supply to the output terminals U, V and W causes internal inverter damage.
- Use ring terminals with insulated caps when wiring the input power and motor wiring.
- Do not leave wire fragments inside the inverter. Wire fragments can cause faults, breakdowns and malfunctions.
- When more than one motor is connected to one inverter, total wire length should be less than 200m (656ft). Do not use a 3-wire cable for long distances. Due to increased leakage capacitance between wires, over-current protective feature may operate or equipment connected to the output side may malfunction. In case of long wire length, it should be required to lower carrier frequency or use Micro Surge Filter.

Length between Inverter and Motor	Up to 50m	Up to 100m	More than 100m
Allowable Carrier Frequency	Less than 15kHz	Less than 5kHz	Less than 2.5kHz

(For products of less than 3.7kW, the wire length should be less than 100m(328ft)).

- Never short B1 and B2 terminals. Shorting terminals may cause internal inverter damage.
- Do not install a power factor capacitor, surge suppressor or RFI filters in the output side of the inverter. Doing so may damage these components.
- To avoid circuit interruption or damaging connected equipment, do not install magnetic contactors on the output side of the inverter.

[WARNING]

Power supply must be connected to the R, S, and T Terminals.


Connecting it to the U, V, W terminals causes internal damages to the inverter. Arranging the phase sequence is not necessary.

Motor should be connected to the U, V, and W Terminals.

If the forward command (FX) is on, the motor should rotate counter clockwise when viewed from the load side of the motor. If the motor rotates in the reverse, switch the U and V terminals.

WARNING

- Use the Type 3 grounding method (Ground impedance: Below 100Ω) for 230V class inverters.
- Use the Special Type 3 grounding method (Ground impedance: Below 10Ω) for 460V class inverters.
- Use the dedicated ground terminal to ground the inverter. Do not use the screw in the case or chassis, etc for grounding.

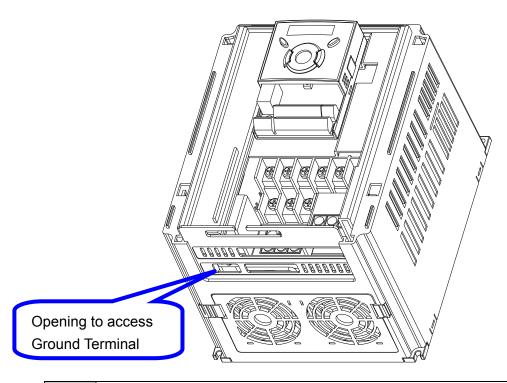

Note


Grounding procedure

- 1) Remove the front cover.
- 2) Connect the Grounding wire to the ground terminal through the opening for ground terminal as shown above. Enter the screw driver from vertical to the terminal and secure the screw tightly.

[Grounding work guidance]

Inverter		200V Class		400V Class			
capacity	Wire size Terminal screw S		Ground Specification	Wire size	Terminal screw	Ground Specification	
0.4~4.0 kW	3.5 mm ²	М3		2.0 mm ²	M3		
5.5~7.5 kW			Type 3	3.5 mm2	M4	Special Type 3	
11 ~ 15 kW	14.0 mm2	M5	туре 3	8.0 mm2	M5	3	
18.5~22 kW	22.0 mm2	M6		14.0 mm2	M5		

2.5 Control terminal specification

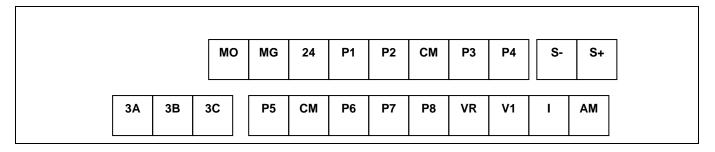

		Wire size[mm²]		Screw	Torque		
T/M	Terminal Description	single wire	Stranded	size	[Nm]	Specification	
P1~P8	Multi-function input T/M 1-8	1.0	1.5	M2.6	0.4		
СМ	Common Terminal	1.0	1.5	M2.6	0.4		
VR	Power supply for external potentiometer	1.0	1.5	M2.6	0.4	Output voltage: 12V Max output current: 100mA Potentiometer:1 ~ 5kohm	
V1	Input terminal for Voltage operation	1.0	1.5	M2.6	0.4	Max input voltage: -10V ~ +10V input	
I	Input terminal for Current operation	1.0	1.5	M2.6	0.4	0 ~ 20mA input Internal resistor: 250 ohm	
AM	Multi-function analog output terminal	1.0	1.5	M2.6	0.4	Max output voltage: 11[V] Max output current: 10mA	
МО	Multi-function terminal for open collector	1.0	1.5	M2.6	0.4	Below DC 26V,100mA	
MG	Ground terminal for external power supply	1.0	1.5	M2.6	0.4		
24	24V External Power Supply	1.0	1.5	M2.6	0.4	Max output current: 100mA	
3A	Multi-function relay output A contact	1.0	1.5	M2.6	0.4	Below AC 250V, 1A	
3B	Multi-function relay output B contact	1.0	1.5	M2.6	0.4	Below DC 30V, 1A	
3C	Common for Multi-function relays	1.0	1.5	M2.6	0.4		

Note 1) Tie the control wires more than 15cm away from the control terminals. Otherwise, it interferes front cover reinstallation.

Note 2) Use Copper wires rated 600V, 75 °C and higher.


Note 3) Use the recommended tightening torque when securing terminal screws.


Note

When you use external power supply (24V) for multi-function input terminal (P1~P8), terminals 2-1⁄4 be active above 12V level. Take caution not to drop the voltage below 12V.


2.6 PNP/NPN selection and connector for communication option

1. When using DC 24V inside inverter [NPN]

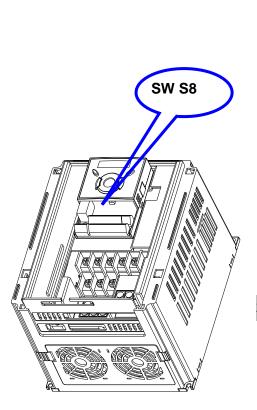

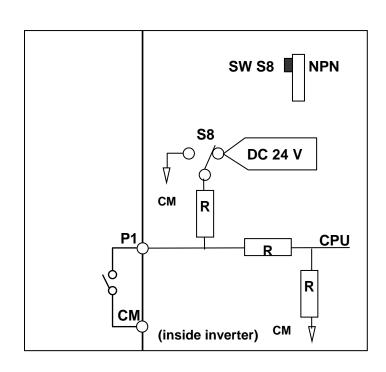



2. When using external DC 24V [PNP]

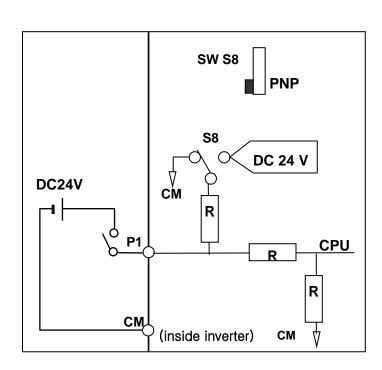

2.7 Terminating Resistor selection

1. When not using Terminating Resistor

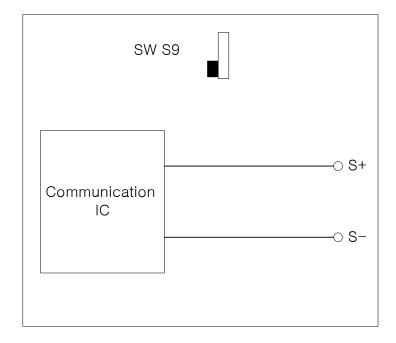


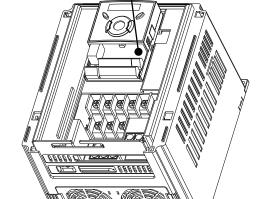

SW S9

X Terminating Resistor applies to iG5A made after the latter half of 2013.

2. When using Terminating Resistor

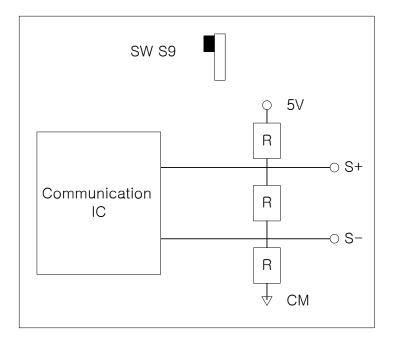

CHAPTER 3 - BASIC CONFIGURATION

3.1 Connection of peripheral devices to the inverter

The following devices are required to operate the inverter. Proper peripheral devices must be selected and correct connections made to ensure proper operation. An incorrectly applied or installed inverter can result in system malfunction or reduction in product life as well as component damage. You must read and understand this manual thoroughly before proceeding.

	AC Source Supply	Use the power supply within the permissible range of inverter input power rating (Refer to Page 13-1).
ARC COLUMN ART ARE	MCCB or Earth leakage circuit breaker (ELB)	Select circuit breakers with care. A large inrush current may flow in the inverter at power on.
	Magnetic Contactor	Install it if necessary. When installed, do not use it for the purpose of starting or stopping. Otherwise, it could lead to reduction in product life.
↓	AC and DC Reactors notice1	The AC reactors must be used when the power factor is to be improved or the inverter is installed near a large power supply system (more than 10 times of inverter capacity and wiring distance within 10m).
5000	Installation and wiring	To operate the inverter with high performance for a long time, install the inverter in a proper place in the correct direction and with proper clearances. Incorrect terminal wiring could result in the equipment damage.
	To motor	Do not connect a power factor capacitor, surge suppressor or radio noise filter to the output side of the inverter.
	Notice1) Terminal block han 11kw capacity	for DC reactor is composed in the more

3.2 Recommended MCCB

	Interface MOOD		
Inverter Capacity	MCCB	MC	ELCB
004iG5A-1	ABS33c/5, UTE100/15	MC-6a	EBS33c/5
008iG5A-1	ABS33c/10, UTE100/15	MC-9a, MC-9b	EBS33c/10
015iG5A-1	ABS33c/15, UTE100/15	MC-18a, MC-18b	EBS33c/15
004iG5A-2	ABS33c/5, UTE100/15	MC-6a	EBS33c/5
008iG5A-2	ABS33c/10, UTE100/15	MC-9a, MC-9b	EBS33c/10
015iG5A-2	ABS33c/15, UTE100/15	MC-18a, MC-18b	EBS33c/15
022iG5A-2	ABS33c/20, UTE100/20	MC-22b	EBS33c/20
037iG5A-2	ABS33c/30. UTE100/30	MC-32a	EBS33c/30
040iG5A-2	ABS330/30. 01E100/30	MC-32a	EBS33c/30
055iG5A-2	ABS53c/50, UTE100/50	MC-50a	EBS53c/50
075iG5A-2	ABS63c/60, UTE100/60	MC-65a	EBS63c/60
110iG5A-2	ABS103c/100, UTE100/90	MC-85a	EBS103c/100
150iG5A-2	ABS103c/125, UTS150/125	MC-130a	EBS103c/125
185iG5A-2	ABS203c/150, UTS150/150	MC-150a	EBS203c/150
220iG5A-2	ABS203c/175, UTS250/175	MC-185a	EBS203c/175
004iG5A-4	ABS33c/3, UTE100/15	MC-6a	EBS33c/5
008iG5A-4	ABS33c/5, UTE100/15	MC-6a	EBS33c/5
015iG5A-4	ABS33c/10, UTE100/15	MC-9a, MC-9b	EBS33c/10
022iG5A-4	ABS330/10, 01E100/15	MC-12a, MC-12b	EBS33c/10
037iG5A-4	ABS33c/15, UTE100/15	MC-18a, MC-18b	EBS33c/15
040iG5A-4	ABS33c/20, UTE100/20	MC-18a, MC-18b	EBS33c/20
055iG5A-4	ABS33c/30, UTE100/30	MC-22b	EBS33c/30
075iG5A-4	AB3330/30, 01E100/30	MC-32a	EBS33c/30
110iG5A-4	ABS53c/50, UTE100/50	MC-50a	EBS53c/50
150iG5A-4	ABS63c/60, UTE100/60	MC-65a	EBS63c/60
185iG5A-4	ABS103c/75, UTE100/80	MC-75a	EBS103c/75
220iG5A-4	ABS103c/100, UTE100/90	MC-85a	EBS103c/100

Note

^{1.} The capacity of the MCCB should be 1.5 to 2 times the rated output current of the drive.

^{2.} Use an MCCB keep the drive from faulting out instead of using overheat protection (150% for one minute at the rated output current.)

^{3.} In case magnetic contactor is used on single-phase product, wire R and T phases.

3.3 Recommendable Fuse, Reactors

o Recommendable 1 dae, Reactora						
Inverter Capacity	AC Input fuse	[External Fuse]	AC Reactor	DC Reactor		
inverter Capacity	Current	Voltage	AC Neactor	DC Reactor		
004iG5A-1	10 A	600 V	4.20 mH, 3.5A	-		
008iG5A-1	10 A	600 V	2.13 mH, 5.7A	-		
015iG5A-1	15 A	600 V	1.20 mH, 10A			
004iG5A-2	10 A	600 V	4.20 mH, 3.5A			
008iG5A-2	10 A	600 V	2.13 mH, 5.7A			
015iG5A-2	15 A	600 V	1.20 mH, 10A	-		
022iG5A-2	25 A	600 V	0.88 mH, 14A	-		
037iG5A-2	30 A	600 V	0.56 mH, 20A	-		
040iG5A-2	30 A	600 V	0.56 mH, 20A	-		
055iG5A-2	30 A	600 V	0.39 mH, 30A	-		
075iG5A-2	50 A	600 V	0.28 mH, 40A	-		
110iG5A-2	70 A	600 V	0.20 mH, 59 A	0.74 mH, 56 A		
150iG5A-2	100 A	600 V 0.15 mH, 79		0.57 mH, 71 A		
185iG5A-2	100 A	600 V 0.12 mH, 96 A		0.49 mH, 91 A		
220iG5A-2	125 A	600 V	0.10 mH, 112 A	0.42mH, 107 A		
004iG5A-4	5 A	600 V	18.0 mH, 1.3A	-		
008iG5A-4	10 A	600 V	8.63 mH, 2.8A	-		
015iG5A-4	10 A	600 V	4.81 mH, 4.8A	-		
022iG5A-4	10 A	600 V	3.23 mH, 7.5A	-		
037iG5A-4	20 A	600 V	2.34 mH, 10A	-		
040iG5A-4	20 A	600 V	2.34 mH, 10A	-		
055iG5A-4	20 A	600 V	1.22 mH, 15A	-		
075iG5A-4	30 A	600 V	1.14 mH, 20A	-		
110iG5A-4	35 A	600 V	0.81 mH, 30 A	2.76 mH, 29 A		
150iG5A-4	45 A	600 V	0.61 mH, 38 A	2.18 mH, 36 A		
185iG5A-4	60 A	600 V	0.45 mH, 50 A	1.79 mH, 48 A		
220iG5A-4	70 A	600 V	0.39 mH, 58 A	1.54 mH, 55 A		

Short Circuit Rating


"Suitable For Use ON A Circuit Capable Of Delivering Not More Than 65KA Symmetrical Amperes. 240V drives or 480V drives Volts Maximum,"

Short Circuit FUSE/BREAKER Marking

Use Class H or RK5 UL Listed Input Fuse and UL Listed Breaker Only. See the table above For the Voltage and Current rating of the fuse and the breaker

CHAPTER 4 - PROGRAMMING KEYPAD & BASIC OPERATION

4.1 Keypad features

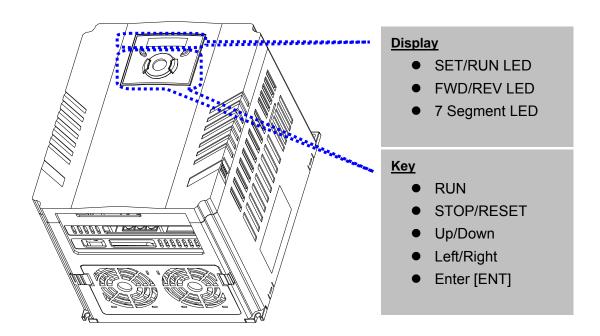

Display		
FWD	Lit during forward run	Blinks when a fault occurs
REV	Lit during reverse run	
RUN	Lit during Operation	
SET	Lit during parameter setting	
7 segment	Displays operation status and para	meter information


Keys							
RUN	١	Run command					
STOP/RESET		STOP: Stop command during operation, RESET: Reset command when fault occurs.					
▲ UP Used t		Used to scroll through codes or increase parameter value					
▼	Down	Used to scroll through codes or decrease parameter value					
■ Left		Used to jump to other parameter groups or move a cursor to the left to change the parameter value					
Right		Used to jump to other parameter groups or move cursor to the right to change the parameter value					
•	ENT	Used to set the parameter value or save the changed parameter value					

4.2 Alpha-numeric view on the LED keypad

LI LI	0	R	Α	ħ	K	L	U
;	1	5	В	1	L	L	V
ت	2	-	С	,,	М	-	W
3	3	ď	D	n	N	4	X
4	4	E	Е	Ü	0	4	Υ
5	5	۶	F	ŗ	Р	-	Z
5	6	<u> </u>	G	7	Q		
7	7	H	Н	,-	R		
8	8	;	ı	5	S		
9	9		J	7	Т		


4.3 Moving to other groups

• There are 4 different parameter groups in SV- iG5A series as shown below.

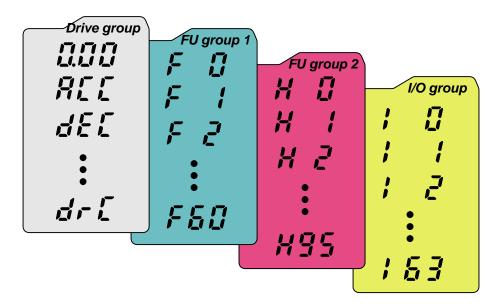

Drive group	Basic parameters necessary for the inverter to run. Parameters such as Target frequency, Accel/Decel time settable.
Function group 1	Basic function parameters to adjust output frequency and
	voltage.
Function group 2	Advanced function parameters to set parameters for such as
	PID Operation and second motor operation.
I/O (Input/Output)	Parameters necessary to make up a sequence using Multi-
group	function input/output terminal.

 Moving to other parameter groups is only available in the first code of each group as the figure shown below.

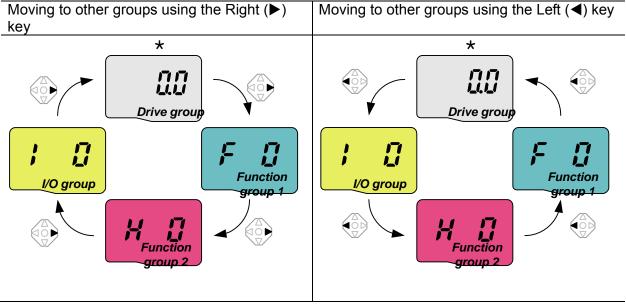


^{*} Target frequency can be set at **0.0** (the 1st code of drive group). Even though the preset value is 0.0, it is user-settable. The changed frequency will be displayed after it is changed.

How to move to other groups at the 1st code of each group

1		 The 1st code in Drive group "0.00" will be displayed when AC input power is applied. Press the right arrow (▶) key once to go to Function group 1.
2	FB	 The 1st code in Function group 1 "F 0" will be displayed. Press the right arrow (►) key once to go to Function group 2.
3	H D	 The 1st code in Function group 2 "H 0" will be displayed. Press the right arrow (►) key once to go to I/O group.
4		The 1st code in I/O group "I 0" will be displayed Press the right arrow (▶) key once again to return to Drive group.
5		Return to the 1st code in Drive group "0.00".

How to move to other groups from any codes other than the 1st code

♣ If the left arrow key (◄) is used, the above will be executed in the reverse order.

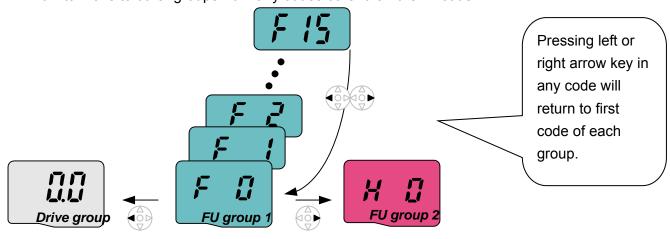

To move from the F 15 to function group 2


1	F 15	In F 15, press the Left (◀) or Right arrow (▶) key. Pressing the key goes to the first code of the group.			
2	F	 The 1st code in function group 1 "F 0" is displayed. Press the right arrow (►) key. 			
3	H I	The 1 st code in function group 2 "H 0" will be displayed.			

4.4 How to change the codes in a group

Code change in Drive group

	1		In the 1 st code in Drive group "0.00", press the Up (▲) key once.	
	2	REE.	 The 2nd code in Drive group "ACC" is displayed. Press the Up (▲) key once. 	
	3	der	 The 3rd code "dEC" in Drive group is displayed. Keep pressing the Up (▲) key until the last code appears. 	
ALL.	4	dri	 The last code in Drive group "drC" is displayed. Press the Up (▲) key again.	
Drive group	5		Return to the first code of Drive group.	
	♣ Use Down (▼) key for the opposite order.			


Code jump

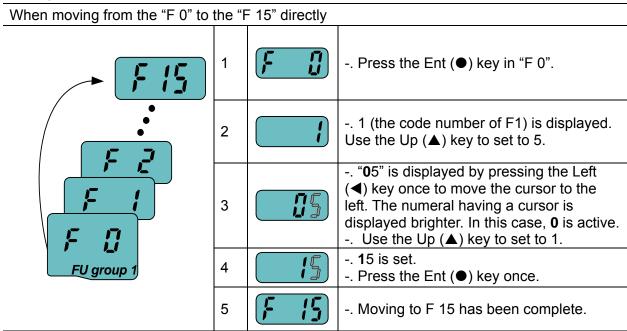

♣ Function group 2 and I/O group are settable with the same setting.

Navigating codes in a group

When moving from F 1 to F 15 in Function group 1

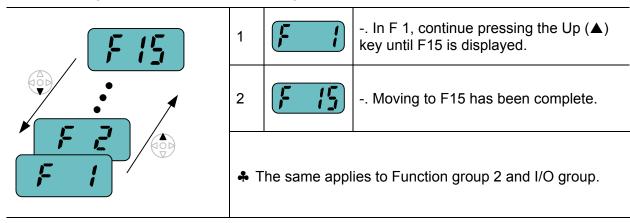

♣ Note: Some codes will be skipped in the middle of increment (▲)/decrement (▼) for code change. That is because it is programmed that some codes are intentionally left blank for future use or the codes user does not use are invisible.


Refer to the Ch.5 for more specific contents

For example, when F24 [High/low frequency limit select] is set to "O (No)", F25 [High frequency limit] and F26 [Low frequency limit] are not displayed during code change. But When F24 is set to "1(Yes)", F25 and F26 will appear on the display.

4.5 Parameter setting

Changing parameter values in Drive Group

When changing ACC time from 5.0 sec to 16.0 sec

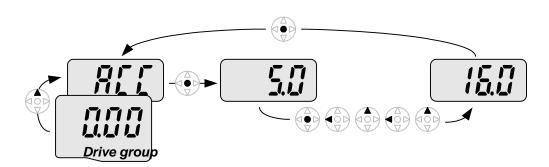


1		In the first code "0.00", press the Up (▲) key once to go to the second code.
2		 ACC [Accel time] is displayed. Press the Ent key (●) once.
3		 Preset value is 5.0, and the cursor is in the digit 0. Press the Left (◄) key once to move the cursor to the left.
4		The digit 5 in 5 .0 is active. Then press the Up (▲) key once.
5	5.4	 The value is increased to 6.0 Press the Left (◄) key to move the cursor to the left.
6		 0.60 is displayed. The first 0 in 0.60 is active. Press the Up (▲) key once.
7		 16.0 is set. Press the Ent (●) key once. 16.0 is blinking. Press the Ent (●) key once again to return to the parameter name.
8		ACC is displayed. Accel time is changed from 5.0 to 16.0 sec.

♣ In step 7, pressing the Left (◄) or Right (▶) key while 16.0 is blinking will disable the setting.

Note 1) Pressing the Left (◄)/ Right (▶) /Up (▲) /Down (▼) key while cursor is blinking will cancel the parameter value change. Pressing the Enter key (●) in this status will enter the value into memory.

Frequency setting

 When changing run frequency to 30.05 Hz in Drive group




1		In "0.00", press the Ent (●) key once.
2		 The second decimal 0 becomes active. Press the UP (▲) key until 5 is displayed.
3		Press the Left (◀) key once.
4		 The first decimal 0 becomes active. Press the Left (◄) key once.
5		Press the Left (◀) key once.
6		Set 3 using UP (▲) key.
7		Press the Ent (●) key 30.05 is blinking Press the Ent (●) key.
8	3005	30.05 is entered into memory.

- ♣ SV-iG5A display can be extended to 5 digits using left (◄)/right (▶) keys.
- ♣ Parameter setting is disabled when pressing other than Enter Key in step 7.

Changing parameter value in Input/Output group

When changing the parameter value of F28 from 2 to 5

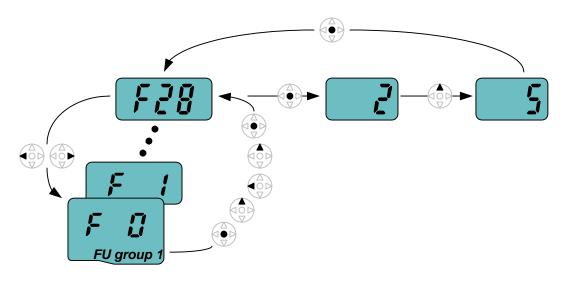


1	F	In F0, press the Ent (●) key once.
2		 Check the present code number. Increase the value to 8 by pressing the Up (▲) key.
3		When 8 is set, press the Left (◀) key once.
4		 0 in 08 is active. Increase the value to 2 by pressing the Up (▲) key.
5		2 8 is displayed Press the Ent (●) key once.
6	FJO	 The parameter number F28 is displayed. Press the Ent (●) key once to check the set value.
7		 The preset value 2 is displayed. Increase the value to 5 using UP key (▲).
8	5	Press the Ent (●) key.
9	F 28	 Code number will appear after 5 is blinking. Parameter change is complete. Press either Left (◄) or Right (►) keys.
10	F	Moving to first code of Function group 1 is complete.

♣ The above setting is also applied to change parameter values in function group 2 and I/O group.

4.6 Monitoring of operation status

Output current display

Monitoring output current in Drive group

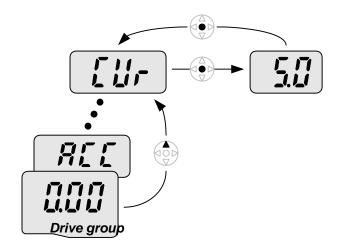


1	In [0.0], continue pressing the Up (▲) or Down (▼) key until [CUr] is displayed.
2	 Monitoring output current is provided in this parameter. Press the Enter (●) key once to check the current.
3	 Present output current is 5 A. Press the Enter (●) key once to return to the parameter name.
4	Return to the output current monitoring code.

♣ Other parameters in Drive group such as dCL (Inverter DC link voltage) or vOL (Inverter output voltage) can be monitored via the same method.


Fault display

How to monitor fault condition in Drive group

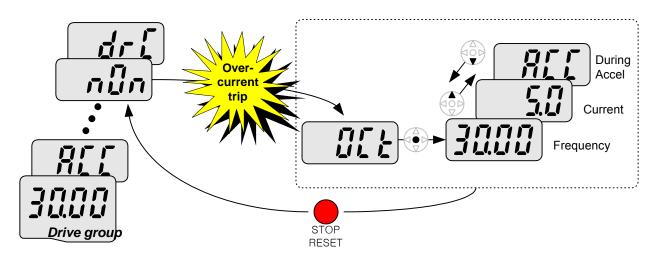

1		This message appears when an Overcurrent fault occurs Press the Enter (●) key or UP/Down key once.
2	3000	 The run frequency at the time of fault (30.0) is displayed. Press the Up (▲) key once.
3	5.0	 The output current at the time of fault is displayed. Press the Up (▲) key once.
4	N. L.	 Operating status is displayed. A fault occurred during acceleration. Press the STOP/RST key once.
5	unu	A fault condition is cleared and "nOn" is displayed.


When more than one fault occurs at the same time

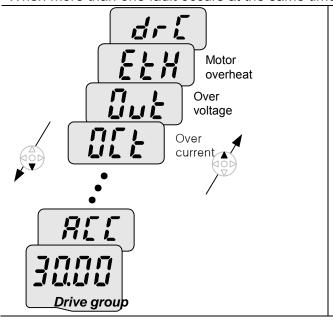

-. Maximum three faults information is displayed as shown left.

Parameter initialize

How to initialize parameters of all four groups in H93

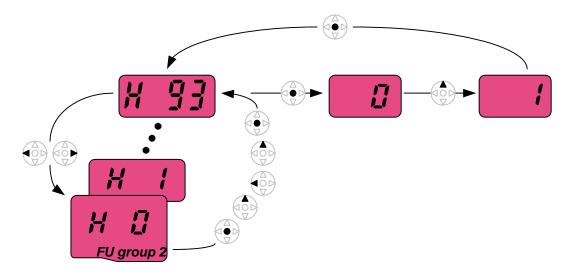

1	H Ü	In H0, press the Enter (●) key once.
2		 Code number of H0 is displayed. Increase the value to 3 by pressing the Up (▲) key.
3		In 3, press the Left (◀) key once to move the cursor to the left.
4		 03 is displayed. 0 in 03 is active. Increase the value to 9 by pressing the Up (▲) key.
5	3 3	9 3 is set Press the Enter (●) key once.
6	H 33	 The parameter number is displayed. Press the Enter (●) key once.
7		 Present setting is 0. Press the Up (▲) key once to set to 1 to activate parameter initialize.
8		Press the Enter (●) key once.
9	H 33	 Return to the parameter number after blinking. Parameter initialize has been complete. Press the either Left (◄) or Right (▶) key.
10	H I	Return to H0.

4.7 Frequency Setting and Basic Operation

Caution: The following instructions are given based on the fact that all parameters are set to factory defaults. Results could be different if parameter values are changed. In this case, initialize parameter values (see page 10-21) back to factory defaults and follow the instructions below.

	Frequency Setting via keypad & operating via terminals								
1	Apply AC input power to the inverter.								
2		When 0.00 appears, press the	e Ent (●) key once.						
3		The second digit in 0.0 0 is lit a Press the Left (◀) key three ti							
4		0 0.00 is displayed and the firs Press the Up (▲) key.	et 0 is lit.						
5		. 10.00 is set. Press the Ent (●) key once. . 10.00 is blinking. Press the Ent (●) key once.							
6		Run frequency is set to 10.00 Turn on the switch between P							
7		RUN lamp begins to blink with FWD (Forward Run) lit and accelerating frequency is displayed on the LED When target run frequency 10Hz is reached, 10.00 is displayed Turn off the switch between P1 (FX) and CM terminals.							
8	° المثانة °	RUN lamp begins to blink and decelerating frequency is displayed on the LED When run frequency is reached to 0Hz, Run and FWD lamp turn off and 10.00 is displayed.							
	Is displayed. 3P O R AC O S Input O T Freq. P1(FX)-CM ON OFF								
		Wiring	Operating pattern						

	Frequency Setting via potentiometer & operating via terminals							
1	Apply AC input power to the inverter.							
2		When 0.00 appears Press the	When 0.00 appears Press the Up (▲) key four times.					
3	Fra	Frq is displayed. Frequency se Press the Ent (●) key once.	tting mode is selectable.					
4		Present setting method is set t Press the Up (▲) key three tim	o 0 (frequency setting via keypad). nes.					
5	3	After 3 (Frequency setting via p	potentiometer) is set, press the Ent (●) key once.					
6	Fr 9	 Frq is redisplayed after 3 stops blinking. Press the Down (▼) key four times. Turn the potentiometer to set to 10.00 Hz in either Max or Min direction. 						
7	Turn on the switch between P1 (FX) and CM (See Wiring below) RUN lamp begins to blink with FWD lamp lit and the accelerating frequency is displayed on the LED When run frequency 10Hz is reached, the value is displayed as shown left Turn off the switch between P1 (FX) and CM terminals.							
8			decelerating frequency is displayed on the LED. d to 0Hz, Run and FWD lamp turn off and 10.00					
	3P AC input	R V Motor T T P1(FX) G CM VR V1 CM	Freq. P1(FX)-CM ON OFF					
		Wiring	Operating pattern					

• Frequency setting via potentiometer & operating via the Run key

1		Apply AC input power to the inverter.					
2		. When 0.00 is displayed, press the Up (▲) key three times.					
3	d ru	"drv" is displayed. Operating method Press the Ent (●) key.	l is selectable.				
4		Check the present operating methodDown (▼) key once.	I ("1": Run via control terminal).				
5		After setting "0", press the Ent (●) ke again.	ey. When 0 is blinking, press the Ent				
6	D 'r u	"drv" is displayed after "0" is blinking on the keypad Press the Up (▲) key	. Operation method is set via the Run key y once.				
7	Frq	 Different frequency setting method is Press the Ent (●) key. 	s selectable.				
8		Check the present frequency setting method (" 0 " is run via keypad) Press the Up (▲) key three times.					
9		After checking "3" (frequency setting via potentiometer), press the Ent (●) key.					
10	Frq	 "Frq" is displayed after "3" is blinking. Frequency setting is set via the potentiometer on the keypad. Press the Down (▼) key four times. Turn the potentiometer to set to 10.0 Hz in either Max or Min direction. 					
11	·	 Press the Run key on the keypad. RUN lamp begins to blink with FWD displayed on the LED. When run frequency 10Hz is reached. Press the STOP/RST key. 					
12	° 1000°	RUN lamp begins to blink and deceled LED When run frequency is reached to 04 is displayed.	erating frequency is displayed on the Hz, Run and FWD lamp turn off and 10.00				
Freq. Run key STOP/RST key							
		Wiring	Operating pattern				

Notes:

CHAPTER 5 - FUNCTION LIST

Drive Group

•	Dilve Oil	oup																
LED display	Address for communi cation	Parameter name	Min/ Max range		Description	Factory defaults	Adj. during run	Page										
0.00	A100	[Frequency command]	0 ~ 400 [Hz]	This parameter inverter is comr During Stop: Fr During Run: Ou During Multi-ste Multi-step frequency].	0.00	0	7-1											
ACC	A101	[Accel time]	0 ~ 6000		During Multi-Accel/Decel operation, this parameter serves as Accel/Decel time 0.			7-12										
dEC	A102	[Decel time]	[Sec]					7-12										
drv	A103	[Drive mode]	0 ~ 4	0 Run/Stop via	1	Х	7-8											
				1 Terminal operation	FX: Motor forward run RX: Motor reverse run FX: Run/Stop enable RX: Reverse rotation select			7-8										
				3 RS485 communication				7-9										
				4 Set to Field	-													
Frq	A104	[Frequency	0~9	0 Digital	Keypad setting 1	0	X	7-1										
119		setting method]		1	Keypad setting 2	-		7-1										
				2	V1 1: -10 ~ +10 [V]			7-2										
					3	V1 2: 0 ~ +10 [V]	-		7-3									
				4 Analog 5	Terminal I: 0 ~ 20 [mA]			7-4										
					Terminal V1 setting 1 + Terminal I			7-5										
				6	Terminal V1 setting 2+ Terminal I			7-6										
				7 RS485 communication				7-5										
														8 Digital Volur	ne			7-6
				9 Set to Field			-											
St1	A105	[Multi-Step frequency 1]	0 ~ 400 [Hz]	Sets Multi-Step operation.	frequency 1 during Multi-step	10.00	0	7-7										
St2	A106	[Multi-Step frequency 2]		Sets Multi-Step operation.	Sets Multi-Step frequency 2 during Multi-step operation.			7-7										
St3	A107	[Multi-Step frequency 3]		Sets Multi-Step operation.	Sets Multi-Step frequency 3 during Multi-step operation.			7-7										
CUr	A108	[Output current]		Displays the ou	tput current to the motor.	-	-	9-1										
rPM	A109	[Motor RPM]		Displays the nu	mber of Motor RPM.	-	-	9-1										

^{1 :} This function can be available with iG5A Communication Option Module.

Drive Group

LED display	Address for communi cation	Parameter name	Min/ Max range			Description	Factory defaults	Adj. during run	Page
dCL	A10A	[Inverter DC link voltage]		Displays DC link voltage inside the inverter.			-	-	9-1
vOL	A10B	[User display		This parameter displays the item selected at H73- [Monitoring item select].			vOL	-	9-2
		select]		vOL Output voltage			1		
				PC	POr Output power				
				tO	r Torque				
nOn	A10C	[Fault Display]				nes of faults, frequency and sat the time of the fault	-	-	9-4
drC	A10D	[Direction of motor	F, r			on of motor rotation when drv -	F	0	7-8
		rotation		F	[Drive mode] is set to either 0 or 1. Forward		-		
		select]		r	Reverse	 9	1		
drv2	A10E	[Drive mode 2]	0 ~ 4	0	Run/Stop via	Run/Stop key on the keypad	1	Х	8-24
				1	Terminal	FX: Motor forward run			
				_	operation	RX: Motor reverse run	-		
				2		FX: Run/Stop enable RX: Reverse rotation select			
				3	RS-485 com		-		
				4	Set to Filed I	Bus Communication 3)			
Frq2 ¹⁾	A10F	[Frequency	0~9	0	Digital	Keypad setting 1	0	X	8-24
		setting		1		Keypad setting 2			
		method 2]		2	Analog	V1 1: -10 ~ +10 [V]	1		
				3		V1 2: 0 ~ +10 [V]			
				4		Terminal I: 0 ~ 20 [mA]			
				5		Terminal V1 setting 1 + Terminal I			
				6		Terminal V1 setting 2+ Terminal I			
				7	RS485 comr	munication	1		
				8	Digital Volun		-		
				9	Set to Filed I	Bus Communication 3)			
rEF ²⁾	A110	PID control standard value setting	0~400 [Hz] or 0~100 [%]		If H58 is 0, it If H58 is 1, it In [Hz] unit, y more than (F	t is expressed as a [Hz] unit. t is expressed as a [%] unit. you can't set Max. frequency	0.00	0	8-11
Fbk ²⁾	A111	PID control feedback amount			control. If H58 is 0, it	a feedback amount in PID t is expressed as a [Hz] unit. t is expressed as a [%] unit.	-	-	8-11
-									

^{1.} Only displayed when one of the Multi-function input terminals 1-8 [I17~I24] is set to "22".

^{2:} It is indicated when H49(PID control selection) is 1.

^{3:} This function can be available with iG5A Communication Option Module.

LED display	Address for communi cation	Paramet er name	Min/Max range		Description		Adj. during run	Page
F 0	A200	[Jump code]	0 ~ 71	Sets	Sets the parameter code number to jump.		0	4-5
F 1		[Forwar d/	0 ~ 2	0	Fwd and rev run enable	0	Х	7-10
	A201	Reverse		1	Forward run disable			
		run disable]		2	Reverse run disable			
F 2	A202	[Accel pattern]	0 ~ 1	0	Linear	0	Х	7-15
F 3	A203	[Decel pattern]		1	S-curve			
F 4	A204	[Stop	0~3	0	Decelerate to stop	0	Х	7-20
		mode select]		1				
				2	Free run to stop			
				3	Power Braking stop	5.00		8-26
F 8 ¹⁾	A208	[DC Brake start frequen cy]	0.1 ~ 60 [Hz]	frequ It car	This parameter sets DC brake start frequency. It cannot be set below F23 - [Start frequency].		X	8-1
F 9	A209	[DC Brake wait time]	0 ~ 60 [sec]	the in	When DC brake frequency is reached, the inverter holds the output for the setting time before starting DC brake.		X	
F10	A20A	[DC Brake voltage]	0 ~ 200 [%]	volta	This parameter sets the amount of DC voltage applied to a motor. It is set in percent of H33 – [Motor rated current].		X	
F11	A20B	[DC Brake time]	0 ~ 60 [sec]	apply	This parameter sets the time taken to apply DC current to a motor while motor is at a stop.		X	
F12	A20C	[DC Brake start voltage]	0 ~ 200 [%]	This volta	This parameter sets the amount of DC voltage before a motor starts to run. It is set in percent of H33 – [Motor rated current].		X	8-2
F13	A20D	[DC Brake start time]	0 ~ 60 [sec]	Brak	DC voltage is applied to the motor for DC Brake start time before motor accelerates.		X	
F14	A20E	[Time for magneti zing a motor]	0 ~ 60 [sec]	moto	This parameter applies the current to a motor for the set time before motor accelerates during Sensorless vector control.		X	8-15
F20	A214	[Jog frequen cy]	0 ~ 400 [Hz]	Jog of	parameter sets the frequency for operation. Inot be set above F21 – [Max lency].	10.00	0	8-3

^{1.} Only displayed when F 4 is set to 1 (DC brake to stop).

LED display	Address for communi cation	Paramete r name	Min/Max range	Description	Factory defaults	Adj. during run	Page
F21 ¹⁾	A215	[Max frequency]	40 ~ 400 [Hz]	This parameter sets the highest frequency the inverter can output. It is frequency reference for Accel/Decel (See H70)	60.00	X	7-21
					[
				Any frequency cannot be set above Max frequency except Base frequency			
F22	A216	[Base frequency]	30 ~ 400 [Hz]	The inverter outputs its rated voltage to the motor at this frequency (see motor nameplate).	60.00	X	7-17
F23	A217	[Start frequency]	0.1 ~ 10 [Hz]	The inverter starts to output its voltage at this frequency. It is the frequency low limit.	0.50	X	7-21
F24	A218	[Frequen cy high/low limit select]	0 ~ 1	This parameter sets high and low limit of run frequency.	0	X	7-21
F25 2)	A219	[Frequen cy high limit]	0 ~ 400 [Hz]	This parameter sets high limit of the run frequency. It cannot be set above F21 – [Max frequency].	60.00	X	
F26	A21A	[Frequen cy low limit]	0 ~ 400 [Hz]	This parameter sets low limit of the run frequency. It cannot be set above F25 - [Frequency high limit] and below F23 – [Start frequency].	0.50	X	
F27	A21B	[Torque Boost select]	0 ~ 1	Manual torque boost Auto torque boost	0	X	7-19
F28	A21C	[Torque boost in forward direction]	0 ~ 15 [%]	This parameter sets the amount of torque boost applied to a motor during forward run. It is set in percent of Max output voltage.	2	X	7-19
F29	A21D	[Torque boost in reverse direction]		This parameter sets the amount of torque boost applied to a motor during reverse run. It is set as a percent of Max output voltage	2	X	7-19

^{1:} If H40 is set to 3 (Sensorless vector), Max. frequency is settable up to 300Hz.

^{2:} Only displayed when F24 (Frequency high/low limit select) is set to 1.

		J F						
LED display	Address for commu nication	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	Page
F30	A21E	[V/F	0 ~ 2	0	{Linear}	0	X	7-17
		pattern]		1	{Square}			7-17
				2	{User V/F}			7-18
F31 ¹⁾	A21F	[User V/F frequency 1]	0 ~ 400 [Hz]	2(U:	used only when V/F pattern is set to ser V/F) annot be set above F21 – [Max	15.00	X	7-18
F32	A220	[User V/F voltage 1]	0 ~ 100 [%]	The	uency]. value of voltage is set in percent of — [Motor rated voltage].	25	X	
F33	A221	[User V/F frequency 2]	0 ~ 400 [Hz]	The para	e values of the lower-numbered ameters cannot be set above those of the numbered.	30.00	X	
F34	A222	[User V/F voltage 2]	0 ~ 100 [%]	5.		50	Х	
F35	A223	[User V/F frequency 3]	0 ~ 400 [Hz]			45.00	X	
F36	A224	[User V/F voltage 3]	0 ~ 100 [%]			75	Х	
F37	A225	[User V/F frequency 4]	0 ~ 400 [Hz]			60.00	X	
F38	A226	[User V/F voltage 4]	0 ~ 100 [%]			100	Х	
F39	A227	[Output voltage adjustment]	40 ~ 110 [%]	outp	s parameter adjusts the amount of out voltage. set value is the percentage of input age.	100	X	7-18
F40	A228	[Energy- saving level]	0 ~ 30 [%]		s parameter decreases output voltage ording to load status.	0	0	8-17
F50	A232	[Electronic thermal select]	0 ~ 1		s parameter is activated when the or is overheated (time-inverse).	0	0	10-1

^{1:} Set F30 to 2(User V/F) to display this parameter.

LED display	Address for commu nication	Parameter name	Min/Max range		Factory defaults	Adj. during run	Page
F51	A233	[Electronic thermal level for 1 minute]	50 ~ 200 [%]	This parameter sets max current capable of flowing to the motor continuously for 1 minute. The set value is the percentage of H33 – [Motor rated current]. It cannot be set below F52 –[Electronic thermal level for continuous].	150	0	10-1
F52	A234	[Electronic thermal level for continuous]	50 ~ 150 [%]	This parameter sets the amount of current to keep the motor running continuously. It cannot be set higher than F51 – [Electronic thermal level for 1 minute].	100	0	
F53	A235	[Motor cooling method]	0 ~ 1	directly connected to the shaft A motor using a separate motor to	0	0	
F54	A236	[Overload warning level]	30 ~ 150 [%]	power a cooling fan. This parameter sets the amount of current to issue an alarm signal at a relay or multifunction output terminal (see I54, I55). The set value is the percentage of H33- [Motor rated current].	150	0	10-2
F55	A237	[Overload warning time]	0 ~ 30 [Sec]	This parameter issues an alarm signal when the current greater than F54- [Overload warning level] flows to the motor for F55- [Overload warning time].	10	0	
F56	A238	[Overload trip select]	0 ~ 1	This parameter turns off the inverter output when motor is overloaded.	1	0	10-2
F57	A239	[Overload trip level]	30 ~ 200 [%]	This parameter sets the amount of overload current. The value is the percentage of H33- [Motor rated current].	180	0	
F58	A23A	[Overload trip time]	0 ~ 60 [Sec]	This parameter turns off the inverter output when the F57- [Overload trip level] of current flows to the motor for F58- [Overload trip time].	60	0	

^{1:} Set F50 to 1 to display this parameter.

LED display	Address for commun ication	Paramete r name	Min/Max range			Description		Factory defaults	Adj. during run	Page
F59	A23B	[Stall preventio n select]	0~7	acce spee	leration, ded	stops accelera celerating duri tops decelerat	ng constant	0	X	10-3
					During Decel	During constant run	During Accel			
					Bit 2	Bit 1	Bit 0			
				0	-	-	-			
				1	-	-	✓			
				2	-	✓	-			
				3	-	✓	✓			
				4	✓	-	-			
				5	✓	-	✓			
				6	✓	✓	-			
				7	✓	✓	✓			
F61	A23C A23D	[Stall prevention n level] [When Stall	30 ~ 200 [%]	active Constitution The Important In State	ate stall pre stant or Dec set value is or rated curr all preventic	vention function el run. the percentag rent].	deceleration, if	0	X	8-26
		preventio n during decelerati on, voltage limit select								
F63	A23F	[Save up/down frequency select]	0 ~ 1	spec opera Whe	ified frequer ation.	ncy during up/	er to save the down wn frequency is	0	X	8-4
F64 2)	A240	[Save up/down frequency]		F63,	this parame	n frequency' is eter saves the er stops or de	frequency	0.00	X	8-4
F65	A241	[Up-down mode select]	0~2	thing		p-down mode		0	Х	8-5
		30,000		0		ses goal frequ rd of Max. fred ncy				
				1	freque		to edge input			
				2	Availat	ole to combine	e i and ∠			

^{1:} It is indicated when setting bit 2 of F59 as 1

^{2:} Set F63 to 1 to display this parameter.

LED display	Address for commun ication	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	Page
F66	A242	[Up-down step frequency]	0~400 [Hz]		of choosing F65 as a 1 or 2, it means or decrease of frequency according wn input	0.00	X	8-5
F70	A246	[Draw run mode	0~3	0	Inverter doesn't run as a draw mode	0	Х	8-28
		select]		1	V1(0~10V) input draw run	1		
				2	I(0~20mA) input draw run			
				3	V1(-10~10V) input draw run			
F71	A247	[Draw rate]	0~100 [%]	Sets rate	e of draw	0.00	0	8-28

LED display	Address for commu nication	Parameter name	Min/Max range	Description	Factory defaults	Adj. during run	Page
H 0	A300	[Jump code]	0~95	Sets the code number to jump.	1	0	4-5
H 1	A301	[Fault history 1]	-	Stores information on the types of faults, the frequency, the current and the	nOn	-	9-4
H 2	A302	[Fault history 2]	-	Accel/Decel condition at the time of fault. The latest fault is automatically stored in the H 1- [Fault history 1].	nOn	-	
H 3	A303	[Fault history 3]	-	the first is a contribution of the first of	nOn	-	
H 4	A304	[Fault history 4]	-		nOn	-	
H 5	A305	[Fault history 5]	-		nOn	-	
H 6	A306	[Reset fault history]	0~1	Clears the fault history saved in H 1-5.	0	0	
Н7	A307	[Dwell frequency]	0.1~400 [Hz]	When run frequency is issued, motor starts to accelerate after dwell frequency is applied to the motor during H8- [Dwell time]. [Dwell frequency] can be set within the range of F21- [Max frequency] and F23- [Start frequency].	5.00	X	8-7
H 8	A308	[Dwell time]	0~10 [sec]	Sets the time for dwell operation.	0.0	X	
H10	A30A	[Skip frequency select]	0 ~ 1	Sets the frequency range to skip to prevent undesirable resonance and vibration on the structure of the machine.	0	X	7-22
H11 ¹⁾	A30B	[Skip frequency low limit 1]	0.1~400 [Hz]	Run frequency cannot be set within the range of H11 thru H16. The frequency values of the low numbered parameters	10.00	Х	
H12	A30C	[Skip frequency high limit 1]		cannot be set above those of the high numbered ones. Settable within the range of F21 and F23.	15.00	X	
H13	A30D	[Skip frequency low limit 2]			20.00	X	
H14	A30E	[Skip frequency high limit 2]			25.00	X	
H15	A30F	[Skip frequency low limit 3]			30.00	X	
H16	A310	[Skip frequency high limit 3]			35.00	X	

^{1:} only displayed when H10 is set to 1. # H17, H18 are used when F2, F3 are set to 1 (S-curve).

LED display	Address for communication	Parameter name	Min/Max range			Descrip	otion		Factory defaults	Adj. during run	Page
H17	A311	[S-Curve accel/decel start side]	1~100 [%]	cu	et the speed rve at the sta t higher, line	art during	accel/decel.		40	X	7-15
H18	A312	[S-Curve accel/decel end side]	1~100 [%]	cu	et the speed rve at the en gher, linear z	nd during a	accel/decel.		40	X	
H19	A313	[Input/output phase loss	0 ~ 3	0	Disabled	1	Output pha protection	ise	0	0	10-4
		protection select]		2	Input phase protection	3	Input/outpu protection	ut phase			
H20	A314	[Power On Start select]	0 ~ 1	1 d Mo	nis parameter or 2 (Run/Sto otor starts ac oplied while F	op via Con celeration	trol terminal after AC po). wer is	0	0	7-11
H21	A315	[Restart after fault reset selection]	0 ~1	1 d Mo	This parameter is activated when drv is set to 1 or 2 (Run/Stop via Control terminal). Motor accelerates after the fault condition is reset while the FX or RX terminal is ON.				0	0	7-11
H22	A316	[Speed Search Select]	0 ~ 15	ро	nis parameter essible fault v ltage to the r	vhen the i	nverter outpu		0	X	8-17
					1. H20- [Power On start]	2. Restar t after instant power failure	3. Operatio n after fault	4. Normal accel			
					Bit 3	Bit 2	Bit 1	Bit 0			
				0	-	-	-	-			
				1	-	-	-	✓	-		
				3	-	-	✓ ✓	-	-		
				4	-	- -	_	-	-		

Normal acceleration has first priority. Even though #4 is selected along with other bits, Inverter performs Speed search #4.

LED display	Address for communic ation	Paramete r name	Min/Max range			Description	_		Factor y default s	Adj. during run	Page
H22 1)	A316				1. H20- [Power On start]	2. Restart after instant power failure	3. Operati on after fault	4. Nor mal accel		0	8-17
					Bit 3	Bit 2	Bit 1	Bit 0			
				5	-	✓	-	✓			
				6	-	✓	✓	-			
				7	-	✓	✓	✓			
				8	✓	-	-	-			
				9	√	-	-	✓			
				10	√	-	√	-			
				11	√	- /	√	✓			
				12 13	✓ ✓	✓	-	- /			
				14	✓	\ \ \ \		-			
				15	· /	· /	· /	<u>−</u>			
H23	A317	[Current level during Speed search]	80~200 [%]	This p during The s	speed sea	the percent			100	0	8-17
H24	A318	[P gain during Speed search]	0~9999	It is th Searc	e Proportic h PI contro	onal gain us oller.	sed for Spe	ed	100	0	
H25	A319	[I gain during speed search]	0~9999		ie Integral (ntroller.	gain used fo	or Speed se	earch	200	0	
H26	A31A	[Number of Auto Restart try]	0 ~10	tries a Auto f outnu This fo 2 {Rui Deact	This parameter sets the number of restart tries after a fault occurs. Auto Restart is deactivated if the fault outnumbers the restart tries. This function is active when [drv] is set to 1 or 2 {Run/Stop via control terminal}. Deactivated during active protection function (OHT, LVT, EXT, HWT etc.).					0	8-20

LED display	Address for communi cation	Parameter name	Min/Max range		Desc	cription	Factory defaults	Adj. during run	Page
H27	A31B	[Auto Restart time]	0~60 [sec]		parameter s veen restart	sets the time tries.	1.0	0	8-20
H30	A31E	[Motor type select]	0.2~ 22.0	0.2)	0.2kW ~ 22.0kW	7.5 ¹⁾	Х	8-16
H31	A31F	[Number of motor poles]	2 ~ 12		s setting is di rive group.	splayed via rPM	4	Х	
H32	A320	[Rated slip frequency]	0 ~ 10 [Hz]	Whe	$f_s = f_r - \left(\frac{rpm \times P}{120}\right)$ Where, f_s = Rated slip frequency $f_r = \text{Rated frequency}$ $rpm = \text{Motor nameplate}$ RPM $P = \text{Number of Motor}$ poles		2.33 ²⁾	X	
H33	A321	[Motor rated current]	0.5~150 [A]		er motor rate neplate.	ed current on the	26.3	Х	
H34	A322	[No Load Motor Current]	0.1~ 100 [A]	whe rpm the Ente valu	en the motor after the loa motor shaft i er the 50% o ie when it is	f the rated current	11	Х	
H36	A324	[Motor efficiency]	50~100 [%]		er the motor or nameplate	efficiency (see e).	87	Х	
H37	A325	[Load inertia rate]	0~2		ect one of the ording to mo		0	X	8-1
				0	Less than		-		
				1	About 10 ti		-		
				2	More than	10 times			

^{1:} H30 is preset based on inverter rating.

^{2:} H32 ~ H36 factory default values are set based on OTIS-LG motor.

LED display	Address for communi cation	Paramet er name	Min/Max range		- actory lefaults	Adj. during run	Page
H39	A327	[Carrier frequen cy select]	1 ~ 15 [kHz]	This parameter affects the audible sound of the motor, noise emission from the inverter, inverter temp, and leakage current. If the set value is higher, the inverter sound is quieter but the noise from the inverter and leakage current will become greater.		0	8-21
H40	A328	[Control	0 ~ 3	(Volts/frequency Control) 0		Х	7-17
		mode select]		{Slip compensation control}			8-8
		Selecti		S {Sensorless vector control}			8-15
H41	A329	[Auto tuning]	0 ~ 1	f this parameter is set to 1, it utomatically measures parameters of he H42 and H44.		X	8-14
H42	A32A	[Stator resistan ce (Rs)]	0 ~ 28 [Ω]	his is the value of the motor stator esistance.		X	
H44	A32C	[Leakage inductanc e (Lσ)]	0~ 300.0 [mH]	his is leakage inductance of the stator and rotor of the motor.		Х	
H45	A32D	[Sensorl ess P gain]	0~ 32767	P gain for Sensorless control 10	000	0	
H46	A32E	[Sensorl ess I gain]		gain for Sensorless control 10	00	0	
H47	A32F	[Sensorl ess torque limit]	100~220[%]	imits output torque in sensorless mode,. 18	80.0	Х	
H48	A330	PWM mode select	0~1	f you want to limit a inverter leakage current, select 2 phase PWM mode. thas more noise in comparison to Normal PWM mode.		X	8-30
				Normal PWM mode 2 phase PWM mode			
H49	A331	PID	0~1	2 phase PWM mode Selects whether using PID control or not 0		X	8-10
1143	A331	select	0.41	perects whether using PID control of not		^	0-10

^{1:} Set H40 to 3 (Sensorless vector control) to display this parameter.

LED display	Address for commu- nication	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	Page
H50	A332	[PID F/B	0 ~ 2	0	Terminal I input (0 ~ 20 mA)	0	Х	8-10
1)		select]		1	Terminal V1 input (0 ~ 10 V)			
				2	RS-485 communication feedback			
H51	A333	[P gain for PID]	0~ 999.9 [%]		s parameter sets the gains for the PID ntroller.	300.0	0	
H52	A334	[Integral time for PID	0.1~32. 0 [sec]			1.0	0	
H53	A335	[Differential time for PID (Dgain)]	0 ~ 30.0 [sec]			0.0	0	
H54	A336	[PID control	0~1	Se	ects PID control mode	0	Х	8-10
		mode select]		0	Normal PID control			
		Selectj		1	Process PID control	1		
H55	A337	[PID output frequency high limit]	0.1 ~ 400 [Hz]	fred The	s parameter limits the amount of the output quency through the PID control. e value is settable within the range of F21 – ax frequency] and F23 – [Start frequency].	60.00	0	8-10
H56	A338	[PID output frequency low limit]	0.1 ~ 400 [Hz]			0.50	0	
H57	A339	[PID standard value select]	0~4	Sta	ects PID standard value. Indard value is indicated in "rEF" of Drive Iup.	0	X	8-10
				0	Loader digital setting 1	-		
				2	Loader digital setting 2	-		
				3	V1 terminal setting 2: 0~10V I terminal setting: 0~20mA	+		
				4	Setting as a RS-485 communication	+		
H58	A33A	PID control unit select	0~1	Se	lects a unit of the standard value or feedback ount.	0	Х	
				0	Frequency[Hz]			
				1	Percentage[%]			
H59	A33B	PID Output	0 ~ 1	Se	ect the output direction of PID control.			
		mverse		0	No	0	X	
				1	Yes			
1100	AUB	Inverse	0 ~ 1	0	No	0	×	

^{1:} Set H49 to 1 (PID control) to display this parameter.

LED display	Address for commu- nication	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	Page
H60	A33C	[Self-	0 ~ 3	0	Self-diagnostic disabled	0	X	8-22
		diagnostic select]		1	IGBT fault/Ground fault			
		Sciootj		2	Output phase short & open/ Ground fault			
				3	Ground fault (This setting is unable when more than 11kW)			
H61 ¹⁾	A33D	[Sleep delay time]	0~2000 [s]	Sets a s	leep delay time in PID drive.	60.0	Х	8-13
H62	A33E	[Sleep frequency]	0~400 [Hz]	function	leep frequency when executing a sleep in PID control drive. 't set more than Max. frequency(F21)	0.00	0	
H63	A33F	[Wake up level]	0~100 [%]	Sets a v	vake up level in PID control drive.	35.0	0	
H64	A340	[KEB drive select]	0~1	Sets KE	B drive.	0	Х	8-28
H65 ²⁾	A341	[KEB action start level]	110~140 [%]	Sets KE	B action start level according to level.	125.0	Х	
H66	A342	[KEB action stop level]	110~145 [%]	Sets KE	B action stop level according to level.	130.0	Х	
H67	A343	[KEB action gain]	1~2000 0	Sets KE	B action gain.	1000	Х	8-28
H70	A346	[Frequency Reference	0 ~ 1	0	Based on Max freq (F21)	0	Х	7-12
		for Accel/Decel]		1	Based on Delta freq.			
H71	A347	[Accel/Decel time scale]	0 ~ 2	0	Settable unit: 0.01 second.	1	0	7-13
			1	1	Settable unit: 0.1 second.			
				2	Settable unit: 1 second.			

^{1):} Set H49 as a 1
2): it is indicated when setting H64(KEB drive select) as a 1
(KEB does not operate when cut power after loading ting input (about 10%).

LED display	Address for commu- nication	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	Page
H72	A348	[Power on display]	0 ~ 17		rameter selects the parameter to be ed on the keypad when the input power is blied.	0	0	9-2
				0	Frequency command			
				1	Accel time			
				2	Decel time			
				3	Drive mode			
				4	Frequency mode			
				5	Multi-Step frequency 1			
				6	Multi-Step frequency 2			
				7	Multi-Step frequency 3			
				8	Output current			
				9	Motor rpm			
				10	Inverter DC link voltage			
				11	User display select (H73)			
				12	Fault display			
				13	Direction of motor rotation select			
				14	Output current 2			
				15	Motor rpm 2			
				16	Inverter DC link voltage 2			
				17	User display select 2			
H73	A349	[Monitoring item select]	0 ~ 2		the following can be monitored via vOL - splay select].	0	0	9-2
				0	Output voltage [V]			
				1	Output power [kW]			
				2	Torque [kgf · m]			
H74	A34A	[Gain for Motor rpm display]	1 ~ 1000 [%]	rotating	rameter is used to change the motor speed (r/min) to mechanical speed and display it.	100	0	9-1
H75	A34B	[DB resistor operating	0 ~ 1	0	Unlimited	1	0	10-8
		rate limit select]		1	Use DB resistor for the H76 set time.			
H76	A34C	[DB resistor operating rate]	0 ~ 30[%]		percent of DB resistor operating rate to ated during one sequence of operation.	10	0	

LED display	Address for commu- nication	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	Page
H77 ¹⁾	A34D	[Cooling fan control]	0~2	1	Always ON Keeps ON when its temp is higher than inverter protection limit temp. Activated only during operation when its temp is below that of inverter protection	0	0	8-30
				2	limit. Regardless of the operation fan is active when its temp is higher than inverter protection limit temp.			
H78	A34E	[Operating method select when cooling fan malfunctions	0 ~ 1	1	Continuous operation when cooling fan malfunctions. Operation stopped when cooling fan malfunctions.	0	0	8-31
H79	A34F	[S/W version]	x.xx	This par version.	rameter displays the inverter software	x.xx	X	-
H81 ²⁾	A351	[2 nd motor Accel time]	0 ~ 6000		rameter actives when the selected is ON after I17-I24 is set to 12 {2nd motor	5.0	0	8-21
H82	A352	[2 nd motor Decel time]	[sec]	select}.		10.0	0	
H83	A353	[2 nd motor base frequency]	30 ~ 400 [Hz]			60.00	Х	
H84	A354	[2 nd motor V/F pattern]	0 ~ 2	-		0	X	
H85	A355	[2 nd motor forward torque boost]	0 ~ 15 [%]			5	X	
H86	A356	[2 nd motor reverse torque boost]				5	X	
H87	A357	[2 nd motor stall prevention level]	30~150 [%]			150	X	8-21
H88	A358	[2 nd motor Electronic thermal level for 1 min]	50~200 [%]			150	0	
H89	A359	[2 nd motor Electronic thermal level for continuous]	50~150 [%]			100	0	
H90	A35A	[2 nd motor rated current]	0.1~100 [A]		al convection type, this code is hidden.	26.3	X	

Exception: Since SV004iG5A-2/SV004iG5A-4 is Natural convection type, this code is hidden.

It is indicated when choosing I17~I24 as a 12 (2nd motor select).

LED display	Address for commu- nication	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	Page
H91 ¹⁾	A35B	[Parameter read]	0 ~ 1	Copy the para	meters from inverter and save ote loader.	0	X	8-32
H92	A35C	[Parameter write]	0 ~ 1	Copy the para	meters from remote loader and o inverter.	0	Х	
H93	A35D	[Parameter initialize]	0 ~ 5		er is used to initialize parameters ctory default value.	0	Х	8-32
				0 -		1		
					parameter groups are initialized to bory default value.			
				2 Only	/ Drive group is initialized.			
				3 Only	/ Function group 1 is initialized.			
				4 Only	/ Function group 2 is initialized.			
				5 Only	/ I/O group is initialized.			
H94	A35E	[Password register]	0 ~ FFFF	Password for value.	H95-[Parameter lock]. Set as Hexa	0	0	8-33
H95	A35F	[Parameter lock]	0 ~ FFFF		er is able to lock or unlock / typing password registered in	0	0	8-33
				UL (Unlock)	Parameter change enable	1		
				L (Lock)	Parameter change disable	1		

¹⁰ H91,H92 parameters are displayed when Remote option is installed.

Input/output group

LED display	Address for communi cation	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	Page
10	A400	[Jump code]	0 ~ 87	Sets	the code number to jump.	1	0	4-5
2	A402	[NV input Min voltage]	0 ~ -10 [V]		the minimum voltage of the NV (0V) input.	0.00	0	7-2
3	A403	[Frequency correspondi ng to I 2]	0 ~ 400 [Hz]		the inverter output minimum ency at minimum voltage of the NV	0.00	0	
4	A404	[NV input Max voltage]	0 ~ -10 [V]	Sets input	the maximum voltage of the NV .	10.0	0	
5	A405	[Frequency corresponding to I 4]	0 ~ 400 [Hz]		the inverter output maximum ency at maximum voltage of the nput.	60.00	0	
16	A406	[Filter time constant for V1 input]	0 ~ 9999		ets the responsiveness of V1 input +10V).	10	0	7-2
17	A407	[V1 input Min voltage]	0 ~ 10 [V]	Sets	the minimum voltage of the V1	0	0	
18	A408	[Frequency corresponding to I 7]	0 ~ 400 [Hz]		the inverter output minimum lency at minimum voltage of the V1	0.00	0	
19	A409	[V1 input Max voltage]	0 ~ 10 [V]	Sets input	the maximum voltage of the V1	10	0	
110	A40A	[Frequency correspondi ng to I 9]	0 ~ 400 [Hz]		the inverter output maximum lency at maximum voltage of the liput.	60.00	0	
l11	A40B	[Filter time constant for I input]	0 ~ 9999		the input section's internal filter tant for I input.	10	0	7-4
l12	A40C	[I input Min current]	0 ~ 20 [mA]	Sets	the minimum current of I input.	4.00	0	
l13	A40D	[Frequency corresponding to I 12]	0 ~ 400 [Hz]		the inverter output minimum ency at minimum current of I input.	0.00	0	
114	A40E	[I input Max current]	0 ~ 20 [mA]	Sets	the Maximum current of I input.	20.00	0	
115	A40F	[Frequency corresponding to I 14]	0 ~ 400 [Hz]	1	the inverter output maximum lency at maximum current of I	60.00	0	7-4
l16	A410	[Criteria for Analog Input Signal loss]	0 ~ 2	0: Di: 1: ac	sabled tivated below half of set value. tivated below set value.	0	0	10-7
117	A411	[Multi- function input	0 ~ 27	0	Forward run command	0	0	7-8
		terminal P1 define]		1	Reverse run command			
118	A412	[Multi- function input		2	Emergency Stop Trip	1	0	-
		terminal P2 define]		3	Reset when a fault occurs {RST}	-		-

• Input/output group

LED display	Address for communi cation	Parameter name	Min/Max range			Description	Factory defaults	Adj. during run	Page
I19	A413	[Multi- function		4 Jog operation command			2	0	8-3
		input terminal P3 define]		5	Multi-St	ep freq – Low			7-7
120	A414	[Multi- function		6	Multi-St	ep freq – Mid	3	0	
		input terminal P4 define]		7	Multi-St	ep freq – High	_		
l21	A415 [Multi- function		-	8	Multi Ac	cel/Decel – Low	4	0	7-14
		input terminal P5 define]		9	Multi Ac	cel/Decel – Mid	-		
122	A416	[Multi- function	-	10	Multi Ac	cel/Decel – High	5	0	
		input terminal P6 define]		11	DC brak	ke during stop			8-2
123	A417	[Multi-	-	12	2nd mo	tor select	6	0	8-21
		function input terminal P7 define]		13	-Reserv	ed-			-
124	A418	[Multi- function		14	-Reserv	ed-	7	0	-
		input terminal P8 define]		15	Up- down	Frequency increase (UP) command			8-4
				16		Frequency decrease command (DOWN)			
				17	3-wire c	peration			8-7
				18		I trip: A Contact (EtA)			10-5
				19		I trip: B Contact (EtB)			
				20		gnostic function	-		8-22
				21	Change V/F ope	from PID operation to ration			8-10
				22	2 nd Sou				8-24
				23	Analog				7-6
				24	_	ecel Disable			7-16
				25		n Save Freq. Initialization	_		8-4
				26	JOG-FX		_		8-3
				27	JOG-R	\			1

^{*} See "Chapter 14 Troubleshooting and maintenance" for External trip A/B contact.

^{*} Each multi-function input terminal must be set differently.

Input/output group

LED	Address for	Parameter	Min/l	Max				Dagar	intin-			Factory	Adj.	Des-	
display	communic ation	name	ran					Descr	iption			default	during run	Page	
125	A419	[Input terminal	BIT 7	BIT 6	BIT 5	BI ⁻		BIT 3	BIT 2	BIT 1	BIT 0	-	-	9-3	
		status display]	P8	P7	P6	P5	5	P4	P3	P2	P1				
126	A41A	[Output terminal	BIT1				Bľ	T0					_	9-3	
		status display]	3AC	3AC			M	0				-	-		
127	A41B	[Filtering time constant for Multi-function Input terminal]	1 ~ 15	5		nsive	nes			termina	l is	4	0	-	
130	A41E	[Multi- Step frequency 4]	0 ~ 40 [Hz]	00	It canr freque			t greate	er than	F21	[Max	30.00	0	7-7	
l31	A41F	[Multi- Step frequency 5]										25.00	0		
132	A420	[Multi- Step frequency 6]	-									20.00	0		
133	A421	[Multi- Step frequency 7]										15.00	0		
I34	A422	[Multi- Accel time 1]	0~ 60 [sec]	00								3.0	0	7-14	
I35	A423	[Multi- Decel time 1]										3.0			
136	A424	[Multi- Accel time 2]										4.0			
137	A425	[Multi- Decel time 2]											4.0		
138	A426	[Multi- Accel time 3]	-									5.0			
139	A427	[Multi- Decel time 3]	-									5.0			
140	A428	[Multi- Accel time 4]										6.0			
141	A429	[Multi- Decel time 4]										6.0			

Input/output group

• input	output gro	up								
LED display	Address for communic ation	Parameter name	Min/Max range			Description		Factory default	Adj. during run	Page
142	A42A	[Multi- Accel time 5]						7.0		
143	A42B	[Multi- Decel time 5]						7.0		
144	A42C	[Multi- Accel time 6]						8.0		
145	A42D	[Multi- Decel time 6]						8.0		
146	A42E	[Multi- Accel time 7]						9.0		
147	A42F	[Multi- Decel time 7]						9.0		
150	A432	[Analog	0~3		Output	Output to 1	0[V]	0	0	9-6
		output			item	200V	400V			
		select]		0	Output freq.	Max freque	ency			
				1	Output current	150 %				
				2	Output voltage	AC 282V	AC 564V			
				3	Inverter DC link voltage	DC 400V	DC 800V			
151	A433	[Analog output level adjustmen t]	10~200	Bas	ed on 10V.			100	0	9-6
152	A434	[Frequenc y detection level]	0 ~ 400 [Hz]			or I55 is set t nigher than F2		30.00	О	9-7
153	A435	[Frequenc	•					10.00		
		y detection bandwidth							0	
154	A436	[Multi-	0 ~ 19	0	FDT-1			12	0	9-8
		function output		1	FDT-2					
		terminal		2	FDT-3					9-9
		select]		3	FDT-4			17		
155	5 A437 [Multi- function	4 FDT-5							9-10	
		relay	ay	5 Overload (OLt)6 Inverter Overload (IOLt)						9-10
sele		select] 6				Overload (IO tall (STALL)	-			

• Input/output group

LED display	Address for communic ation	Parameter name	Min/Max range		Description	Factory default	Adj. during run	Page
				8	Over voltage trip (Ovt)			
				9	Low voltage trip (Lvt)			
				10	Inverter Overheat (OHt)			
				11	Command loss			
				12	During Run			9-11
				13	During Stop			
				14	During constant run			
				15	During speed searching			
				16	Wait time for run signal input			
				17	Multi-function relay select			
				18	Warning for cooling fan trip			
				19	Brake signal select			

Input/Output Group


LED display	Address for commun ication	Paramet er name	Min/Max range			Descrip	tion		Factory defaults	Adj. during run	Page																	
156	A438	[Fault relay output]	0 ~ 7		When setting the H26– [Number of auto restart try]	Wher trip of than I voltag occur	her ow je trip	When the low voltage trip occurs	2	0	9-7																	
					Bit 2	Bit 1		Bit 0																				
				0	-		-	-																				
					1	-		- ✓																				
				2	-			-																				
				3	-	,		✓																				
				4	✓		-	-																				
				5	✓		-	✓																				
				6	√		<u> </u>	-																				
				7	√		/	✓	_																			
157	A439	[Output terminal	0~3		Multi-functio relay	n 		function it terminal	0	0	9-12																	
		I I		select			Bit 1			Bit 0																		
	when commun			0	-			-																				
	ication error		1	-		✓																						
	occurs]		2	✓			-																					
				3	✓			✓																				
159	A43B	[Commu nication	0 ~ 1	<u>'</u>					0	Х	11-2																	
		protocol																			0	Modbus RTI	J					
		select]			1 LS BUS																							
160	A43C	[Inverter number]	1 ~ 250	Se	t for RS485 co	ommun	ication		1	0	11-2																	
l61	A43D	[Baud	0 ~ 4	Se	lect the Baud	rate of	the RS485.		3	0	11-2																	
		rate]		0	1200 [bps]																							
				1	2400 [bps]																							
				2	4800 [bps]																							
				3	9600 [bps]																							
				4	19200 [bps]																							
162	A43E	[Drive mode	0 ~ 3	It is	s used when f /I terminal or	req cor RS485	nmand	is given via	0	0	10-7																	
		select after loss of		0	Continuous before its co			ne frequency t.																				
		frequenc		1	Free Run sto	op (Out	put cut	:-off)																				
		у		2	Decel to sto	р																						
	comman d]		3	Lose Preset																								
163	A43F	[Wait time after loss of frequenc y comman d]	0.1 ~ 120 [sec]	This is the time inverter determines whether there is the input frequency command or not. If there is no frequency command input during this time, inverter starts operation via the mode selected at I62.				1.0	0	10-7																		

LED display	Address for commun ication	Paramet er name	Min/Max range	Description	Factory defaults	Adj. during run	Page
164	A440	[Commu nication time setting]	2 ~ 100 [ms]	Frame communication time	5	0	-
165	A441	[Parity/st op bit setting]	0~3	When the protocol is set, the communication format can be set. O Parity: None, Stop Bit: 1 1 Parity: None, Stop Bit: 2 2 Parity: Even, Stop Bit: 1 3 Parity: Odd, Stop Bit: 1	0	0	-
166	A442	[Read address register 1]			5	0	11-11
167	A443	[Read address register 2]			6		
I68	A444	[Read address register 3]			7		
169	A445	[Read address register 4]	0~42239	The user can register up to 8 discontinuous addresses and read them all with one Read command.	8		
170	A446	[Read address register 5]	0~42239		9		
l71	A447	[Read address register 6]			10		
172	A448	[Read address register 7]			11		
173	A449	[Read address register 8]			12		
174	A44A	[Write address register 1]			5	0	11-11
175	A44B	[Write address register 2]	0~42239	The user can register up to 8	6		
176	A44C	[Write address register 3]		discontinuous addresses and write them all with one Write command	7		
177	A44D	[Write address register 4]			8		


178	A44E	[Write address register 5]			5		
179	A44F	[Write address register 6]			6		
180	A450	[Write address register 7]			7		
I81	A451	[Write address register 8]			8		
I82 ¹⁾	A452	[Brake open current]	0~180 [%]	Sets current level to open the brake. It is set according to H33's (motor rated current) size	50.0	0	8-26
183	A453	[Brake open delay time]	0~10 [s]	Sets Brake open delay time.	1.00	X	
184	A454	[Brake open FX frequenc y]	0~400 [Hz]	Sets FX frequency to open the brake	1.00	Х	
185	A455	[Brake open RX frequenc y]	0~400 [Hz]	Sets RX frequency to open the brake	1.00	Х	
186	A456	[Brake close delay time]	0~19 [s]	Sets delay time to close the brake	1.00	Х	
187	A457	[Brake close frequency	0~400 [Hz]	Sets frequency to close the brake	2.00	Х	
188 ²⁾	A458	[Lost Preset Freq]	0~400 [Hz]	If I62 is set "3", when the drive go into the lost command state, the drive will operate the motor at lost command frequency.	30.0	0	


It is indicated when choosing I54~I55 as a 19 (Brake signal).

It is indicated when choosing I62 as a 3 (Lost Preset)

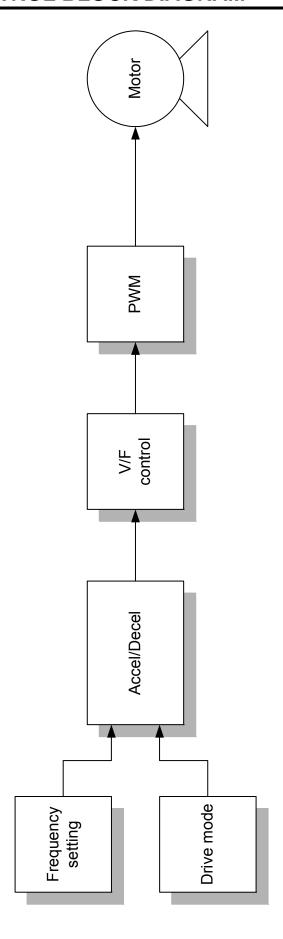


6.1 Frequency setting

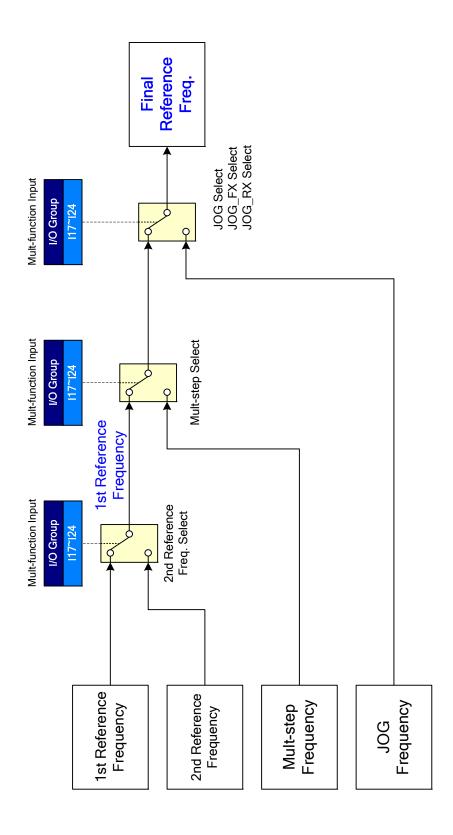


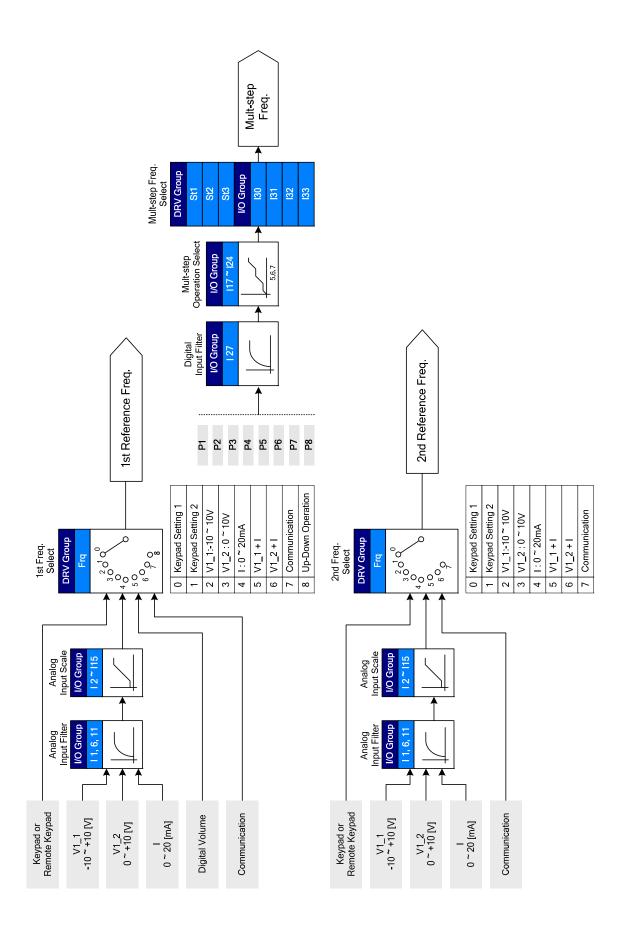

6.2 Drive command setting

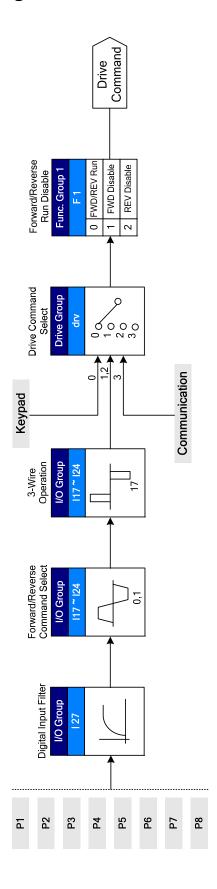

6.3 Accel/Decel setting and V/F control

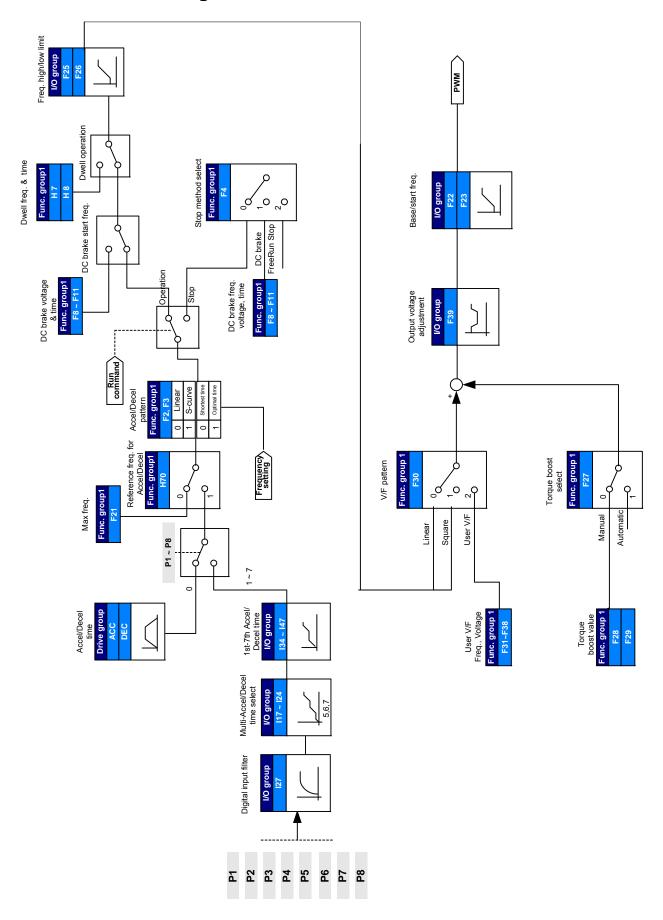

6-5

Notes:

CHAPTER 7 - BASIC FUNCTIONS

7.1 Frequency mode

Keypad Frequency setting 1

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~ 400	0.00	Hz
	Frq	[Frequency mode]	0	0 ~ 9	0	

- Set Frq [Frequency mode] to 0 (Frequency setting via Keypad 1).
- Set the desired frequency in 0.00 and press the Prog/Ent (●) key to enter the value into memory.
- The value is settable less than **F21** [Max frequency].
- ▶ When remote keypad is connected, keypad keys on the body are deactivated.

Keypad Frequency setting 2


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~ 400	0.00	Hz
	Frq	[Frequency mode]	1	0~9	0	


- Set Frq [Frequency mode] to 1{Frequency setting via Keypad 2}.
- In 0.00, frequency is changed upon pressing the Up (▲)/Down (▼) key. In this case, UP/Down keys serve as a potentiometer.
- The value is settable less than **F21** [Max frequency].
- ▶ When remote keypad is connected, keypad keys on the body are deactivated.

Frequency setting via −10 ~ +10[V] input


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	2	0~9	0	
I/O group	12	[NV input minimum voltage]	-	0 ~ -10	0.0	V
	13	[Frequency corresponding to I2]	-	0 ~ 400	0.00	Hz
	14	[NV input max voltage]	-	0 ~ 10	10.00	V
	15	[Frequency corresponding to I4]	-	0 ~ 400	60.00	Hz
	I6 ~ I10	[V1 input]				

- Set Frq [Frequency Mode] to 2.
- The set frequency can be monitored in **0.00** [Frequency Command].
- ▶ Apply -10V ~ +10V signal between V1 and CM terminal.
- ▶ Output frequency corresponding to -10V ~ +10V input voltage to V1 terminal

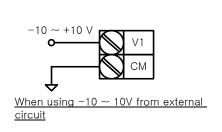

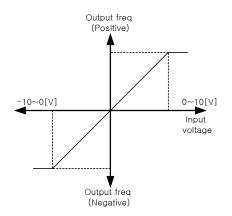


▶ I 2 ~ I 5: Setting input range and corresponding frequency to -10V ~ 0V V1 input voltage Ex) when minimum (-) input voltage is -2V with corresponding frequency 10Hz and Max voltage is -8V with run freq. 50Hz.

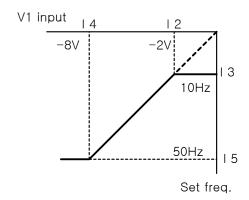

▶ 16 ~ I10: Setting input range and corresponding frequency to 0 ~ +10V V1 input voltage


Ex) when minimum (+) input voltage is 2V with corresponding frequency 10Hz and Max voltage is 8V with run freq.

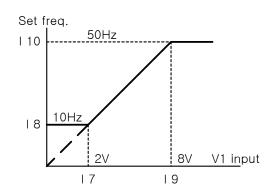


Frequency setting via 0 ~ 10 [V] input or Terminal Potentiometer

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	3	0~9	0	
I/O group	16	[Filter time constant for V1 input]	10	0 ~ 9999	10	
	17	[V1 input Min voltage]	-	0 ~ 10	0	V
	18	[Frequency corresponding to I 7]	-	0 ~ 400	0.00	Hz
	19	[V1 input max voltage]	-	0 ~ 10	10	V
	I10	[Frequency corresponding to I 9]	-	0 ~ 400	60.00	Hz

  - Select 3 in Frq code of Drive group.
- 0-10V can be directly applied from an external controller or a potentiometer connected on terminals VR, V1 and CM.
- Wire the terminals as shown below and refer to I 6 ~ I 10.





0 ~ 10V input via external controller

Frequency setting via 0 ~ 20 [mA] input

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	4	0 ~ 9	0	
I/O group	I11	[Filter time constant for I input]	10	0 ~ 9999	10	
	l12	[I input minimum current]	-	0 ~ 20	4	mA
	I13	[Frequency corresponding to I12]	-	0 ~ 400	0.00	Hz
	l14	[I input max current]	-	0 ~ 20	20	mA
	l15	[Frequency corresponding to I14]	-	0 ~ 400	60.00	Hz

- Select 4 in Frq code of Drive group.
- Frequency is set via 0~20mA input between I and CM terminal.

Frequency setting via -10 ~ +10[V] voltage input + 0 ~ 20[mA] input

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	5	0 ~ 9	0	

- Select 5 in Frq code of Drive group.
- Override function available using Main/Auxiliary speed adjustment
- Related code: I 2 ~ I 5, I 6 ~ I10, I11 ~ I15
- ▶ Override function is to gain precise control and fast response by combining Main and Auxiliary speed input. Fast response can be achieved by Main speed and precise control can be accomplished by Aux. speed if the accuracy of Main/Aux speed is set differently.
- Follow the setting below when Main speed is given via $0 \sim 20$ mA with Aux. speed via V1 terminal $(-10 \sim 10\text{V})$.
- ▶ When override function is used, select the Main/Aux. speed according to loads used.

Group	Code	Parameter Name	Setting	Unit
I/O group	12	[NV input Min voltage]	0	V
	13	[Frequency corresponding to I 2]	0.00	Hz
	14	[NV input Max voltage]	10.00	V
	15	5.00	Hz	
	17	0.00	V	
	I 8 [Frequency corresponding to I 7]		0.00	Hz
	19	[V1 input max voltage]	10.00	V
	I10	[Frequency corresponding to I 9]	5.00	Hz
	I12	[I input minimum current]	4.00	mA
	I13	[Frequency corresponding to I 12]	0.00	Hz
	I14	[I input max current]	20.00	mA
	I15	[Frequency corresponding to I 14]	60.00	Hz

- ▶ After the above setting is made, if 5V is applied to V1 with 12mA given to terminal I, output frequency would be 32.5Hz. If –5V is applied to V1 terminal with 12mA given to terminal I, output frequency would be 27.5Hz.
- Frequency setting via 0 ~ 10[V] + 0 ~ 20[mA] input

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
-	Frq	[Frequency Mode]	6	0~9	0	

- Select 6 in Frq code of Drive group.
- Related code: I 6 ~ I 10, I 11 ~ I 15
- Refer to Frequency setting via -10 ~ +10V voltage input + 0 ~ 20mA input.
- Frequency setting via RS 485 communication

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.0	[Frequency Command]	-	0 ~400	0.00	Hz
-	Frq	[Frequency Mode]	7	0 ~ 9	0	

- Select 7 in Frq code of Drive group.
- Related code: I 59, I 60, I 61
- Refer to Chapter 13. RS485 communication.

Frequency setting via Digital Volume (up-down)


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.0	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	8	0 ~ 9	0	

- Select 7 in Frq code of Drive group.
- Related code: I 59, I 60, I 61
- Refer to Chapter 13. RS485 communication.

Analog Hold

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	Frq	[Frequency Mode]	2 ~ 7	0 ~ 9	0	
I/O group	l17	[Multi-function input terminal P1 define]	-		0	
	~	~		0 ~25		
	124	[Multi-function input terminal P8 define]	23		7	


- It is available when Frq code setting is 2 ~ 7.
- Select one terminal to use for Analog Hold command among Multi-function input terminal (P1 ~ P8).
- ▶ When P8 terminal is selected,

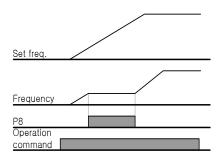

7.2 Multi-Step Frequency setting

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.0	[Frequency Command]	5.0	0 ~ 400	0.00	Hz
	Frq	[Frequency Mode]	0	0 ~ 9	0	-
	St1	[Multi-Step frequency 1]	-	0 ~ 400	10.00	Hz
	St2	[Multi-Step frequency 2]	-		20.00	- -
	St3	[Multi-Step frequency 3]	-		30.00	- -
I/O group	122	[Multi-function input terminal P6 define]	5	0 ~ 24	5	-
	I23	[Multi-function input terminal P7 define]	6		6	-
	124	[Multi-function input terminal P8 define]	7		7	-
	130	[Multi-Step frequency 4]	-	0 ~ 400	30.00	Hz
	I31	[Multi-Step frequency 5]	-		25.00	- -
	132	[Multi-Step frequency 6]	-		20.00	
	133	[Multi-Step frequency 7]	-		15.00	1

- Select a terminal to give Multi-step frequency command among P1-P8 terminals.
- If terminals P6-P8 are selected, set I22-I24 to 5-7 to give Multi-step frequency command.
- Multi-step frequency 0 is settable in Frq [Frequency mode] and 0.00 [Frequency command].
- Multi-step frequency 1-3 are set at St1-St3 in Drive group, while Step frequency 4-7 are set at I30-I33 in I/O group.

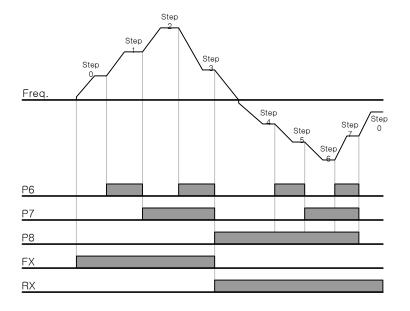

Step freq.	FX or RX	P8	P7	P6
0	✓	-	-	-
1	✓	-	-	✓
2	✓	-	✓	-
3	✓	-	✓	✓
4	✓	✓	-	-
5	✓	✓	-	✓
6	√	√	√	-
7	✓	✓	✓	✓

7.3 Operating command setting method


Operation via keypad RUN key and STOP/RST key

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	0	0 ~ 4	1	
	drC	[Direction of motor rotation select]	-	F, r	F	

- Set **drv** [Drive mode] to 0.
- Acceleration is started upon pressing the Run key while operating frequency is set. Motor decelerates to stop by pressing the STOP/RST key.
- Selecting rotation direction is available at drC [Direction of motor rotation select] when operating command is issued via keypad.

	[Direction of	F	Forward
drC	motor rotation	r	Reverse
	select]		

When remote keypad is connected, body-embedded keypad is deactivated.

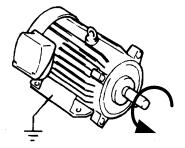


Forward: Counter-clockwise

Operating command via FX, RX terminal 1

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	1	0 ~ 4	1	
I/O group	l17	[Multi-function input terminal P1 define]	0	0 ~ 27	0	
	I18	[Multi-function input terminal P2 define]	1	0 ~ 27	1	


- Set **drv** [Drive mode] to 1.
- Set I17 and I18 to 0 and 1 to use P1 and P2 as FX and RX terminals.
- "FX" is Forward run command and "RX" Reverse run.
- Motor is stopped when FX/RX terminal is ON/OFF at the same time.

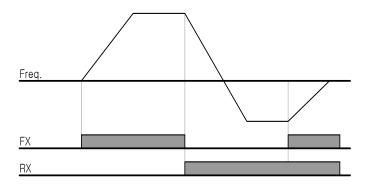

Operating command via FX, RX terminal 2

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	2	0 ~ 4	1	
I/O group	117	[Multi-function input terminal P1 define]	0	0 ~ 27	0	
	I18	[Multi-function input terminal P2 define]	1	0 ~ 27	1	

- Set the drv to 2.
- Set I17 and I18 to 0 and 1 to use P1 and P2 as FX and RX terminals.
- FX: Operating command setting. Motor runs in forward direction when RX terminal (P2) is OFF
- RX: Direction of motor rotation select. Motor runs in reverse direction when RX terminal (P2) is ON.

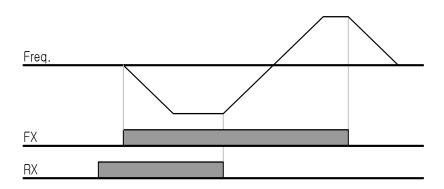

Operating command via RS485 communication

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	3	0 ~ 4	1	
I/O group	159	[Communication protocol select]	-	0 ~ 1	0	
	160	[Inverter number]	-	1 ~ 250	1	
	I61	[Baud rate]	-	0 ~ 4	3	

- Set the **drv** to 3.
- Set I59, I60 and I61correctly.
- Inverter operation is performed via RS485 communication.
- Refer to Chapter. 13, RS485 communication.

Rotating direction select via −10 ~ +10[V] input of V1 terminal

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	frq	[Frequency setting]	2	0 ~ 8	0	
	drv	[Drive mode]	-	0 ~ 4	1	

- Set frq to 2.
- Inverter is operating as the table below regardless of Drive mode setting.

	FWD RUN Command	REV RUN Command
0 ~ +10 [V]	FWD RUN	REV RUN
-10 ~ 0 [V]	REV RUN	FWD RUN

- ▶ Motor runs in Forward direction when input voltage to V1-CM is 0~10[V] and FWD RUN command is active. When input voltage polarity is reversed to −10~0[V] during FWD RUN, motor decelerates to stop and runs in reverse direction.
- ▶ When input voltage to V1-CM is 0~10[V] and REV RUN command is active, motor runs in Reverse direction and if -10~0[V] is input, motor rotating direction is reverse.

FX/RX Run Disable

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drC	[Direction of motor rotation select]	-	F, r	F	
Function group 1	F 1	[Forward/Reverse run disable]	-	0 ~ 2	0	

- Select the direction of motor rotation.
- 0: Forward and Reverse run enable
- 1: Forward run disable
- 2: Reverse run disable


Power On Start select

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	1, 2	0 ~ 4	1	
Function group 2	H20	[Power On Start select]	1	0 ~ 1	0	

- Set H20 to 1.
- When AC input power is applied to the inverter with drv set to 1 or 2 {Run via control terminal} ON, motor starts acceleration.
- This parameter is inactive when **drv** is set to 0 {Run via keypad} or 3 {RS485 communication}.

! CAUTION

Particular attention must be directed to this function due to potential hazard as motor starts to run suddenly upon applying AC input power.

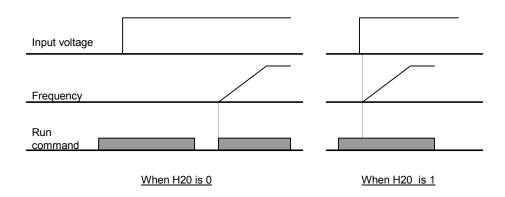


Restart after fault reset

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	1, 2	0 ~ 4	1	
Function group 2	H21	[Restart after fault reset selection]	1	0 ~ 1	0	

- Set H21 to 1.
- Motor starts acceleration if drv is set to 1 or 2 and the selected terminal is ON when a fault is cleared.
- This parameter is inactive when drv is set to 0 {Run via keypad} or 3 {RS485 communication}.

! CAUTION

Particular attention must be directed to this function due to potential hazard as motor starts to run suddenly after the fault is cleared.

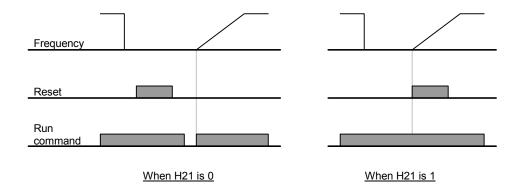


7.4 Accel/Decel time and pattern setting

Accel/Decel time setting based on Max frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	ACC	[Accel time]	-	0 ~ 6000	5.0	Sec
	dEC	[Decel time]	-	0 ~ 6000	10.0	Sec
Function group1	F21	[Max Frequency]	-	40 ~ 400	60.00	Hz
Function group2	H70	[Frequency Reference for Accel/Decel]	0	0 ~ 1	0	
	H71	[Accel/Decel time scale]	-	0 ~ 2	1	

- Set the desired Accel/Decel time at ACC/dEC in Drive group.
- If H70 is set to 0 {Max frequency}, Accel/Decel time is the time that takes to reach the max freq from 0 Hz.
- Desired Accel/Decel time unit is settable at the H71.
- Accel/Decel time is set based on F21 − [Max frequency]. For instance, if F21 is set to 60Hz, Accel/Decel time 5 sec, and run frequency 30Hz, time to reach 30Hz would be 2.5 sec.

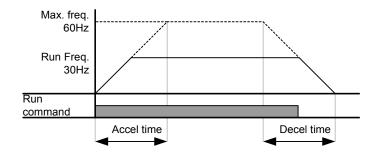


- ▶ More precise time unit can be set corresponding to load characteristics as shown below.
- ▶ In SV-iG5A, number display is available up to 5. Therefore, if time unit is set to 0.01 sec, Max Accel/Decel time would be 600.00 sec.

Code	Name	Set value	Setting range	Description
H71	[Accel/Decel	0	0.01~600.00	Setting Unit: 0.01 sec
	time scale]	1	0.1~6000.0	Setting Unit: 0.1 sec
		2	1~60000	Setting Unit: 1 sec

Accel/Decel time setting based on Operating Frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	ACC	[Accel time]	-	0 ~ 6000	5.0	Sec
	dEC	[Decel time]	-	0 ~ 6000	10.0	Sec
Function group 2	H70	[Frequency Reference for Accel/Decel]	1	0 ~ 1	0	


- Accel/Decel time is set at the ACC/dEC.
- If you set H70 to 1 {Delta frequency}, Accel/Decel time is the time that takes to reach a target freq from constant run freq (Current operating freq.).
- ▶ When H70 and Accel time are set to 1 {Delta frequency} and 5 sec, respectively,
- ▶ The below graph in Section A shows the change in operating frequency when target frequency is set to 10Hz at first and then changed to 30Hz.

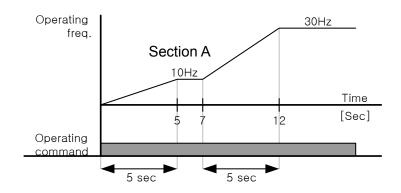

Multi-Accel/Decel time setting via Multi-function terminals

Group	Code	Parameter Name	Set	Range	Initial	Unit
Drive group	ACC	[Accel time]	-	0 ~ 6000	5.0	Sec
	dEC	[Decel time]	-	0 ~ 6000	10.0	Sec
I/O group	I17	[Multi-function input terminal P1 define]	0	0 ~ 27	0	
	I18	[Multi-function input terminal P12 define]	1		1	
	l19	[Multi-function input terminal P3 define]	8		2	
	120	[Multi-function input terminal P4 define]	9		3	
	I21	[Multi-function input terminal P5 define]	10		4	
	134	[Multi-Accel time 1]	-	0 ~ 6000	3.0	Sec
	~	~		0000		
	147	[Multi-Decel time 7]	-		9.0	

- Set I19, I20, I21 to 8, 9, 10 if you want to set Multi Accel/Decel time via P3-P5 terminals.
- Multi-Accel/Decel time 0 is settable at ACC and dEC.
- Multi-Accel/Decel time 1-7 is settable at I34-I47.

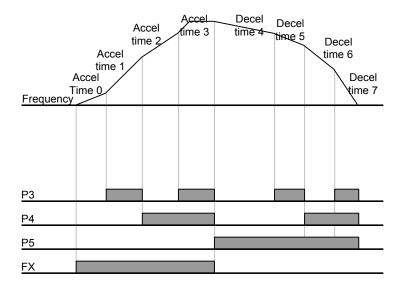


Accel/Decel time	P5	P4	Р3
0	-	-	-
1	-	-	✓
2	-	✓	-
3	-	✓	✓
4	✓	-	-
5	✓	-	✓
6	√	√	-
7	✓	✓	✓

Accel/Decel pattern setting


Group	Code	Parameter Name	Setting	g range	Initial	Unit
Function group 1	F 2	[Accel pattern]	0	Linear	0	
	F 3	[Decel pattern]	1	S-curve		
Function group 2	H17	[S-Curve Accel/Decel start side]	0~		40	%
	H18	[S-Curve Accel/Decel end side]	100		40	%

- Accel/Decel pattern is settable at F2 and F3.
- Linear: This is a general pattern for constant torque applications.
- S-curve: This curve allows the motor to accelerate and decelerate smoothly.




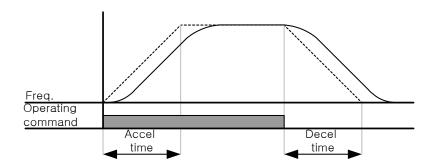

- ▶ H17 sets the starting ratio between S-curve and Linear in 1/2 of Accel/Decel Ref. Frequency. For smooth Accel/Decel starting, increase H17 to extend S-curve ratio.
- ▶ H18 sets the ending ratio between S-curve and Linear in 1/2 of Accel/Decel Ref. Frequency. For smooth and accurate speed arrival and stopping, increase H18 to extend S-curve ratio.

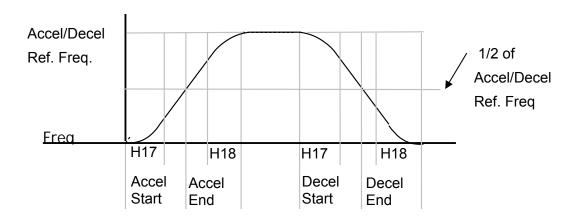

▶ Note that setting Frequency Ref. for Accel/decel (H70) is set to Max Freq and target freq is set below Max freq. the shape of S-curve may be distorted.

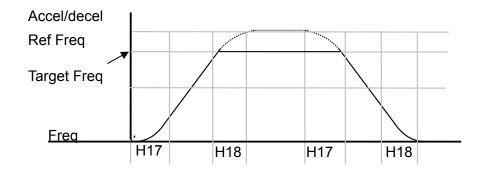

ACAUTION
If Target Frequency is below Max Frequency, the waveform will be shown with the top portion cut out.

Accel time for S-curve setting

$$= ACC + ACC \times \frac{H17}{2} + ACC \times \frac{H18}{2}$$

Decel time for S-curve setting


$$= dEC + dEC \times \frac{H17}{2} + dEC \times \frac{H18}{2}$$

▶ ACC, dEC indicate the set time in Drive group.

Accel/Decel Disable

Group	Code	Parameter Name	Setting	Range	Initial	Unit
I/O group	l17	[Multi-function input terminal P1 define]	-	0 ~27	0	
	~	~				
	I24	[Multi-function input terminal P8 define]	24		7	

- Select one terminal among Multi-function input terminals 1-8 to define Accel/Decel disable.
- If P8 is selected, set I24 to 24 to activate this function.

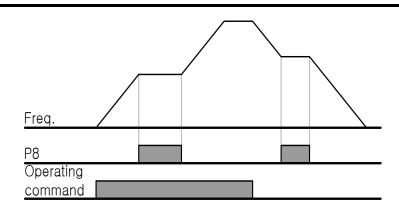


7.5 V/F control

Linear V/F pattern operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F22	[Base frequency]	-	30 ~ 400	60.00	Hz
	F23	[Start frequency]	-	0.1 ~ 10.0	0.50	Hz
	F30	[V/F pattern]	0	0 ~ 2	0	
Function group 2	H40	[Control mode select]	-	0~3	0	


- Set F30 to 0 {Linear}.
- This pattern maintains a linear Volts/frequency ratio from F23 [Start frequency] to F22-[Base frequency]. This is appropriate for constant torque applications.
- ▶ Base Frequency: Inverter outputs its rated voltage at this level. Enter the motor nameplate frequency.
- ▶ Start Frequency: Inverter starts to output its voltage at this level.

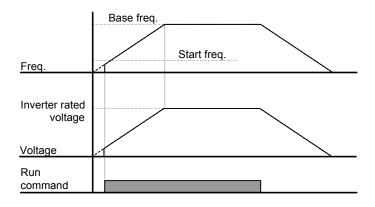

Square V/F pattern

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F30	[V/F pattern]	1	0 ~ 2	0	

- Set F30 to 1{Square}.
- This pattern maintains squared volts/hertz ratio. Appropriate applications are fans, pumps, etc.

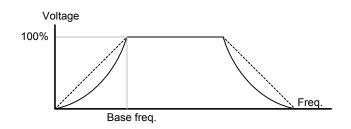


User V/F pattern operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F30	[V/F pattern]	2	0 ~ 2	0	
	F31	[User V/F frequency 1]	-	0 ~ 400	15.00	Hz
	~	~				
	F38	[User V/F voltage 4]	-	0 ~ 100	100	%

- Select F30 to 2 {User V/F}.
- User can adjust the Volt/Frequency ratio according to V/F pattern of specialized motors and load characteristics.

ACAUTION


In case of using a standard induction motor, if this value is set much higher than linear V/F pattern, it could result in torque shortage or motor overheating due to over-energizing. When User V/F pattern is active, F28 - [Torque Boost in forward direction] and F29 - [Torque Boost in reverse direction] are deactivated.

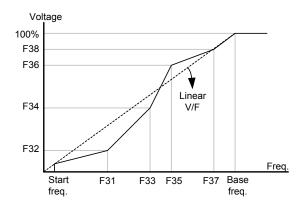

Output voltage adjustment

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F39	[Output voltage adjustment]	-	40 ~ 110	100	%

This function is used to adjust the output voltage of the inverter. This is useful when you use a motor that has a rated voltage lower than the input voltage.

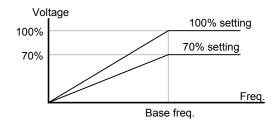


Manual torque boost

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F27	[Torque Boost select]	0	0 ~ 1	0	
	F28	[Torque boost in forward direction]	-	0 ~ 15	2	%
	F29	[Torque boost in reverse direction]				

- Set F27 to 0 {Manual torque boost}.
- The values of [Torque boost in forward/reverse direction] are set separately in F28 and F29.

⚠ CAUTION

• If the boost value is set much higher than required, it may cause motor overheating due to over-energizing.

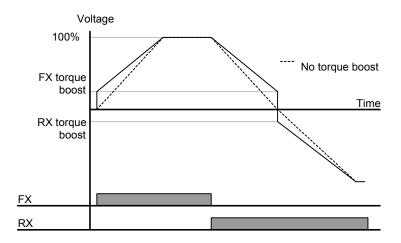

Auto torque boost

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F27	[Torque Boost select]	1	0 ~ 1	0	
Function group 2	H34	[No load motor Current]	-	0.1 ~ 100	-	А
	H41	[Auto tuning]	0	0 ~ 1	0	
	H42	[Stator resistance (Rs)]	-	0 ~ 28	-	Ω


- Before Auto Torque Boost setting, H34 and H42 should be set correctly (See page 10-6, 10-10).
- Select 1{Auto torque boost} in F27.
- Inverter automatically calculates torque boost value using motor parameters and outputs the corresponding voltage.

7.6 Stop method select

Decel to stop

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F4	[Stop mode select]	0	0 ~ 3	0	

- Select 0 {decel to stop} in F4 code.
- Motor decelerates to 0 Hz and stops during the setting time.

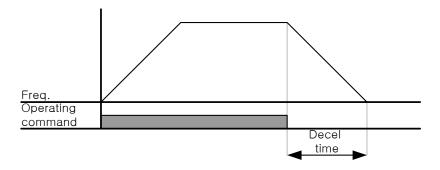

DC braking to stop


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F4	[Stop mode select]	1	0 ~ 3	0	

- Select 1 (DC brake to stop) in F4 code.
- Refer to page 8-1.

Free run stop

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F4	[Stop mode select]	2	0 ~ 3	0	

- Select 2 {Free run stop} in F4 code.
- When operating command is turned OFF, Output Frequency and voltage are shut down.

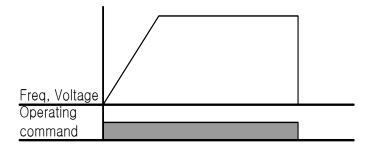

7.7 Frequency limit

Frequency limit using Max Frequency and Start Frequency


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F21	[Max frequency]	-	0 ~ 400	60.00	Hz
	F23	[Start frequency]	-	0.1 ~ 10	0.50	Hz

- Max Frequency: Frequency highest limit. Any frequency cannot be set above [Max frequency] except for F22 [Base frequency].
- Start Frequency: Frequency lowest limit. If a frequency is set lower than this, 0.00 is automatically set.

Frequency command limit using High/Low limit

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F24	[Frequency high/low limit select]	1	0 ~ 1	0	
	F25	[Frequency high limit]	-	0 ~ 400	60.00	Hz
	F26	[Frequency low limit]	-	0 ~ 400	0.50	Hz


- Set F24 to 1.
- Active run frequency can be set within the range of F25 and F26.
- When frequency setting is done via Analog input (voltage or current input), the inverter operates within the range of high and low limit frequency as shown below.
- ▶ This setting is also valid when frequency setting is done via keypad.

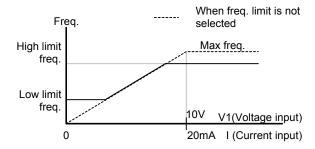

Skip frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 2	H10	[Skip frequency select]	1	0 ~ 1	0	
	H11	[Skip frequency low limit 1]	-	0.1 ~ 400	10.00	Hz
	~	~				
	H16	[Skip frequency low limit 3]	-	0.1 ~ 400	35.00	Hz

- Set H10 to 1.
- Run frequency setting is not available within the skip frequency range of H11-H16.
- Skip frequency is settable within the range of F21 [Max frequency] and F23 [Start frequency].

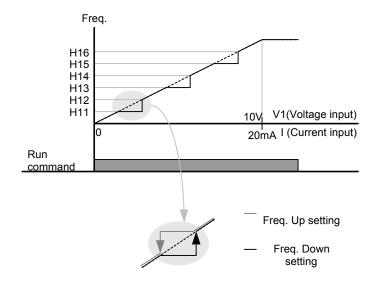

- When it is desired to avoid resonance attributable to the natural frequency of a mechanical system, these parameters allow resonant frequencies to be skipped. Three different areas of [Skip frequency High/Low limit] can be set with the skip frequencies set to either the top or bottom point of each area. However, during acceleration or deceleration, the run frequency within the set area is valid.
- ▶ In the case of increasing frequency setting as shown above, if frequency set value (Analog setting via voltage, current, or digital setting via keypad) is within the range of Skip frequency, it maintains Skip freq RS485 communication, frequency low limit value. If the set value is outside the range, it increases the frequency.
- In the case of decreasing frequency setting, if frequency set value (Analog setting via voltage, current, RS485 communication, or Digital setting via keypad) is within the range of Skip frequency, it maintains Skip frequency high limit value. If the set value is outside the range, it decreases the frequency.

CHAPTER 8 - ADVANCED FUNCTIONS

8.1 DC brake


Stopping motor by DC brake

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F 4	[Stop mode select]	1	0~3	0	
	F 8	[DC Brake start frequency]	-	0.1 ~ 60	5.00	Hz
	F 9	[DC Brake wait time]	-	0 ~ 60	0.1	sec
	F10	[DC Brake voltage]	-	0 ~ 200	50	%
	F11	[DC Brake time]	-	0 ~ 60	1.0	sec

- Set F4 [Stop mode select] to 1.
- F 8: The frequency at which the DC brake will become active.
- F 9: Inverter output will hold for this time after F8 [DC Brake start frequency] before applying F10 - [DC Brake voltage].
- F10: Set this value as a percent of H33 [Motor rated current].
- F11: It sets the time for F10 [DC Brake voltage] to be applied to the motor after F 9 [DC Brake wait time].

ACAUTION If excessive DC Brake voltage is set or DC Brake time is set too long, it may cause motor overheating and damage to the motor.

- Setting F10 or F11 to 0 will disable DC brake.
- F 9 [DC Brake Wait time]: When load inertia is large or F 8 - [DC Brake Start Frequency] is high, over current trip may occur. It can be prevented using F9.

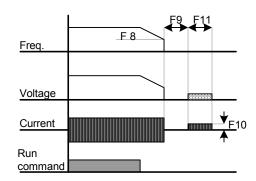

In case of DC brake at high load inertia and frequency, change the DC brake controller gain according to H37 set value.

H37	Load inertia ratio	0	Less than 10 times motor inertia
		1	10 times motor inertia
		2	Greater than 10 times motor inertia


Starting DC brake

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F12	[DC Brake start voltage]	-	0 ~ 200	50	%
	F13	[DC Brake start time]	-	0 ~ 60	0	sec

- F12: It sets the level as a percent of H33 [Motor rated current].
- F13: Motor accelerates after DC voltage is applied for the set time.

ACAUTION

If excessive DC Brake voltage is set or DC Brake time is set too long, it may cause motor overheating and damage to the motor.

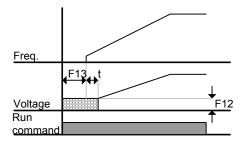

- ▶ Setting F12 or F13 to 0 will disable Starting DC brake.
- t: After F13 [DC Brake start time], the frequency is increasing after DC voltage is applied until the time t.


DC brake at a stop

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F12	[DC Brake start voltage]	-	0 ~ 200	50	%
I/O group	l19	[Multi-function Input terminal P3 Function select]	11	0 ~ 25	2	

- F12: It sets the level as a percent of H33 [Motor rated current].
- Select a terminal to issue a command of DC brake at a stop among P1 to P8.
- If P3 terminal is set for this function, set I19 to 11 (DC brake during stop).

ACAUTION

 If excessive DC Brake voltage is set or DC Brake time is set too long, it may cause motor overheating and damage to the motor.





8.2 Jog operation

Terminal jog operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F20	[Jog frequency]	-	0 ~ 400	10.00	Hz
I/O group	I21	[Multi-function input terminal P5 define]	4	0 ~ 25	4	

 - Set the desired jog frequency in F20.
- Select a terminal from P1 P8 to use for this setting.
- If P5 is set for Jog operation, set I21 to 4 {Jog}.
- Jog frequency can be set within the range of F21 [Max frequency] and F23 [Start frequency].



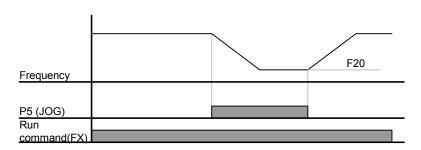


- Jog operation overrides all other operations except Dwell operation. Therefore, if Jog frequency command is entered in the middle of Multi-Step, Up-Down or 3-wire operation, operation is executed at Jog frequency.
- The above diagram is an example when Multi-function input is set to NPN mode.
- Terminal jog operation

Terminal JOG FX/RX operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F20	[Jog frequency]	-	0 ~ 400	10.00	Hz
I/O	I23	[Multi-function input terminal P7 define]	26	0 ~ 27	6	
group	124	[Multi-function input terminal P8 define]	27	0 ~ 27	7	

- Set the desired jog frequency in F20.
- Select a terminal from P1 P8 to use for this setting.
- If P7 is set for Jog operation, set I23 to 26 {Jog}.
- ▶ Jog frequency's setting range can be set between Max. frequency (F21) and start frequency (F23).
- ▶ The following diagram is an example when reference frequency is 30Hz and Jog frequency is 10 Hz.

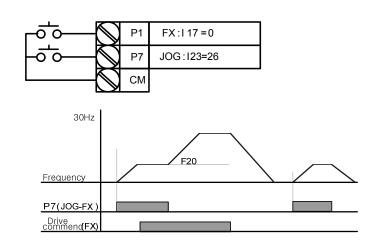

8.3 UP-DOWN Drive

Up-down storage function

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	Frq	[Frequency setting method]	8	0~8	0	
	I17	[Multi-function input terminal P1 define]	0		0	
I/O	122	[Multi-function input terminal P6 define]	25	0 ~ 27	5	
group	123	[Multi-function input terminal P7define]	15		6	
	124	[Multi-function input terminal P8define]	16		7	
Function group 1	F63	[Up-down frequency Save select]	-	0~1	0	
	F64	[Up-down frequency storage]	-		0.00	

- Select 8 in Frq code of drive group
- Select the terminal which uses as a up-down drive among multi-function input (P1~P8)
- If you select P7 and P8 as an up-down drive terminal, select each 15 (frequency increase command) and 16 (frequency decrease command) in the I23 and I24 of I/O group.
- If you select P6 terminal as an up-own save initial terminal, select 25 (up-down save initialization) as above.
- Up/down Save function: If F63, 'Save up/down frequency', is set to 1, the frequency before the inverter was stopped or decelerated is saved in F64.
- While up-down save operates, the user can initialize the saved up-down frequency by setting multi-function input terminal as a up-down frequency save initialization.

F63	Save up/down frequency select	0	Remove 'save up/down frequency'
		1	Set 'save up/down frequency'
F64	Save up/down frequency	Up/down frequency saved	

If 'Up/Down Save Frequency Initialization' signal is input while the multi-function input 'Up' or 'Down' function is applied, this signal is ignored.

Up-down mode select


Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	Frq	[Frequency setting method]	8	0~8	0	
	I17	[Multi-function input terminal P1 define]	0		0	
I/O group	I23	[Multi-function input terminal P7define]	15	0 ~ 27	6	
	124	[Multi-function input terminal P8define]	16		7	
Function group 1	F65	[Up-down mode select]	-	0~2	0	
	F66	[Up-down step frequency]	-	0~400	0.00	Hz

- Select 8 in Frq code of drive group
- Select the terminal which uses as a up-down drive among multi-function input (P1~P8)
- Operates in selected mode as a step frequency set in F66.

The up-down mode is Select as follows

F65	Up/down select	0	The reference frequency is increased according to base of Max./Min. frequency. (Initial value)		
		1	Increased as many as step frequency (F66) according to edge input		
		2	Combination of 0 and 1		
F66	Step frequency	Frequ	Frequency increased according to edge input		

When F65 is 0: If you press UP, it is increased up to Max. frequency as a speed set in the above. (If frequency limit exist, speed is increased up to upper limit.) If press DOWN, It is decreased as a speed set in the above regardless of stop method. (If frequency limit exist, speed is decreased up to lower limit.)

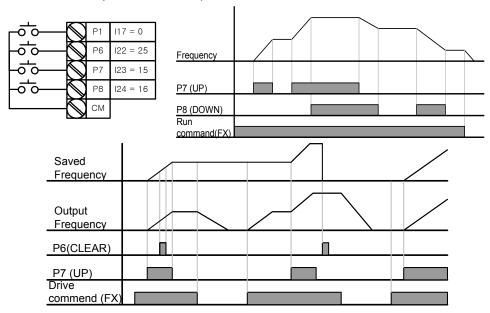

When F65 is 1: It is increased as many as step frequency set as F66 at the rising edge of multifunction input set as UP and when up-down is defined, it saves frequency at the falling edge. It is decreased as many as step frequency set as F66 at the falling edge of rising edge of multifunction input set as DOWN and when up-down is defined, it saves frequency as the falling edge. In this case, while multi-function input set as UP or DOWN is defined, if stop command is inputted, previous falling edge value is saved and if multi-function input is not defined, present frequency is not saved. The accel/decel time is same with when stetted as "0".


Down Over 3sec

Up/Dn Clr

Output Frequency

Memorized Frequency

When F65 is 2: It is increased as many as step frequency set as F66 at the rising edge of multi-function input set as UP and if it is activated for 3 second, it operates like something set as "0". It is decreased as many as step frequency set as F66 at the rising edge of multi-function input set as DOWN and if it is activated for 3 second, it operates like something set as "0" and the accel/decel time is same with when stetted as "0".

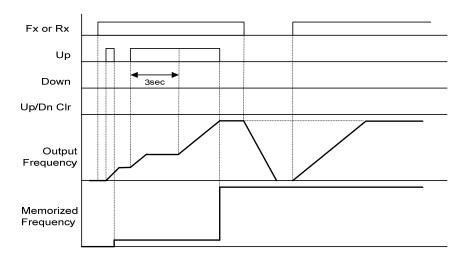


Because of UP or DOWN, when the input is entered again before it is increased as many as 1 step frequency, the input is ignored and the saved frequency is also frequency of the inactivated moment

8.4 3-Wire

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I17	[Multi-function Input terminal P1 select]	0	0 ~ 27	0	
	~	~				
	124	[Multi-function Input terminal P8 select]	17		7	

- Select the terminal from P1-P8 for use as 3-Wire operation.
- If P8 is selected, set I24 to 17 {3-Wire operation}.

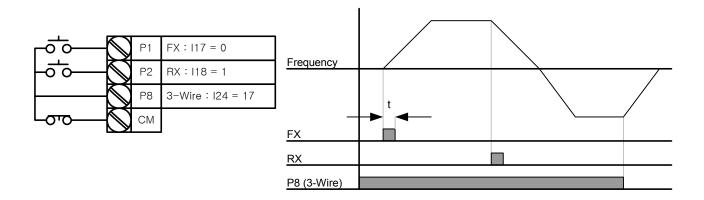


- ▶ Input signal is latched (saved) in 3-Wire operation. Therefore, inverter can be operated by Push-button switch.
- ▶ The bandwidth of pulse (t) should not be less than 50msec.

8.5 Dwell operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H 7	[Dwell frequency]	-	0.1 ~ 400	5.00	Hz
	H 8	[Dwell time]	-	0 ~ 10	0.0	sec

- In this setting, motor begins to accelerate after dwell operation is executed for dwell time at the dwell frequency.
- It is mainly used to release mechanical brake in elevators after operating at dwell frequency.
- Dwell frequency: This function is used to output torque in an intended direction. It is useful in hoisting applications to get enough torque before releasing a mechanical brake. Rated Slip frequency is calculated by the formula shown below.

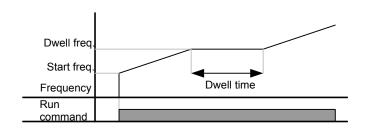

8.6 Slip compensation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H30	[Motor type select]	-	0.2 ~ 22	7.5	
	H31	[Number of motor poles]	-	2 ~ 12	4	
	H32	[Rated slip frequency]	-	0 ~ 10	2.33	Hz
	H33	[Motor rated current]	-	0.5 ~ 150	26.3	Α
	H34	[Motor No Load Current]	-	0.1 ~ 50	11.0	Α
	H36	[Motor efficiency]	-	50 ~ 100	87	%
	H37	[Load inertia rate]	-	0~2	0	
	H40	[Control mode select]	1	0 ~ 3	0	

- Set H40 [Control mode select] to 1 {Slip compensation}.
- This function enables the motor to run in constant speed by compensating inherent slip in an induction motor.
- ▶ H30: Set the motor type connected to the inverter output side.

H30	[Motor type select]	0.2	0.2kW
		~	
		22.0	22.0kW

- ▶ H31: Enter the pole number on the Motor nameplate.
- ▶ H32: Enter the slip frequency in accordance with the following formula and motor nameplate.

$$f_s = f_r - \left(\frac{rpm \times P}{120}\right)$$

Where, f_s = Rated slip frequency

 f_r = Rated frequency

rpm = Motor rated RPM

P = Motor pole number


Ex) Rated freq.: 60Hz, Rated RPM: 1740rpm, Poles: 4,

$$f_s = 60 - \left(\frac{1740 \times 4}{120}\right) = 2Hz$$

- ▶ H33: Enter the motor nameplate rated current.
- ▶ H34: Enter the measured current when the motor is running at rated frequency after the load is removed. Enter 50% of the rated motor current when it is difficult to measure the motor no load current.
- ▶ H36: Enter motor efficiency on the nameplate.
- ▶ H37: Select load inertia based on motor inertia as shown below.

H37	[Load inertia rate]	0	Less than 10 times motor inertia
		1	About 10 times motor inertia
		2	Greater than 10 times motor inertia

As the loads are heavier, the speed gap between rated RPM and synchronous speed is widening (see the figure below). This function compensates for this inherent slip.

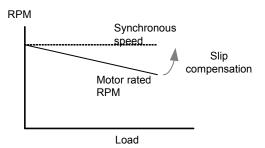

8.7 PID control

Group	Display	Parameter Name	Setting	Range	Default	Uni t
Function group 2	H49	[PID Operation select]	1	0 ~ 1	0	-
	H50	[PID Feedback select]	-	0 ~ 1	0	-
	H51	[P gain for PID controller]	-	0 ~ 999.9	300.0	%
	H52	[Integral time for PID controller (I gain)]	-	0.1~ 32.0	1.0	sec
	H53	[Differential time for PID controller (D gain)]	-	0.0~30.0	0	sec
	H54	[PID mode select]	-	0 ~ 1	0	-
	H55	[PID output frequency high limit]	-	0.1 ~ 400	60.0	Hz
	H56	[PID output frequency low limit]	-	0.1 ~ 400	0.50	Hz
	H57	[PID reference select]	-	0~4	0	Hz
	H58	[PID unit select]	-	0~1	0	-
	H59	[PID Out Inverse]	-	0~1	0	-
	H61	[Sleep delay time]	-	0.0~2000.0	60.0	-
	H62	[Sleep frequency]	-	0.00~400	0.00	Hz

Group	Display	Parameter Name	Setting	Range	Default	Uni t
	H63	[Wake-up level]	-	0.0~100.0	35.0	%
I/O group	117~ 124	[Multi-function input terminal P1-P8 define]	21	0 ~ 27	-	-
Drive group	rEF	[PID reference]	-	0~400 /0~100	0.00 /0.0	Hz /%
	Fbk	[PID feedback]	-	0~400 /0~100	0.00 /0.0	Hz /%


- In order to control the amount of following water, pressure and temperature, do PID control to inverter output frequency.
- Select H49 of function group 2 as a 1 (PID drive select). Then REF and FBK category show. Set PID reference value in REF and real PID feedback amount is monitored at the FBK
- PID drive is classified as two which are Normal PID mode and Process PID mode. It can be set in the H54 (PID mode select)
- ▶ H50: Select the feedback type of PID controller.

H50	[PID Feedback	0	Terminal I input (0 ~ 20[mA])
	select]	1	Terminal V1 input (0 ~ 10[V])

- ▶ H51: Set the percentage of output to error. If P Gain is set to 50%, 50% of the error value will be output. Higher value can reach the target control value faster but it may cause oscillation.
- ▶ H52: Set the time to output the accumulated error value. Set the time required to output 100% when the error value is 100%. If H52 [Integral time for PID controller (I gain)] is set to 1 sec and the error becomes 100%, 100% will be output in 1 sec. Adjusting the value may reduce the nominal error. If the value is reduced, response will be faster but setting too low may lead to controller oscillation.
- ▶ H53: Set the output value to the variation of the error. The error is detected by 0.01 sec in SV-iG5A. If differential time is set to 0.01 sec and the percentage variation of error per 1 sec is 100%, 1% per 10msec is output.
- ▶ H54: PID Feed Forward Gain. Set the gain to add the target value to the PID controller output.
- ▶ H55, H56: It limits the output of the PID controller.
- ▶ H57: selects PID Reference
- ▶ H58: PID Reference and PID feedback's units are classified as two which is [Hz] and [%]. H58=0: [Hz], H58=1: [%]
- ▶ H59 : [PID Out Inverse] sets PID controller's output Invert.
- ▶ I17 ~ I24: To exchange PID to normal operation, set one of P1-P8 terminal to 21 and turn ON.
- rPM: Calculates the feedback from H50 into Motor frequency and displays it.
- rEF: indicates PID controller's command value.
- Fbk: converts feedback amount set in H50 to motor frequency.


Normal PID drive (H54=0)

PID control diagram

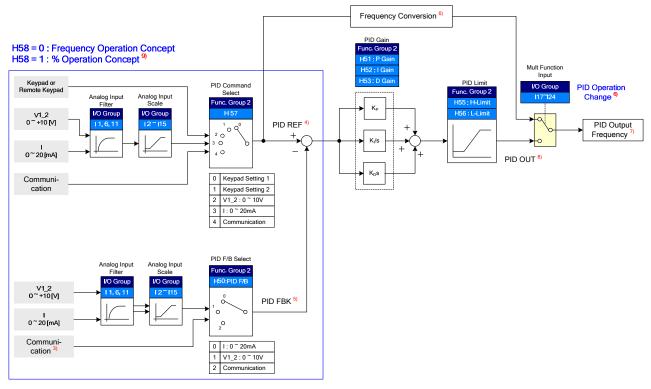


- 3) Adds RS-485 communications to PID Feedback category.
- 4) PID REF value can be changed and checked in the "rEF" of the DRV group. Unit is [Hz] when H58=0 and [%] when H58=1
- 5) PID FBK value cab be checked in the "Fbk" of the DRV group Unit is sane with the "rEF"
- 6) If PID switching is inputted to the multi-input (P1~P8), though H58 is 1, [%] is converted into [Hz].
- 7) Output frequency is displayed in the "SPD" of DRV group.
- 8) PID OUT of Normal PID is single polarity and it is limited by H55 (H-Limit) and H56 (L-Limit).
- 9) 100% is F21 (Max. frequency)

Process PID drive (H54=1)

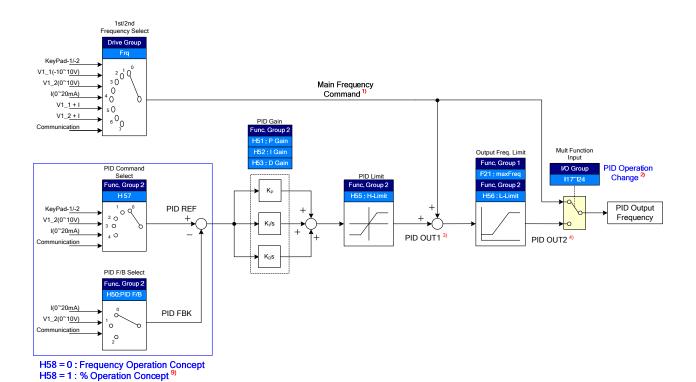

- 1) Speed command is the frequency (FRQ=8, except Up/Down) set by FRQ/FRQ2 and real output frequency is sum of speed command, PID OUT1 and PID OUT2.
- 2) If PID switching drive is selected,
- 3) PID OUT1's polarity is double. It is limited H55 (PID upper Limit).
- 4) Real output frequency PID OUT2 is limited by F21 (MaxFreq) and H56 (PID lower Limit) Other operation is same with the Normal PID.
 - Sleep & Wake-up
- In the night for example, if output frequency of PID control is maintained over sleep delay time(H61) due to not enough flux, Sleep function becomes sleep mode automatically and inverter is stop. Under sleep mode, if error of PID Reference and Feedback is over H63(Wake-up Level), Sleep mode is released and the inverter restarts.
- ▶ If stop command is input, Sleep mode is released

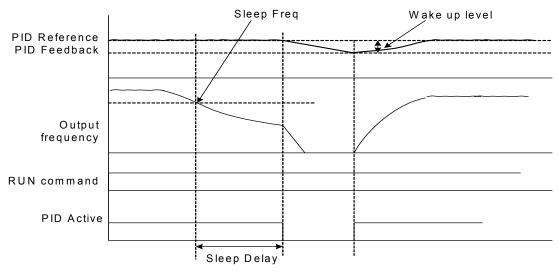

8.8 Auto-tuning

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H41	[Auto tuning]	1	0 ~ 1	0	-
	H42	[Stator resistance (Rs)]	-	0 ~ 28	-	Ω
	H44	[Leakage inductance (Lσ)]	-	0 ~ 300.00	-	mH

- Automatic measuring of the motor parameters is provided.
- The measured motor parameters in H41 can be used in Auto Torque Boost and Sensorless Vector Control.

ACAUTION

Auto tuning should be executed after stopping the motor. Motor shaft must not run by the load during H41 – [Auto tuning].

- ▶ H41: When H41 is set to 1 and press the Enter (●) key, Auto tuning is activated and "TUn" will appear on the LED keypad. When finished, "H41" will be displayed.
- ▶ H42, H44: The values of motor stator resistance and leakage inductance detected in H41 are displayed, respectively. When Auto tuning is skipped or H93 [Parameter initialize] is done, the default value corresponding to motor type (H30) will be displayed.
- Press the STOP/RST key on the keypad or turn on the EST terminal to stop the Auto Tuning.
- If Auto tuning of H42 and H44 is interrupted, the default value will be set. If H42 and H44 are finished and auto-tuning of leakage inductance is interrupted, the measured value of H42 and H44 are used and the default of leakage inductance is set.
- See page 8-16 for motor parameter default values.

∴ CAUTION

Do not enter any incorrect value as stator resistance and leakage inductance. Otherwise, the function of Sensorless vector control and Auto torque boost could be deteriorated.

8.9 Sensorless Vector Control

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H40	[Control mode select]	3	0 ~ 3	0	-
	H30 [Motor type select] H32 [Rated slip frequency]		-	0.2 ~ 22.0	-	kW
			-	0 ~ 10	-	Hz
	H33	[Motor rated current]	-	0.5 ~ 150	-	Α
	H34	[Motor No Load Current]	-	0.1 ~ 20	-	Α
	H42	[Stator resistance (Rs)]	-	0 ~ 28	-	Ω
	H44	[Leakage inductance (Lσ)]	-	0~300.00	-	mH
Function group 1	F14	[Time for energizing a motor]	-	0.0~60.0	0.1	sec

If H40 – [Control mode select] is set to 3, Sensorless vector control will become active.

ACAUTION

Motor parameters should be measured for high performance. It is highly recommended H41 – [Auto tuning] be done prior to proceeding operation via Sensorless vector control.

- ▶ Ensure that the following parameters are entered correctly for high performance in Sensorless vector control.
- ▶ H30: Select motor type connected to inverter output.
- ▶ H32: Enter rated slip frequency based on motor nameplate RPM and rated frequency (See 8-8).
- ▶ H33: Enter motor nameplate rated current.
- ▶ H34: After removing the load, select H40 [Control mode select] to 0 {V/F control} and run the motor at 60Hz. Enter the current displayed in Cur-[Output current] as motor no load current. If it is difficult to remove the load from the motor shaft, enter the value either 40 to 50% of the H33 [Motor rated current] or the factory default.
- ▶ In case that occur torque riffle while high speed driving, lower H34-[No load current] to 30%.
- ▶ H42, H44: Enter the value of the parameter measured during H41 [Auto tuning] or the factory default.
- ▶ F14: This parameter accelerates the motor after pre-exciting the motor for the set time. The amount of the pre-exciting current is set in H34- [Motor no load current].
- ▶ Directly enter the motor nameplate value except motor rating when 0.2kW is used.


Factory default by motor ratings

Input voltage	Motor rating [kW]	Current rating [A]	No-load current [A]	Rated slip freq [Hz]	Stator resistance [Ω]	Leakage inductance [mH]
	0.2	1.1	0.6	2.33	14.0	122.00
	0.4	1.8	1.2	3.00	6.70	61.00
	0.75	3.5	2.1	2.33	2.46	28.14
	1.5	6.5	3.0	2.33	1.13	14.75
	2.2	8.8	4.4	2.00	0.869	11.31
200	3.7	12.9	4.9	2.33	0.500	5.41
200	5.5	19.7	6.6	2.33	0.314	3.60
	7.5	26.3	11.0	2.33	0.196	2.89
	11.0	37.0	12.5	1.33	0.120	2.47
	15.0	50.0	17.5	1.67	0.084	1.12
	18.5	62.0	19.4	1.33	0.068	0.82
	22.0	76.0	25.3	1.33	0.056	0.95
	0.2	0.7	0.4	2.33	28.00	300.00
	0.4	1.1	0.7	3.0	14.0	177.86
	0.75	2.0	1.3	2.33	7.38	88.44
	1.5	3.7	2.1	2.33	3.39	44.31
	2.2	5.1	2.6	2.00	2.607	34.21
400	3.7	6.5	3.3	2.33	1.500	16.23
400	5.5	11.3	3.9	2.33	0.940	10.74
	7.5	15.2	5.7	2.33	0.520	8.80
	11.0	22.6	7.5	1.33	0.360	7.67
	15.0	25.2	10.1	1.67	0.250	3.38
	18.5	33.0	11.6	1.33	0.168	2.46
	22.0	41.0	13.6	1.33	0.168	2.84

8.10 Energy-saving operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F40	[Energy-saving operation]	-	0 ~ 30	0	%

- Set the amount of output voltage to be reduced in F40.
- Set as the percent of Max output voltage.
- For fan or pump applications, energy consumption can be dramatically reduced by decreasing the output voltage when light or no load is connected.

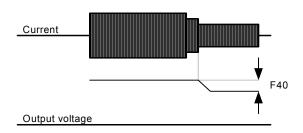

8.11 Speed search

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H22	[Speed search select]	-	0 ~ 15	0	
group Z	H23	[Current level]	-	80 ~ 200	100	%
	H24	[Speed search P gain]	-	0 ~ 9999	100	
	H25	[Speed search I gain]	-	0 ~ 9999	200	
I/O group	154	[Multi-function output terminal select] 15		0 ~ 19	12	
	155	[Multi-function relay select]	15		17	


- This is used to prevent possible fault from occurring if the inverter outputs the voltage during operation after the load is removed.
- The inverter estimates the motor rpm based on output current. Therefore, detecting exact speed is difficult.

The following table shows 4 types of Speed search selection.

H22		Speed search during H20 – [Power ON start]	Speed search during Instant Power Failure restart	Speed search during H21- [Restart after fault reset]	Speed search during Acceleration
		Bit 3	Bit 2	Bit 1	Bit 0
	0	-	-	-	-
	1	-	-	-	✓
	2	-	-	✓	-
	3	-	-	✓	✓
	4	-	✓	-	-
	5	-	✓	-	✓
	6	-	✓	✓	-
	7	-	✓	✓	✓
	8	✓	-	-	-
	9	✓	-	-	✓
	10	✓	-	✓	-
	11	✓	-	✓	✓
	12	✓	✓	-	-
	13	✓	✓	-	✓
	14	✓	✓	✓	-
	15	✓	✓	✓	✓

- ▶ H23: Limits current during Speed search. Set as the percent of H33.
- ▶ H24, H25: Speed search is activated via PI control. Adjust P gain and I gain corresponding to the load characteristics.
- ▶ I54, I55: Signal of active Speed search is given to external sequence via Multi-function output terminal (MO) and Multi-function relay output (3ABC).

▶ EX) Speed search during Instant Power Failure restart

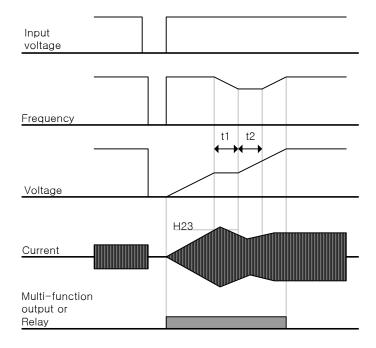


- When the input power is cut off due to instant power failure, the inverter outputs Low voltage trip (LV) to hold the output.
- When the power is restored, the inverter outputs the frequency before the low voltage trip and the voltage is increased due to PI control.
- t1: If current is increasing over the preset level in H23, the rise in voltage will stop and the frequency is decreased.
- t2: If the opposite of t1 occurs, the increase in voltage starts again and the decrease in frequency stops.
- When the frequency and voltage are restored back to the nominal level, acceleration will continue at the frequency before trip.
- ▶ Speed search operation is suitable for loads with high inertia. Stop the motor and restart when friction in load is high.
- ▶ SV-iG5A keeps normal operation when instant power failure occurs and power is restored in 15msec for the use of its inverter rating.
- Inverter DC link voltage can vary depending on output load quantity. Therefore, Low Voltage trip may occur when instant power failure is maintained over 15msec or output is higher than its rating.
- ▶ Instant power failure specification is applied when input voltage to Inverter is 200~230V AC for 200V class, or 380~480V AC for 400V class.

8.12 Auto restart try

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H26	[Number of Auto Restart try]	-	0 ~ 10	0	
	H27	[Auto Restart time]	-	0 ~ 60	1.0	sec

- This parameter sets the number of times auto restart is activated in H26.
- It is used to prevent the system down caused by internal protection function activated by the causes such as noise.
- ▶ H26: Auto restart will become active after the H27. H26 [Number of Auto restart try] is reduced by 1 when it is active. If the trip outnumbers the preset restart try, auto restart function is deactivated. If the setting is reset via the control terminal or the STOP/RST key on the keypad, the number of auto restart try set by user is automatically entered.
- ▶ If there is no more trip occurring for 30 sec after Auto restart operation, the H26 is restored to the preset value.
- When operation is stopped due to Low voltage {Lvt} or Emergency stop {EST}, Inverter Overheat {Oht}, and Hardware Trip {HWt}, Auto restart will be deactivated.
- ▶ After the H27- [Auto Restart time], the motor starts acceleration automatically via speed search (H22-25).
- ▶ The following pattern is shown when the H26 [Number of auto restart try] is set to 2.

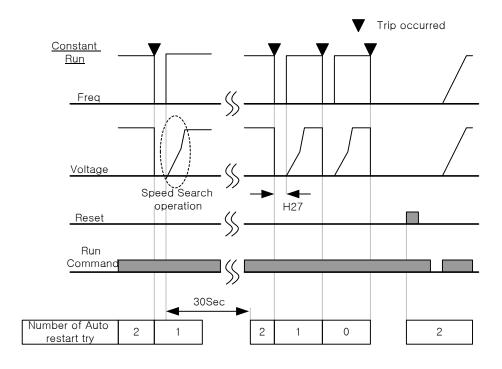

8.13 Operating sound select (Carrier frequency change)

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H39	[Carrier frequency]	-	1 ~ 15	3	kHz

This parameter affects the sound of the inverter during operation.


H39 When setting high,	When setting carrier frequency	Motor sound reduced
	riigri,	Inverter heat loss increased
		Inverter noise increased
		Inverter leakage current
		increased

8.14 2nd motor operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H81	[2nd motor accel time]	-	0 ~ 6000	5.0	sec
	H82	[2nd motor decel time]	-	0 ~ 6000	10.0	sec
	H83	[2nd motor base freq.]	-	30 ~ 400	60.00	Hz
	H84	[2nd motor V/F pattern]	-	0 ~ 2	0	
	H85	[2nd motor Positive torque boost]	-	0 ~ 15	5	%
	H86	[2nd motor Negative torque boost]	-	0 ~ 15	5	%
	H87	[2nd motor stall prevention level]	-	30 ~ 150	150	%
	H88	[2nd motor electronic thermal level for 1 min]	-	50 ~ 200	150	%
	H89	[2nd motor electronic thermal level for continuous operation]	-	50 ~ 150	100	%
	H90	[2nd motor rated current]	-	0.1~100	26.3	Α
I/O group	I17	[Multi-function Input terminal P1Function select]	-	0 ~ 27	0	
	~	~				
	124	[Multi-function Input terminal P8Function select]	12		7	

- <u>Set the terminal among Multi-function input P1 thru P5 for second motor operation.</u> To define the terminal P5 as second motor operation, set I24 to 12.

- ▶ Used when an inverter operates 2 motors connected to two different types of the loads.
- ▶ 2nd motor operation does not drive 2 motors at the same time.
- As the figure below, when using two motors with an inverter by exchanging them, select one motor from 2 motors connected. When 1st selected motor operation is stopped, select a terminal for 2nd motor and define H81-H90 parameters to drive the 2nd motor.
- ▶ Define the 2nd motor select when a motor is stopped.
- ▶ H81 ~ H90 parameters function the same as 1st motor.

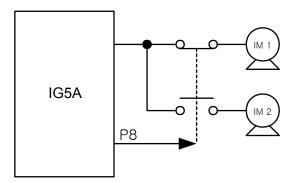

8.15 Self-Diagnostic function

How to use Self-Diagnostic function

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H60	Self-Diagnostic Selection	-	0 ~ 3	0	-
I/O group	l17	Multi-function input terminal P1 selection	-	0 ~ 27	0	-
	~	~				
	124	Multi-function input terminal P8 selection	20		7	-

- Select Self-Diagnostic function in H60, Function group 2.
- Define one terminal among P1~P8 terminals for this function.
- To define P8 for this function, set I24 to "20".

! CAUTION	
Take caution not to touch the inverter by hand or other objects while performing this function because current is flowing to the inverter output.	

- Perform Self-diagnostic function after input/output wiring of the inverter is finished.
- ▶ This function enables the user to safely check for the IGBT fault, output phase open and short, and Ground fault without disconnecting the inverter wiring.
- ▶ There are 4 ways to select.

H60 ¹⁾	Self-	U OCII-Diagnostic disabica		
	Diagnostic function	1	IGBT fault and Ground fault 2)	
		2	Output phase short & open circuit and Ground fault	
		3	Ground fault (IGBT fault, Output phase short and open circuit)	

- 1) Selecting the higher number performs the lower number's function.
- 2) Ground fault of U phase in 2.2KW ~ 4.0KW inverters and ground fault of V phase in other rating inverters may not be detected when selecting "1". Select 3 to make sure to detect all phase of U, V, W.
- When setting H60 to a specific value from 1 to 3 and turn the terminal defined for this function among P1 ~ P8 terminals ON, the corresponding function is conducted, displaying "dIAG" and the previous menu will be displayed when this function is completed.
- ▶ To stop this function, press STOP/RESET key on the keypad, turn the defined terminal OFF or turn the EST terminal ON.
- When error occurs during this function, "FLtL" will be displayed. While this message is displayed, press Enter key (■), the fault type is displayed and pressing the UP(▲) or Down(▼) key shows When the fault occurs while this function is being performed, press Stop/Reset key or turn the RESET-defined terminal ON to reset the fault.

▶ The following table shows the fault type while this function is active.

No.	Display	Fault type	Diagnosis
1	UPHF	Switch above IGBT's U phase fault	Contact LSIS sales
2	UPLF	Switch below IGBT's U phase fault	representatives.
3	vPHF	Switch above IGBT's V phase fault	
4	vPLF	Switch below IGBT's V phase fault	
5	WPHF	Switch above IGBT's W phase fault	
6	WPLF	Switch below IGBT's W phase fault	
7	UWSF	Output short between U and W	Check for the short of inverter
8	vUSF	Output short between U and V	output terminal, motor
9	WvSF	Output short between V and W	connection terminal or the
			proper motor connection.
10	UPGF	Ground fault at U phase	Check for the ground fault
_11	vPGF	Ground fault at V phase	occurred at inverter output
12	WPGF	Ground fault at W phase	cable or motor or motor
			insulation damage.
13	UPOF	Output open at U phase	Check for proper connection of
14	vPOF	Output open at V phase	the motor to the inverter output
15	WPOF	Output open at W phase	or proper motor connection.

8.16 Frequency setting and 2nd drive method select

Group	Display	Parameter Name	Setting	Range	Default	Unit
	drv	Drive mode 1	-	0 ~ 4	1	-
Drive	Frq	Frequency mode 1	-	0 ~ 9	0	-
group	drv2	Drive mode 2	-	0 ~ 4	1	
	Frq2	Frequency mode 2	-	0 ~ 9	0	
I/O	I17~I24	Multi-function input	22	0 ~ 27		
group	117~124	terminal P1 select	22			

- Drive mode 1 is used when the input set as 2nd source is not entered into multi-input (I17~I24)
- Drive mode 2 can input frequency setting and drive command as a 2nd setting value by using multi-input terminal. In case of driving away from inverter by communication, it is used when quit the communication and operate by inverter.
- The switching method for Drive mode 1 and Drive mode 2 is as follows
- If multi-input terminal set as Drive mode 2 is off, it used as Drive mode 1. If multi-input terminal set as Drive mode 2 is on, it used as Drive mode2.
- ▶ Selects the self drive in the 2nd switching of drv2 among the followings

drv2	Drive mode 2	0	Operation v	ia Run/Stop key on the Keypad
		1	Terminal operation	FX: Forward Run command RX: Reverse Run command FX: Run/Stop command RX: Forward/Reverse command
		3	Operation via communication	
		4	Set to Field Bus communication	


▶ Selects the self drive in the 2nd switching of Frq2 among the followings

Frq2	Frequency mode	0	Digital	Keypad digital frequency mode1
	2	1	Digital	Keypad digital frequency mode2
				V1 terminal setting1: -10 ~ +10V
		3		V1 terminal setting2: 0 ~ +10V
		4	Analog	I terminal: 0 ~ 20mA
		5		V1 terminal setting1 + I terminal
		6		V1 terminal setting2 + I terminal
		7	Setting via F	RS-485 communication
			Up-Down (E	Digital Volume) run
		9	Set to FieldBus communication	

The following is example for switching of drv1 and drv2.

Group	Display	Parameter Name	Setting	Range	Default	Unit
	drv	Drive mode 1	3	0 ~ 4	1	-
Drive	Frq	Frequency mode 1	0	0 ~ 9	0	-
group	drv2	Drive mode 2	1	0 ~ 4	1	
	Frq2	Frequency mode 2	0	0 ~ 9	0	
I/O	124	Multi-function input	22	0 ~ 27	7	
group	124	terminal P8 input terminal	22	0 ~ 21	,	

► The following figure is drawn when setting is like the above and command frequency is 30 [Hz], F4 [stop method]=0

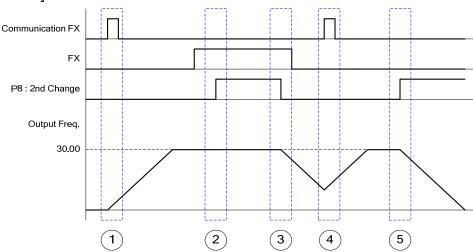

- ① Accelerate for accel time up to setting frequency by Drive 1 mode, FX signal.
- ② Drive continuously under FX is ON because DRV2 is 1 when P8 terminal input is ON and change into 2nd.
- 3 Stop gradually as stop command because DRV is communication drive when P8 terminal input is OFF and change into 1st.
- ④ Accelerate up to setting frequency for Drive 1 mode, FX signal is ON.
- ⑤ Stop gradually under FX is OFF because DRV2 is 1 when P8 terminal input is ON and change into 2nd.

!CAUTION

If you press ON while multi-function input terminal (P1 \sim P8) is set to 2nd Source, frequency command and drive command is changed to Drive mode 2. So you should check Drive mode 2 before input multi-function terminal.

8.17 Over voltage trip prevention deceleration and Power Braking

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	F 4	Select stop method	3	0 ~ 3	0	
group 1	F 59	BIT 0: stall prevention under Accel				
		BIT 1: stall prevention under constant speed BIT 2: stall prevention under Decel	_	0 ~ 7	0	
	F 61	Select voltage limit under Decel	-	0 ~ 1	0	

- ▶ To prevent overvoltage trip when reducing speed, set BIT2 of F59 to 1 and set 3 of F4 for Power Braking.
- Overvoltage trip prevention when reducing speed: a function preventing overvoltage trip when reducing speed or at stop by using the regeneration braking power.
- Power Braking: Adjusting the deceleration slope or accelerate again, when inverter's DC voltage rises above a certain level by the electric motor's regeneration energy. It can be used when short deceleration time without braking resistance is needed. However, be aware that the deceleration time can get longer than the set one and when it's used at a load that frequently decelerates, be cautious of damage caused by the motor's over heating.

∴ Caution

Stall prevention and Power Braking only operate when decelerating, and Power Braking has the precedence. That is, when BIT2 of F59 and Power Braking of F4 are both set, Power Braking operates.

F61(selecting voltage restriction when decelerating) is visible when BIT2 of F59 is set.


Overvoltage trip may occur, if the deceleration time is too short or the inertia too big.

8.18 External brake control

Group	Code	Name	Set nr.	Limit	Default	Unit
Function Group 2	H 40	Controlling method select	0	0~3	0	
In/Output	I 82	Brake open current	-	0~180.0	50.0	%
Group	I 83	Brake open delay time	-	0~10.00	1.00	Sec.
	I 84	Brake open CW Freq.	-	0~400	1.00	Hz
	I 85	Brake open CCW Freq.	-	0~400	1.00	Hz
	I 86	Brake close delay time	-	0~10.00	1.00	Sec.
	I 87	Brake close Freq.	-	0~400	2.00	Hz
	I 54	Multi-function output terminal select	19	0~ 19	12	
	I 55	Multi-function relay select	19	0~ 19	17	

^{■ 182~87} is visible only when I 54 or I 55 is set to 19.

- ▶ Used to control on, off operation of electronic brake of a load system. It only operates when set value of control mode(H 40) is 0 (V/F control). Build sequence after checking set control mode.
- ▶ When brake control is in operation, DC brake and dwell run do not operate when starting up.
- Brake open Sequence
- When the electric motor is given instructions to run, the inverter accelerates CW or CCW to the brake open frequency (I 84, I 85). After reaching the brake open frequency, the current running through the motor reaches brake open current(I82) and puts out brake open signals to multifunction output terminals or output relays that are set for brake control.
- Brake close sequence
- During run, the electric motor decelerates when stop instruction is given. When output frequency reaches brake close frequency, it stops decelerating and puts out brake close signal to the set output terminal. Frequency turns "0" after keeping the frequency for brake close delay time(I86).

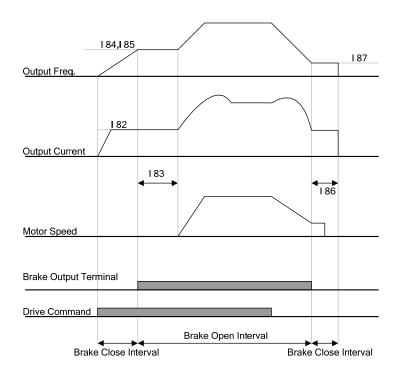

In Case of V/F Constant Control on Control Mode Select

↑ Caution

External Brake control is only used in V/F uniform control, and the brake open frequency has to be set smaller than close frequency.

8.19 Kinetic energy buffering

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	H64	KEB operation select	1	0~1	0	
Group 2	H65	KEB operation start level	-	110.0 ~ 140.0	130.0	-
	H66	KEB operation stop level	-	110.0 ~ 145.0	135.0	%
	H67	KEB operation gain	-	1 ~ 20000	1000	-
	H37	Load inertia	0	0~2	0	-

- When power failure occurs in the input power, DC link voltage of the inverter gets low and low voltage defect occurs resulting a cut of the output. Its function is to maintain the voltage of DC link by controlling output frequency of the inverter during the time of power failure. That is, it can keep the time from the point of power failure to low voltage defect long.
- ▶ Selects energy buffering operation when input power is cut. If H64 is set to 0, it operates normal deceleration run until low voltage occurs. When H64 is set to 1, it controls the inverter output frequency and charges the energy occurred from the motor to the inverter DC.
- ▶ H 65(KEB operation start level), H 66(KEB operation stop level): Selects starting and stopping point of the energy buffering operation. Set the stop level(H65) higher than the start level(H 66) setting the low voltage defect level as standard.
- ▶ H 37(Load inertia): Uses the momentum amount of the load inertia to control energy buffering operation. If the inertia ratio is set high, the frequency change range gets small when running energy buffering.

8.20 DRAW drive

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	F70	DRAW mode select	-	0 ~ 3	0	-
Group 1	F71	DRAW ratio	-	0.0 ~ 100.0	0.0	%

- ▶ It's a kind of open loop tension control that uses the speed difference of motor running under main frequency command to keep material's tension in between steady.
- The ratio reflected in the output frequency differs according to the selection of F70(DRAW mode select)


F70	Draw	0	Draw not operated
	Operation	1	V1(0~10V) input draw operation
		2	I(0~20mA) input draw operation
		3	V1(-10~10V) input draw operation

▶ Select 1 and 2 for F70

The center value of analogue input (selected by the set value of 16~115) as standard, if the input is big it gets (+), if small (-) and gets reflected in the output frequency as the ratio set in F71.

▶ Select 3 for F70

OV as standard, if analog input voltage is big, it gets (+), if small (-) and gets reflected in the output frequency as the ratio set in F71.

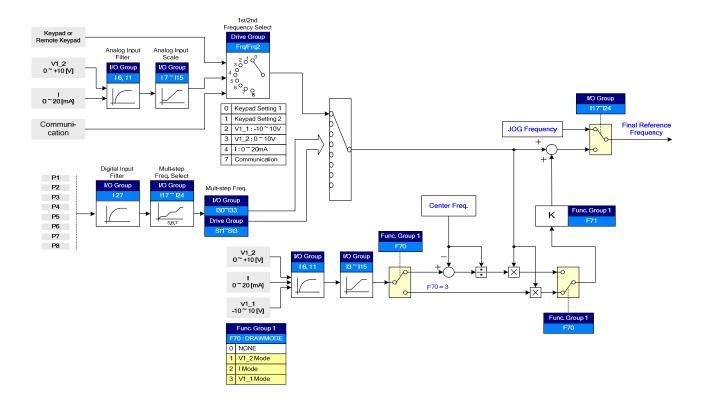

DRAW operation example

If draw operation is set to 30Hz, F70=3(V1: -10V \sim 10V), F71=10.0% selected, (I3 \sim I15 = plant shipment) Frequency that gets changed by DRAW operation is 27Hz(V1=-10V) \sim 33Hz(V1=10V)

⚠ Caution

When operating DRAW, set command frequency to FRQ/FRQ2 and set the rest of it from F70(DRAW mode select). For example, if FRQ=2(V1) and F70=1(V1), it does not operate.

8.21 2 Phase PWM drive

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	H48	PWM controlling mode	1	0 ~ 2	0	
Group 2		O: NORMAL PWM				
		1: 2 phase PWM				

▶ Heat loss and leakage current from inverter can be reduced when H48 is set to 1(2 phase PWM) according to the ratio of load.

8.22 Cooling fan control

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	H77	[Cooling fan control]	1	0 ~ 2	0	
group 2			2			

- Control the On/ Off of the cooling fan to cool the Inverter heatsink.
- ▶ When it is set to 0:
- -. Cooling fan begins to operate when power ON.
- -. Cooling fan is stopped when inverter main circuit voltage becomes low voltage due to power off.
- ▶ When it is set to 1:
- -. Cooling fan begins to operate when power is turned ON with operating command ON.
- -. Cooling fan is stopped when operating command is turned Off with inverter output shut off.
- -. Cooling fan keeps operating when heat sink temperature exceeds a certain limit regardless of o perating command.
- -. Used when frequent Run/Stop or quite stop is required. This may make the cooling fan life long er.
- ▶ When it is set to 2:
- -. The cooling fan is not active even when power is supplied to the inverter and an operating com mand is input. However, if the temperature of the inverter heat sink is higher than a certain d egree, cooling fan is active.

8.23 Operating mode select when cooling fan trip occurs

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H78	[Operating mode when cooling fan trip occurs]	-	0 ~ 1	0	-
I/O group	154	[Multi-function output terminal select]	18	0 ~ 19	12	-

	155	[Multi-function relay select]	18	0 ~ 19	17	-
--	-----	-------------------------------	----	--------	----	---

- Select 0 or 1 in H78 code.
- If H78 code is set to 0 (continuous operation), alarm can be output in I54 or I55.
- ▶ 0: continuous operation when cooling fan trip occurs.
- -. Operation is not stopped regardless of cooling fan trip.
- -. When I54 or I55 is set to 18 (cooling fan fault alarm), fault alarm signal can be output using Mul ti-function output terminal or Multi-function relay.

ACAUTION

If operation is continued after cooling fan trip occurs, Overheat trip may happen and protective function be activated. It also reduces the life of main components due to rise in inverter inner temperature.

- ▶ 1: operation stopped at cooling fan fault
- -. When cooling fan fault occurs, message is displayed on the LED and operation is stopped.
- -. If I54 or I55 is set to 17(Fault output), fault message is displayed.

8.24 Parameter read/write

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H91	[Parameter read]	1	0 ~ 1	0	
	H92	[Parameter write]	1	0 ~ 1	0	

Used to read/write Inverter Parameters using remote keypad.

△CAUTION


Take caution when Parameter write (H92) is executed. By doing this, parameters in inverter are cleared and parameters in remote keypad are copied to inverter.

Parameter read

Step	Note	Keypad display
1	Move to H91 code.	H91
2	Press Enter (●) key once.	0
3	Press Up (▲) key once.	Rd
4	Press Enter (●) key twice.	rd
5	H91 is displayed when Parameter read is finished.	H91

Parameter write

Step	Note	Keypad display
1	Move to H92 code.	H92
2	Press Enter (●) key once.	0
3	Press Up (▲) key once.	Wr
4	Press Enter (●) key twice.	Wr
5	H91 is displayed when Parameter read is finished.	H92

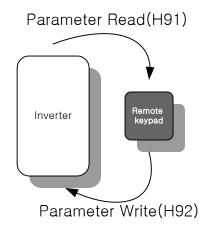

8.25 Parameter Initialize / Lock

Parameter initialize

Group	Display	Parameter Name	Range		Default
Function group 2	H93	[Parameter initialize]	0	-	0
group 2			1	4 groups initialize	
			2	Drive group initialize	
			3	F 1 group initialize	
			4	F 2 group initialize	
			5	I/O group initialize	

- Select the group to be initialized and perform it in H93 code.
- ▶ Press Enter (●) key after setting in H93. H93 will be displayed again after initialization is complete.

Password register

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	H94	[Password register]	-	0 ~ FFFF	0	
group 2	H95	[Parameter lock]	-	0 ~ FFFF	0	

- Register password for Parameter lock (H95).
- Password should be Hex decimal. (0 ~ 9, A, B, C, D, E, F)

ACAUTION

After setting modification lock function of H95, **Do not forget the registered password.** if you try to release lock, you need the registered password.

- ▶ Factory default password is 0. Enter the new password except 0.
- ▶ Follow the steps below when you register the password for the first time.

Step	Note	Keypad display
1	Move to H94 code.	H94
2	Press Enter (●) key twice.	0
3	Register password. (Ex: 123)	123
4	123 will blink when Enter (●) key is pressed.	123
5	Press Enter (●) key.	H94

▶ Follow the table below to change the password. (Current PW: 123 -> New PW: 456)

Step	Note	Keypad display
1	Move to H94 code.	H94
2	Press Enter (●) key.	0
3	Enter any number (e.g.: 122).	122
4	Press the Enter (●) key. 0 is displayed because wrong value was entered. Password cannot be changed in this status.	0
5	Enter the right password.	123
6	Press Enter (●) key.	123
7	Enter the new password.	456
8	Press the Enter (●) key. Then "456" will blink.	456
9	Press Enter (●) key.	H94

CHAPTER 9 - MONITORING

9.1 Operating status monitoring

Output current

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	CUr	[Output current]	-			

Inverter output current can be monitored in Cur.

Motor RPM

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	rPM	[Motor RPM]	-			
	H31	[Number of motor poles]	-	2 ~ 12	4	
Function	H49	[PID control select]	-	0 ~ 1	0	
group 2	H74	[Gain for Motor rpm display]	-	1 ~ 1000	100	%

- Motor rpm can be monitored in rPM.
- ▶ When H40 is set to 0 {V/F control} or 1 {PID control}, the Inverter output frequency (f) is displayed in RPM using the formula below. Motor slip is not considered.

$$RPM = \left(\frac{120 \times f}{H31}\right) \times \frac{H74}{100}$$

- In case that H49 code is 1, Feed back amount is converted into frequency.
- H31: Enter the number of rated motor poles on the nameplate.
- H74: This parameter is used to change the motor speed display to rotating speed (r/min) or mechanical speed (m/min).

Inverter DC Link Voltage

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	dCL	[Inverter DC Link Voltage]	-			

- Inverter DC link voltage can be monitored in dCL.
- \checkmark 1 times the value of input voltage is displayed while motor is at a stop.

User display select

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	vOL	[User display select]	-			
Function group 2	H73	[Monitoring item select]	-	0 ~ 2	0	

- The selected item in H73- [Monitoring item select] can be monitored in vOL- [User display select.
- If output power or torque is selected, Por or tOr will be displayed.

▶ H73: Select one of the desired item numbers.

H73	[Monitoring item select]	0	Output voltage [V]	
		1	Output power [kW]	
		2	Torque [kgf · m]	

▶ Enter motor efficiency indicated on motor nameplate to H36 to display correct torque.

Power on display

Group	Code	Parameter	Sett	ing range	Initial
Function	H72	[Power on display]	0	Frequency command (0.00)	0
group 2			1	Accel time (ACC)	
			2	Decel time (DEC)	
			3	Drive mode (drv)	
			4	Frequency mode (Frq)	
			5	Multi-step frequency 1(St1)	
			6	Multi-step frequency 2(St2)	
			7	Multi-step frequency 3(St3)	
			8	Output current (CUr)	
		•	9	Motor rpm (rPM)	
			10	Inverter DC link voltage (dCL)	
			11	User display select (vOL)	
			12	Fault display 1(nOn)	
			13	Operating direction select (drC)	
			14	Output current 2	
			15	Motor rpm 2	
			16	Inverter DC link voltage 2	
			17	User display select 2	


- Select the parameter to be displayed on the keypad when Power ON.
- The output current, motor rpm, DC link voltage and User display select are displayed directly when 14~17 are set.

9.2 Monitoring the I/O terminal

Input terminal status monitoring

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	125	[Input terminals status display]	-			


- Current input terminal status (ON/Off) can be monitored in I25.
- ▶ The following is displayed when P1, P3, P4 are ON and P2, P5 are OFF.

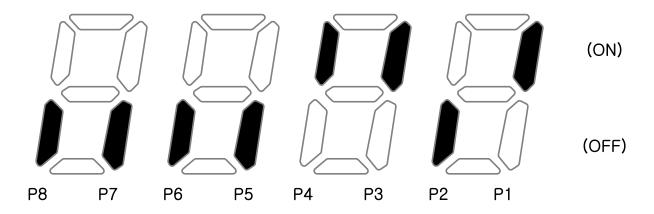

Output terminal status monitoring

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	126	[Output terminals status display]	-			

- Current output terminals (MO, relays) status (ON/Off) can be monitored in I26.
- ▶ The followings are displayed when Multi-function output terminal (MO) is ON with Multi-function relay OFF.

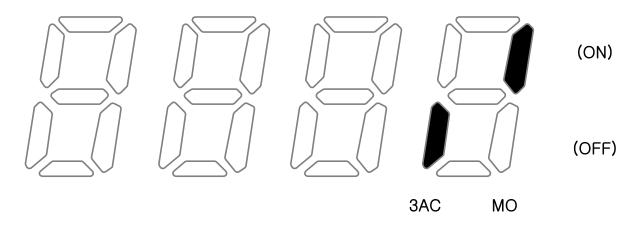

9.3 Monitoring fault condition

Monitoring current fault status

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	nOn	[Current Fault Display]	-			

- Fault occurred during operation is displayed in nOn.
- Up to 3 kinds of faults can be monitored.
- ▶ This parameter gives information on fault types and the operating status at the time of the fault. Refer to Page 4-11 or 9-5 for keypad setting.


<u> </u>	o ioi noppara oo	9-	
Fault types	Frequency	3000	
	Current	5.0	
	Accel/Decel Information	REE.	Fault during Accel
		of E C	Fault during Decel
		540	Fault during constant run

- ▶ Refer to Page 12-1 on fault types.
- Fault History Monitoring

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H 1	[Fault history 1]	-			
g. 64p 2	~	~				
	H 5	[Fault history 5]				
	H 6	[Reset fault history]	-	0 ~ 1	0	

- H 1 ~ H 5: Up to 5 faults information is stored.
- H 6: Previous fault information stored in the code H1 thru H5 is all cleared.
- ▶ When a fault occurs during operation, it can be monitored in the **nOn**.

- ▶ When the fault condition is reset via the STOP/RST key or multi-function terminal, information displayed in the **nOn** will be moved to H1. In addition, the previous fault info stored in H1 will be automatically moved to H2. Therefore, the updated fault info will be stored in the H1.
- ▶ When more than 1 fault occurred at the same time, up to 3 types of faults will be stored in one code.

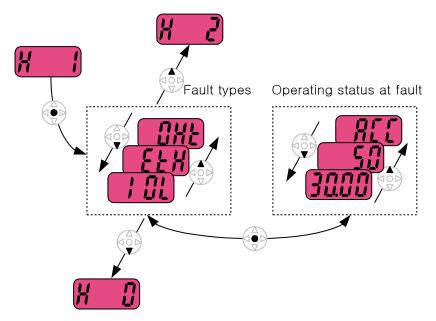


9.4 Analog Output

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	150	[Analog output item select]	-	0 ~ 3	0	
	I51	[Analog output level adjustment]	-	10 ~ 200	100	%

- Output item and the level from the AM terminal are selectable and adjustable.
- ▶ I50: The selected item will be output to Analog output terminal (AM).

150	Analog output			Item correspo	nding to 10V
	item select			200V	400V
		0	Output frequency.	Max Frequence	cy (F21)
		1	Output current	150% of Inver	ter rated
		2	Output voltage	282Vac	564Vac
		3	Inverter DC link voltage	400Vdc	800Vdc

 ▶ I51: If you want to use Analog output value as a gauge input, the value can be adjustable according to various gauge specifications.



9.5 Multi-function output terminal (MO) and Relay (3AC)


Group	Code	Parameter	Settin	g range			Initia	
	IE 4	[Multi-function	0	FDT-1			12	
	I54	output terminal select]	1	FDT-2				
	155	[Multi-function 2 FDT-3					17	
	I55	relay select] 3 FDT-4						
			4	FDT-5				
			5	Overload (C	DLt}			
			6	Inverter Ove	erload {IOLt}			
			7	Motor stall {	STALL}		-	
			8	Over voltag	e trip {OV}		_	
			9	Low voltage	trip {LV}		-	
			10	Inverter ove	erheat {OH}		-	
			11	Command I	OSS			
			12	During run				
			13	During stop			-	
			14	During cons	stant run		-	
I/O group			15	During spee	ed searching			
J I			16	Wait time for	r run signal i	nput		
			17	Fault output	t		_	
			18	Cooling fan	trip alarm			
			19	Brake contr	ol signal			
	I 56	[Fault relay output]		When setting the H26– [Number of auto restart tries]	When the trip other than low voltage trip occurs	When the low voltage trip occurs		
				Bit 2	Bit 1	Bit 0		
			0	-	-	- 🗸	2	
			2	-	- ✓	-	-	
			3	-	✓	✓		
			4	√	-	-	_	
			5	√	-	✓	-	
			6 7	√	✓	- ✓	-	

Select the desired item to be output via MO terminal and relay (30AC).

- ▶ I56: When 17 {Fault display} is selected in I54 and I55, Multi-function output terminal and relay will be activated with the value in I56.
 - 0: FDT-1
- ▶ Check whether the output frequency matches the user-setting frequency.
- ► Active condition: Absolute value (preset frequency output frequency) <= Frequency Detection Bandwidth/2

Group	Display	Paramete	er Name	Setting	Range	Default	Unit
I/O group	I53	[Detected Bandwidth]	Frequency	-	0 ~ 400	10.00	Hz


Cannot be set above Max frequency (F21).

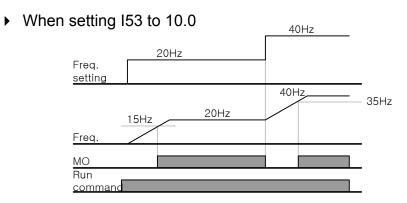

- 1: FDT-2
- ▶ Activated when the preset frequency matches frequency detection level (I52) and FDT-1 condition is met.
- Active condition: (Preset frequency = FDT level) & FDT-1

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I52	[Detected Frequency level]	-	0 - 400	30.00	Hz
	I53	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	


- Cannot be set above Max frequency (F21).
- ▶ When setting I52 and I53 to 30.0 Hz and 10.0 Hz, respectively

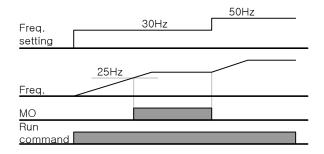

- 2: FDT-3
- Activated when run frequency meets the following condition.
- ▶ Active condition: Absolute value (FDT level run frequency) <= FDT Bandwidth/2

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I52	[Detected Frequency level]	-	0 400	30.00	Hz
	I53	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	

- Cannot be set above Max frequency (F21).
- ▶ When setting I52 and I53 to 30.0Hz and 10.0 Hz, respectively

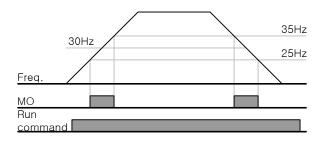

- 3: FDT-4
- ▶ Activated when run frequency meets the following condition.


Active condition:

Accel time: Run Frequency >= FDT Level

Decel time: Run Frequency > (FDT Level – FDT Bandwidth/2)

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I52	[Detected Frequency level]	-	0 ~ 400	30.00	Hz
	I53	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	

- Cannot be set above Max frequency (F21).
- ▶ When setting I52 and I53 to 30.0Hz and 10.0 Hz, respectively

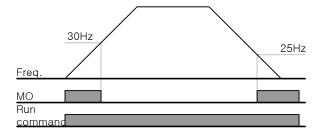

• 4: FDT-5

Activated as B contact contrast to FDT-4.


Active condition:

Accel time: Run Frequency >= FDT Level

Decel time: Run Frequency > (FDT Level – FDT Bandwidth/2)


Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I52	[Detected Frequency level]	-	0 - 400	30.00	Hz
	I53	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	

- Cannot be set above Max frequency (F21).
- ▶ When setting I52 and I53 to 30.0Hz and 10.0 Hz, respectively

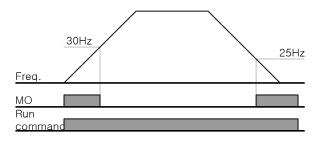


- 5: Overload (OLt)
- ▶ Refer to page 10-2.
 - 6: Inverter Overload (IOLt)
- ▶ Refer to page 10-6.
 - 7: Motor stall (STALL)
- Refer to page 10-3.
 - 8: Over voltage trip (Ovt)
- Activated when over voltage trip occurs due to DC link voltage exceeded 400Vdc for 200V class and 820Vdc for 400V class.
 - 9: Low voltage trip (Lvt)
- Activated when low voltage trip occurs due to DC link voltage under 180Vdc for 200V class and 360Vdc for 400V class.
 - 10: Inverter heatsink overheat (OHt)
- Activated when the heatsink is overheated.
 - 11: Command loss
- Activated when Analog (V1,I) and RS485 communication commands are lost.

 
- 12: During operation
- Activated when run command is input and inverter outputs its voltage.



 - 13: During stop
- Activated during stop without active command.



 - 14: during constant run
- Activated during constant speed operation.



- 15: During speed searching
- Refer to page 8-17.
 - 16: Wait time for run signal input
- This function becomes active during normal operation and that the inverter waits for active run command from external sequence.
 - 17: Fault output
- The parameter set in I56 is activated.
- ▶ For example, if setting I55, I56 to 17 and 2, respectively, Multi-function output relay will become active when trip other than "Low voltage trip" occurred.
 - 18: Cooling fan trip alarm
- Used to output alarm signal when H78 is set to 0(constant operation at cooling fan trip). Refer to page 8-31.
 - 19: Brake signal
- ▶ It is used for signal output when set for use of external brake signal. Refer to the page 8-26.

9.6 Output terminal select at loder communication error

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	157	[Output terminal select when communication error with keypad]	-	0 ~ 3	0	

- Select relay output or open collector output when keypad-inverter communication fails.
- Keypad and inverter CPU communication is made by serial communication, delivering information. When communication error occurs for a certain time, will be displayed and error signal can be output to MO or relays.

	MFI output relay	MFI output terminal
	Bit 1	Bit 0
0	-	-
1	-	✓
2	✓	-
3	✓	✓

- ▶ 0: Not used
- ▶ 1: Signal output to MO
- ▶ 2: Signal output to 3A, 3B contacts
- ▶ 3: Signal output to MO, 3A, 3B


CHAPTER 10 - PROTECTIVE FUNCTIONS


10.1 Electronic Thermal

Group	Code	Parameter	Set	Range	Initial	Unit
Function group 1	F50	[ETH (Electronic thermal) select]	1	0 ~ 1	0	
	F51	[Electronic thermal level for 1 minute]	-	50 ~ 200	150	%
	F52	[Electronic thermal level for continuous]	-	50 ~ 150	100	%
	F53	[Motor type]	-	0 ~ 1	0	

- Select F50 [Electronic thermal select] to 1.
- It activates when the motor is overheated (time-inverse). If current greater than set in F51 flows, inverter output is turned off for the preset time in F51- [Electronic thermal level for 1 minute].
- ▶ F51: Enter the value of max current that is capable of flowing to the motor continuously for one minute. It is set in percent of motor rated current. The value cannot be set lower than F52.
- ▶ F52: Enter the amount of current for continuous operation. Normally motor rated current is used. It cannot be set greater than F51.
- ▶ F53: For an inductance motor, cooling effects decrease when a motor is running at low speed. A special motor is a motor that uses a separately powered cooling fan maximize cooling effect even in low speed.

F53	[Motor type]	0	Standard motors having a cooling fan directly connected to the shaft					
		1	Special motor that uses a separately powered cooling fan.					

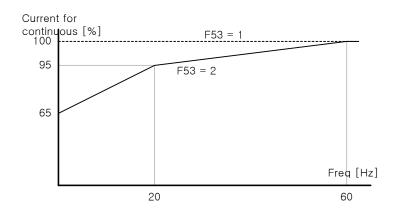

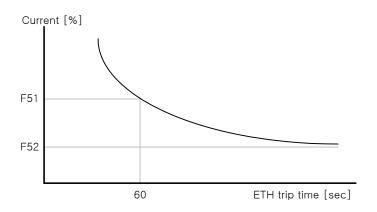


10.2 Overload Warning and trip

Overload warning

Group	Code	Parameter	Set	Range	Initial	Unit
Function	F54	[Overload warning level]	-	30 ~ 150	150	%
group 1	F55	[Overload warning time]	-	0 ~ 30	10	Sec
I/O	154	[Multi-function output terminal select]	5	0 ~ 19	12	
group	155	[Multi-function relay select]	5		17	

- Select one output terminal for this function between MO and 3ABC.
- If selecting MO as output terminal, set I54 to 5 {Overload: OL}
- ▶ F54: Set the value as a percent of motor rated current.

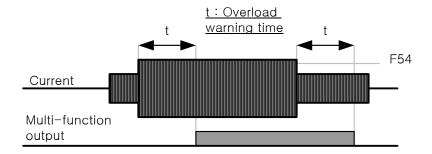

Overload trip

Group	Code	Parameter	Set	Range	Initial	Unit
Function group 1	F56	[Overload trip select]	1	0 ~ 1	1	
	F57	[Overload trip level]	-	30 ~ 200	180	%
	F58	[Overload trip time]	-	0 ~ 60	60	sec

- Set F56 to 1.
- Inverter output is turned off when motor is overloaded.
- Inverter output is turned off when excessive current flows to the motor for F58 [Overload trip time].

10.3 Stall prevention


Group	Code	Parameter	Set	Range	Initial	Unit
Function	F59	[Stall prevention select]	-	0 ~ 7	0	
group 1	F60	[Stall prevention level]	-	30 ~ 200	150	%
I/O	154	[Multi-function output terminal select]	7	0 ~19	12	
group	155	[Multi-function relay select]	7		17	


- During acceleration: Motor starts deceleration when current exceeding the value set in F60 flows.
- During constant run: Motor decelerates when current exceeding the value set in F60 flows.
- During deceleration: Motor deceleration is stopped when inverter DC link voltage rises above a certain voltage level.
- F60: The value is set as the percent of motor rated current (H33).
- I54, I55: Inverter outputs signals through multi-function output terminal (MO) or relay output (3ABC) or external sequence when stall prevention function is activated. Motor stall status still can be monitored in these codes though F59 is not selected (000).

▶ F59: Stall prevention can be set as the table below.

F59	Stall prevention	Setting	During Deceleration	During constant speed	During Acceleration
			Bit 2	Bit 1	Bit 0
		0	-	-	-
		1	-	-	✓
		2	-	✓	-
		3	-	✓	✓
		4	✓	-	-
		5	✓	-	✓
		6	✓	✓	-
		7	✓	✓	✓

- ▶ For example, set F59 to 3 to make stall prevention active during Acceleration and constant run.
- ▶ When stall prevention is executed during acceleration or deceleration, Accel/Decel time may take longer than the user-setting time.
- ▶ When stall prevention is activated during constant run, t1, t2 executed in accordance with the value set in ACC [Accel time] and dEC [Decel time].

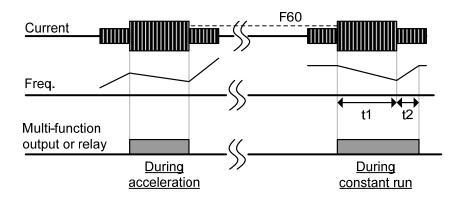

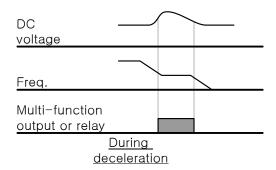

10.4 Output phase loss protection

Group	Code	Parameter	Set	Range	Initial	Unit
Function group 2	H19	[Input/Output phase loss protection select]	1	0 ~ 3	0	

- Set H19 value to 1.
- Output phase loss: Inverter output is shut off at the event of more than one phase loss among U, V and W.
- Input phase loss: Inverter output is blocked at the event of more than one phase loss among R, S and T. If there is no input phase loss, output is shut off when it is time to replace DC link capacitor.

ACAUTION


Set H33 [Motor rated current] correctly. If the actual motor rated current and the value of H33 are different, output phase loss protection function could not be activated.


H19	[Input/Output	0	Not used
	phase loss protection select]	1	Output phase loss protection
		2	Input phase loss protection
		3	Input/output phase loss protection

10.5 External trip signal

Group	Code	Parameter	Set	Range	Initial	Unit
I/O group	I17	[Multi-function input terminal P1 define]		0 ~ 27	0	
	~	~	~			
	123	[Multi-function input terminal P7 define]	18		6	
	124	[Multi-function input terminal P8 define]	19		7	

- Select a terminal among P1 thru P8 to output external trip signal.
- Set I23 and I24 to 18 and 19 to define P7 and P8 as External A contact and B contact.
- ▶ External trip signal input A contact (N.O.): Normal open contact input. When a P7 terminal set to "Ext trip-A" is ON (Closed), inverter displays the fault and turns off its output.
- ▶ External trip signal input B contact (N.C.): Normal close contact input. When a P8 terminal set to "Ext trip-B" is OFF (Open), inverter displays the fault and turns off its output.

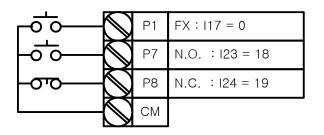

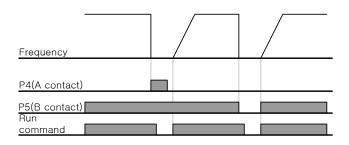

10.6 Inverter Overload

Group	Code	Parameter	Set	Range	Initial	Unit
I/O	154	[Multi-function output terminal select]	6	0 ~ 19	12	
group	155	[Multi-function relay select]	6		17	

- Inverter overload prevention function is activated when the current above inverter rated current flows.
- ▶ Multi-function output terminal (MO) or Multi-function relay (3ABC) is used as the alarm signal output during inverter overload trip.

10.7 Speed command loss

Group	Code	Parameter	Set	Range	Initial	Unit
I/O group	I16	[Select criteria for analog speed command loss]	0	0 ~ 2	0	
	l62	[Drive mode select at loss of speed command]	-	0 ~ 3	0	
	I63	[Wait time after loss of speed command]	-	0.1 ~ 120	1.0	sec
	154	[Multi-function output terminal select]	11	0 ~ 19	12	
	155	[Multi-function relay select]	11		17	


- Select the Drive mode when frequency reference set via Analog (V1, I) input terminal or communication option is lost.
- ▶ I16: This is to set the criteria for analog input signal loss.

I16	[Criteria for analog input signal loss]	0	Disabled (Does not check the analog input signal loss)
		1	When half the value set in I2, I7, I12 is entered
		2	When less than the value set in I 2, I 7, I 12 is entered


- Ex 1) The inverter determines the freq reference is lost when DRV- Frq is set to 3 (Analog V1 input), I 16 to 1 and analog input signal is less than half the value set in I 7.
- Ex 2) The inverter determines the freq reference is lost when DRV- Frq is set to 6 (V1+I), I 16 to 2 and V1 input signal is either below the value set in I 7 or I input value is less than the I 12 value.
- ▶ I62: When no frequency command is given for the time set in I63, set the drive mode as the table below.

162	[Drive mode select after loss of	0	Continuous operation with the frequency before command loss occurs
	frequency command]	1	Free run stop (output cut off)
		2	Decel to stop
		3	Lost Preset

- ▶ I54, I55: Multi-function output terminal (MO) or Multi-function relay output (3ABC) is used to output information on loss of frequency command to external sequence
- Ex) when I16 is set to 2, I62 to 2, I63 to 5.0 sec and I54 to 11, respectively,

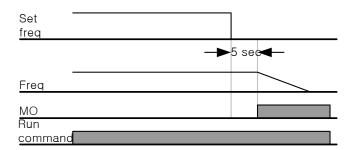

▶ Lost Preset F(I62=3): If the operating method(I62) is set as No. 3 Lost Preset in case of loss of the speed command, the protective action starts setting the frequency for continuance of operation.

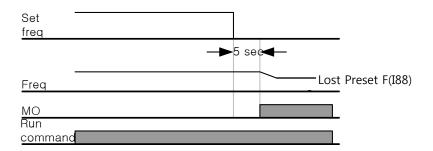

10.8 DB Resistor Enable Duty setting

Group	Code	Parameter	Set	Range	Initial	Unit
Function group 2	H75	[Enable duty limit]	1	0 ~ 1	1	
	H76	[Enable duty]	-	0 ~ 30	10	%

- Set H75 to 1.
- Set %ED (Enable Duty) in H76.
- 75: DB resistor ED limit setting

0	No limit
	<u>!</u> Caution
	Take caution when DB resistor is used over its Watt rating. Fire may result from resistor overheat. When resistor having heat detection sensor is used, sensor output can be used as external trip signal in multifunction input.
 1	ED is limited as the setting in H 76.

▶ H76: set the resistor operating rate(%ED) in one sequence of operation. Continuous usage reate is Max 15 sec and usage signal is not issued over 15 sec.

$$H76 = \frac{T_dec}{T_acc + T_steady + T_dec + T_stop} \times 100[\%]$$


Where,

T_acc: Acceleration time to reach a setting freq.


T_steady: Time for constant speed operation at setting freq.

T_dec: Time to decelerate to lower freq. than that in constant speed or time to stop from freq. in constant speed.

T_stop: waiting time at a stop before operation is resumed.

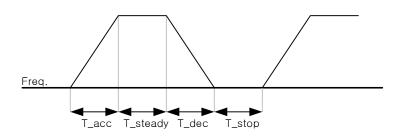

$$H76 = \frac{T_dec}{T_dec + T_steady1 + T_acc + T_steady2} \times 100[\%]$$

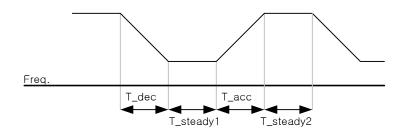

CHAPTER 11 - RS485 COMMUNICATION

11.1 Introduction

Inverter can be controlled and monitored by the sequence program of the PLC or other master module.

Drives or other slave devices may be connected in a multi-drop fashion on the RS-485 network and may be monitored or controlled by a single PLC or PC. Parameter setting and change are available through PC.

Features

Inverter can be easily applied for factory automation because operation and monitoring is available by User-program.

- * Parameter change and monitoring is available via computer.
 - (Ex: Accel/Decel time, Freq. Command etc.)
- * Interface type of RS485 reference:
- 1) Allows the drive to communicate with any other computers.
- 2) Allows connection of up to 31 drives with multi-drop link system.
- 3) Noise-resistant interface.

Users can use any kind of RS232-485 converters. The specifications of converters depend on the manufacturers. Refer to the converter manual for detailed specifications.

Before installation

Before installation and operation, this should be read thoroughly. If not, it can cause personal injury or damage to other equipment.

11.2 Specification

Item	Specification
Communication method	RS485
Transmission form	Bus method, Multi drop Link System
Applicable inverter	SV-iG5A series
Converter	RS232 converter
Connectable drives	Max 16
Transmission distance	Max. 1,200m (Within 700m Recommend)
Communication speed	19,200/9,600/4,800/2,400/1,200 bps selectable
Control procedure	Asynchronous communication system
Communication system	Half duplex system
Character system	ASCII (8 bit)
Stop bit length	Modbus-RTU: 2 bit LS Bus: 1 bit
Sum check	2 byte
Parity check	None
Installation	Use S+, S- terminals on control terminal block
Power supply	Use Insulated power from the inverter power supply

11.3 Installation

Connecting the communication line

Connect the RS-485 communication line to the inverter's (S+), (S-) terminals of the control terminals.

Check the connection and turn ON the inverter.

If the communication line is connected correctly set the communication-related parameters as the

following: DRV-03 [Drive mode]: 3(RS485)

DRV-04 [Freq. mode]: 7(RS485)

I/O-60 [Inv. Number]: 1~250 (If more than 1 inverters are connected,

be sure to use different numbers for each inverter)

I/O-61 [Baud-rate]: 3 (9,600 bps as Factory default)


I/O-62 [Lost Mode]: 0 - No action (Factory default)

I/O-63 [Time-Out]: 1.0 sec (Factory default)

I/O-59 [Comm. Prot]: 0 - Modbus-RTU, 1 - LS BUS

Computer and inverter connection

System configuration

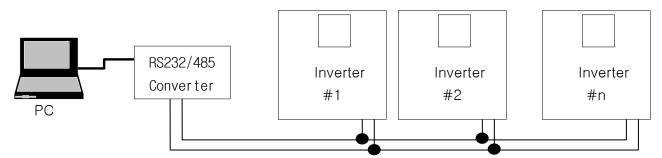

- The number of drives to be connected is up to 16 drives.
- The specification of length of communication line is max. 1200m. To ensure stable communication, limit the length below 700m.

11.4 Operation

Operating steps

Check whether the computer and the inverter are connected correctly.

Turn ON the inverter. But do not connect the load until stable communication between the computer and the inverter is verified.

Start the operating program for the inverter from the computer.

Operate the inverter using the operating program for the inverter.

Refer to "Troubleshooting" if the communication is not operating normally.

*User program or the "DriveView" program supplied from LS Industrial Systems can be used as the operating program for the inverter.

11.5 Communication protocol (MODBUS-RTU)

Use Modbus-RTU protocol (Open protocol).

Computer or other hosts can be Master and inverters Slave. Inverter responds to Read/Write command from Master.

	Code		Description	
	0x03		Read Hold Register	
Function Code	0x04		Read Input Register	
	0x06		Preset Single Register	
	0x10		Preset Multiple Register	
	0x01		ILLEGAL FUNCTION	
	0x02		ILLEGAL DATA ADDRESS	
Exception	0x03		ILLEGAL DATA VALUE	
Code	0x06		SLAVE DEVICE BUSY	
	User define	0x14	1.Write Disable (Address 0x0004 value is 0). 2.Read Only or Not Program during Running.	

11.6 Communication protocol (LS BUS)

Basic format

Command message (Request):

Command message	ENQ	Drive No.	CMD	Data	SUM	EOT
(Request):	1 byte	2 bytes	1 byte	n bytes	2 bytes SUM es 2 bytes de SUM	1 byte
Normal response	ACK	Drive No.	CMD	Data	SUM	EOT
(Acknowledge Response)	1 byte	2 bytes	1 byte	n * 4 bytes	2 bytes	1 byte
Negative response	NAK	Drive No.	CMD	Error code	SUM	EOT
(Negative Acknowledge Response)	1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Description:

Request starts with "ENQ" and ends with "EOT".

Acknowledge Response starts with "ACK" and ends with "EOT".

Negative Acknowledge Response starts with "NAK" and ends with "EOT".

"Drive Number" is the number of drives and indicated in 2 bite ASCII-HEX.

(ASCII-HEX: Hexadecimal consists of '0' ~ '9', 'A' ~ 'F)

CMD: Capital letter

Character	ASCII-HEX	Command
'R'	52h	Read
'W'	57h	Write
'X'	58h	Request for monitoring
Ύ'	59h	Action for monitoring

Data: ASCII-HEX

Ex) when data value is 3000: 3000 (dec) \rightarrow '0' 'B' 'B' '8'h \rightarrow 30h 42h 42h 38h

Error code: ASCII (20h ~ 7Fh)

Receive/Send buffer size: Receive= 39 bite, Send=44 bite

Monitor register buffer: 8 Word

SUM: to check the communication error

SUM= ASCII-HEX format of lower 8 bit of (Drive No. + CMD + DATA)

Ex) Command Message (Request) for reading one address from address "3000"

ENQ	Drive No	CMD	Address	Number of address to read	SUM	EOT
05h	"01"	"R"	"3000"	"1"	"A7"	04h
1 byte	2 bytes	1 byte	4 bytes	1 byte	2 bytes	1 byte

SUM = '0' + '1' + 'R' + '3' + '0' + '0' + '0' + '1'

- = 30h + 31h + 52h + 33h + 30h + 30h + 30h + 31h
- = 1A7h (Control values such as ENQ/ACK/NAK are excluded.)

Detail communication protocol

1) Request for Read: Request for read successive 'N' numbers of WORD from address "XXXX"

ENQ	Drive No	CMD	Address	Number of address to read	SUM	EOT
05h	"01" ~ "1F"	"R"	"XXXX"	"1" ~ "8" = n	"XX"	04h
1 byte	2 bytes	1 byte	4 bytes	1 byte	2 bytes	1 byte

Total bite = 12

The quotation marks (" ") means character.

1.1) Acknowledge Response:

ACK	Drive No	CMD	Data	SUM	EOT
06h	"01" ~ "1F"	"R"	"XXXX"	"XX"	04h
1 byte	2 bytes	1 byte	N * 4 bytes	2 byte	1 byte

Total bite = 7 + n * 4 = Max 39

1.2) Negative Acknowledge Response:

NAK	Drive No	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"R"	"**"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Total bite = 9

2) Request for Write:

ENQ	Drive No	CMD	Address	Number of address to read	Data	SUM	EOT
05h	"01"~ "1F"	"W"	"XXXX"	"1" ~ "8" = n	"XXXX"	"XX"	04h
1 byte	2 bytes	1 byte	4 bytes	1 byte	n * 4 bytes	2 byte	1 byte

Total bite = 12 + n * 4 = Max 44

2.1) Acknowledge response:

ACK	Drive No	CMD	Data	SUM	EOT
06h	"01" ~ "1F"	"W"	"XXXX"	"XX"	04h
1:byte	2:bytes	1:byte	n * 4 bytes	2 bytes	1 byte

Total bite = 7 + n * 4 = Max 39

Note

When Request for Write and Acknowledge Response is exchanged between PC and Inverter for the first time, previous data is returned. From the second time of transmission, the current data will be returned.

2.2) Negative response:

NAK	Drive No	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"W"	"**"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Total bite = 9

3) Request for Monitor Register

This is useful when constant parameter monitoring and data updates are required.

Request for Register of 'n' numbers of Address (not consecutive)

ENQ	Drive No	CMD	Number of address to read	Address	SUM	EOT
05h	"01" ~ "1F"	"X"	"1" ~ "8"=n	"XXXX"	"XX"	04h
1 byte	2 bytes	1 byte	1 byte	n * 4 byte	2 byte	1 byte

Total bite = 8 + n * 4 = Max 40

3.1) Acknowledge Response:

ACK	Drive No	CMD	SUM	EOT
06h	"01" ~ "1F"	"X"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	1 byte

Total bite = 7

3.2) Negative Acknowledge Response:

NAK	Drive No	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"X"	"**"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Total bite = 9

4) Action Request for monitor register: Request for read of address registered by monitor register.

ENQ	Drive No	CMD	SUM	EOT
05h	"01" ~ "1F"	"Y"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	1 byte

Total bite = 7

4.1) Acknowledge response:

ACK	Drive No	CMD	Data	SUM	EOT
06h	"01" ~ "1F"	"Y"	"XXXX"	"XX"	04h
1 byte	2 bytes	1 byte	n * 4 bytes	2 bytes	1 byte

Total bite= 7 + n * 4 = Max 39

4.2) Negative response:

NAK	Drive No	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"Y"	"**"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Total bite = 9

5) Error code

Error code	Description
"IF"	When master is sending codes other than Function code (R, W, X, Y).
"IA"	When parameter address does not exist
"ID"	When Data value exceeds its permissible range during 'W' (Write).
"WM"	When the specific parameters cannot be written during 'W' (Write). (For example, in the case of Read Only, Write disabled during Run)
"FE"	When frame size of specific function is not correct and Checksum field is wrong.

11.7 Parameter code list <Common area> (Note1)

<Common area>: Area accessible regardless of inverter models (Note 2)

Address	Parameter	Scale	Unit	R/W	Allotment for Bits				
0x0000	Inverter model	ı	ı	R	A: iG5A				
					FFFF:	0000 :	0002 :		
				0.4kW	0.75kW	1.5kW			
					0003 :	0004 :	0005 :		
0x0001	Inverter capacity	-	-	R	2.2kW	3.7kW	4.0kW		
UXUUUT	inverter capacity			K	0006 :	0007 :	0008 :		
					5.5kW	7.5kW	11kW		
					0009 :	000A:	000B:		
					15kW	18.5kW	22kW		

Address	Parameter	Scale	Unit	R/W	Allotment for Bits		
0x0002	Inverter Input Voltage	-	-	R	0 : 220V, 1 : 440V		
0x0003	S/W version	-	-	R	(Ex) 0x0022 : Version 2.2		
0x0004	Parameter Lock	-	-	R/W	0 : Lock(default), 1: Unlock		
0x0005	Freq. Reference	0.01	Hz	R/W	Starting freq. ~ Max. freq.		
					B15, B14, B13 : Reserved		
0x0006	-	-	R	B12, B11, B10, B9, B8 : Freq. command 0 : DRV-00, 1 : Not Used, 2~8 : Multi-Step frequency 1~7 9 : Up, 10 : Down, 11 : Up-Down Zero 12 : V0, 13 : V1, 14 : I, 15 : V0+I, 16 : V1+I, 17 : JOG, 18 : PID, 19 : Communication, 20~31 : Reserved B7, B6 : Run Command 0 : Terminal, 1 : Keypad, 3 : Communication			
					B5 Reserved		
					B4 Emergency stop (0->1)		
					B3 Fault reset (0->1)		
				R/W	B2 Reverse run (0->1)		
					B1 Forward run (0->1)		
					, ,		
0x0007	Acceleration Time	0.1	200	R/W	B0 Stop (0->1) See Function List		
0x0007	Deceleration Time	0.1	sec sec	R/W	See Function List		
0x0008	Output Current	0.1	A	R	See Function List		
0x0009	Output Frequency	0.01	Hz	R	See Function List		
0x000R	Output Voltage	0.1	V	R	See Function List		
0x000C	DC Link Voltage	0.1	V	R	See Function List		
0x000D	Output Power	0.1	kW	R	See Function List		
0.0002		• • • • • • • • • • • • • • • • • • • •			B0 Stop		
					B1 Forward running		
					B2 Reverse running		
					B3 Fault (Trip)		
					B4 Acceleration		
					B5 Deceleration		
					B6 Speed arrived		
0,000	Incrementary Charles				B7 DC Braking		
0x000E	Inverter Status	-	_	-	B8 Stopping		
					B9 Not Used		
					B10 Brake open		
					B11 Forward run command		
					B12 Reverse run command		
					B13 REM. R/S		
					B14 REM. Freq.		
					B15 Reserved		

Address	Parameter	Scale	Unit	R/W		Д	llotme	nt for Bits	Allotment for Bits				
					B15	LVT	B14	IOLT	B13	POT			
					B12	FAN	B11	EEP	B10	EXT-B			
0000	Tain information A			R	В9	HW-Diag	B8	OLT	B7	ETH			
0x000F	Trip information-A	_	-	R	В6	OHT	B5	GFT	B4	COL			
					В3	EST(BX)	B2	EXT-A	B1	OVT			
					B0	OCT							
					B15,	B14, B13, B	12, B11	, B10, B9, E	38 : Res	served			
0x0010	Input terminal			R	В7	P8	B6	P7	B5	P6			
000010	status	_	_	K	B4	P5	В3	P4	B2	P3			
					B1	P2	В0	P1					
0x0011	Output terminal			R	B7	3ABC	B4	MO					
UXUUTT	status	-	-	K	Othe	rs : Reserve	d						
0x0012	V1	-	-	R		correspond							
0x0013	V2	-	-	R	Value corresponding to 0 ~ - 10V input when setting Freq Mode to 2								
0x0014	I1	-	-	R	Value	correspond	ing to 0	~ 20mA in	out				
0x0015	RPM	-	-	R	See I	Function List							
0x001A	Unit display	-	-	R	Not U	Jsed							
0x001B	Pole number	-	-	R	Not U	Jsed							
0x001C	Custom Version	-	-	R	Not U	Jsed							
					B5	NBR	B4	OC2	B3	REEP			
0x001D	Trip information-B	-	-	R	B2	NTC	B1	FLTL	В0	COM			
					Others : Reserved								
0x001E	PID Feedback	0.1	%	R/W		s feedback a nunication in			ack is s	set by			
0x001F	Output torque	0.1	kgf m	R	Moto	or output torc	ue disp	lay					
0x0100					0x0100 : I66								
~	Read address	_	_	R		102 : 168			103:16				
0x0107	register (Note3)				0x0104 : I70								
0,0400					0x0106:172 0x0107:173 0x0108:174 0x0109:175								
0x0108 ~	Write address	_	_	W	0x0	10A : I76		0x0	10B : I7	7			
0x010F	0F register (Note3)		_	V V		10C : I78			10D : 17				
					UXU	10E : I80		UXU	10F : I8	1			

Note 1) The changed value in Common area affects the current setting but returns to the previous setting when power is cycled or Inverter is reset. However, changing value is immediately reflected in other parameter groups even in the case of Reset or Power On/Off.

Note 2) S/W version of Common area is displayed in Hexadecimal, while that of parameter area is displayed in decimal.

Note 3) User can register up to Read address 8 ea/Write address 8 ea of discontinuous addresses and read/write them n data(s) with one Read/Write command. Input/Output group I66 through I73 are registered in the common read addresses 0x0100 through 0x0107 and it can be read the discontinuous n data(s) (less than 8 ea) with a read command. Input/Output group I74 through I81 are registered in the common write addresses 0x0108 through 0x010F and it can be written discontinuous n data(s) (less than 8 ea) with a write command.

2) Extended Common Area:

2.1) Inverter Monitoring Area Parameters (Reading Only)

Address	Parameter	Scale	Unit	Allotment for Bits			
0x0300	Inverter Model	_	-	iG5A: 0x000A			
				0.4kW : 0x0019 0.	.75kW : 0x3200	1.5kW : 0x4015	
00204	lassantan aanaaites		 		2.2kW : 0x4022 3.	.7kW : 0x4037	4.0kW : 0x4040
0x0301	Inverter capacity	-	-	5.5kW : 0x4055 7.	.5kW : 0x4075	11kW: 0x40B0	
				15kW : 0x40F0 18	8.5kW : 0x4125	22kW: 0x4160	
0x0302	Inverter input voltage /power supply type (1-phase, 3-phase) / cooling method	-	-	200V single phase open air cooling: 0x0220 200V 3 phase open air cooling: 0x0230 200V single phase forced cooling: 0x0221 200V 3 phase forced cooling: 0x0231 400V single phase open air cooling: 0x0420 400V 3 phase open air cooling: 0x0430 400V single phase forced cooling: 0x0421 400V 3 phase forced cooling: 0x0431			
0x0303	S/W version	-	-	(Ex) 0x0023 : Version 2.3	3		
0x0305	Inverter operating status Inverter operating, frequency command source	-	-	B15, B14, B13, B12: 0: Normal status, 8: Fa B11, B10, B9, B8: Rese B7, B6, B5, B4: 1: Speed search, 3: Steady speed, 5: Decelerating stop 7: S/W OCS B3, B2, B1, B0: 0: Stop 2: Reverse operating B15 ~ B8: Operating cor 0: Keypad 2: Reserved 4: Terminal B7 ~ B0: Frequency cor 0: Keypad 2~4: Up/Down operating 5: V1 7: Built-in 485 26~32: Multi-step frequency	ault status erved 2 : Accelerating 4 : Decelerating 6 : H/W OCS 8 : Dwell operating 1 : Forward operating 3 : DC operating mmand source 1 : Reserved 3 : Built-in 485 mmand source 1 : Reserved g speed 6 : I	ng	
0x0310	Output current	0.1	Α	-	<u> </u>		
0x0311	Output frequency	0.01	Hz	-			
0x0312	Output RPM	1	RPM	-			
0x0314	Output voltage	1	V	-			
0x0315	DC Link voltage	1	V	-			
0x0316	Output power	0.1	kW	-			
0x0318	PID reference	0.1	%	-			
0x0319	PID feedback	0.1	%	-			
0x031A	Poles of motor	-	-	-			

Address	Parameter	Scale	Unit	Allotment for Bits
0x320	Digital input Information	-	-	B15 ~ B8 : Reserved B7 : P8 B6 : P7 B5 : P6 B4 : P5 B3 : P4 B2 : P3 B1 : P2 B0 : P1
0x321	Digital output information	-	-	B15 ~ B2 : Reserved B1 : MO B0 : 3ABC
0x0323	Select motor	-	_	0 : First motor, 1 : Second motor
0x0324	V1	0.01	%	Analog voltage input
0x0325	I	0.01	%	Analog current input
0x0328	AO	0.01	%	Analog output
0x0330	Latch type trip information-1	-	-	B15 : Reserved B14 : OHT B13 : OC2 B12 : EXT B11 : OVT B10 : OCT B9 : NTC B8 : Reserved B7 : Reserved B6 : COL B5 : POT B4 : GFT B3 : ETH B2 : IOLT B1 : Reserved B0 : OLT
0x0331	Latch type trip information-2	-	-	Others : Reserved B3 : FAN
0x0332	Latch type trip information-3	-	-	Others : Reserved B2 : Lost command B0 : BX
0x0333	H/W diagnosis trip information	-	-	Others : Reserved B0 : HW-diag
0x0334	Warning		-	Others : Reserved B4 : FAN working B0 : Overload

2.2) Inverter Control Area Parameters (Reading and Writing Available)

Address	Parameter	Scale	Unit	Allotment for Bits
0x0380	Frequency command(Note1)	0.01	Hz	Command frequency setting
0x0381	RPM command(Note1)	1	rpm	Command RPM setting
0x0382	Operating command(Note2)	-	-	Others: Reserved B3: Free run stop (0->1) B1: Reverse command (0), Forward command (1) B0: Stop command (0), Run command (1)
0x0383	Acceleration time	0.1	sec	Acceleration time setting
0x0384	Deceleration time	0.1	sec	Deceleration time setting
0x0388	PID reference(Note3)	0.1	%	PID reference command released
0x0389	PID feedback value(Note4)	0.1	%	PID feedback value

- Note 1) Writing available, when frequency command is communication.
- Note 2) Writing available, when run command is communication mode.
- Note 3) Writing available, when PID Reference (H57 = 4) is communication mode.
- Note 4) Writing available, PID Feedback(H50 = 2) is communication mode.

2.3) Inverter Memory Control Area (Reading and Writing Available)

Address	Parameter	Scale	Unit	Allotment for Bits
0x03E2	Parameter initialization	-	-	0 : No 1 : All group 2 : Drv group 3 : Function group 1 4 : Function group 2 5 : Input/Output group * no setting during trip
0x03E5	All history of failure deleted	i	-	0 : NO, 1 : YES

11.8 Troubleshooting

Refer to Troubleshooting when RS-485 communication error occurs.

Check points	Corrective measures
Is the power provided to the converter?	Provide electric power to the converter.
Are the connections between converter and computer correct?	Refer to converter manual.
Is Master not polling?	Verify the master is polling the inverter.
Is baud rate of computer and inverter correctly set?	Set the correct value in accordance with 11.3 Installation.
Is the data format of user program* right?	Revise User Program (Note1).
Is the connection between converter and communication card right?	Check for GF the correct wiring in accordance with "11.3 Installation".

(Note 1) User program is User-made S/W for PC.

11.9 Miscellaneous

ASCII Code List

Character	Hex								
Α	41	а	61	0	30	:	3A	DLE	10
В	42	b	62	1	31	,	3B	EM	19
С	43	С	63	2	32	<	3C	ACK	06
D	44	d	64	3	33	=	3D	ENQ	05
E F	45	e f	65	4	34	>	3E	EOT	04
	46	f	66	5	35	?	3F	ESC	1B
G	47	g	67	6 7	36	@	40	ETB	17
Н	48	h	68		37	[5B	ETX	03
I	49	i	69	8	38	\	5C	FF	0C
J	4A	J	6A	9	39]	5D	FS	1C
K	4B	k	6B	space	20		5E	GS	1D
L	4C	I	6C	!	21		5F	HT	09
M	4D	m	6D	"	22		60	LF	0A
N	4E	n	6E	#	23	{	7B	NAK	15
0	4F	0	6F	\$	24		7C	NUL	00
Р	50	р	70	%	25	}	7D	RS	1E
Q	51	q	71	&	26	~	7E	S1	0F
R	52	r	72	'	27	BEL	07	SO	0E
S	53	S	73	(28	BS	80	SOH	01
Т	54	t	74)	29	CAN	18	STX	02
U	55	u	75	*	2A	CR	0D	SUB	1A
V	56	V	76	+	2B	DC1	11	SYN	16
W	57	W	77	,	2C	DC2	12	US	1F
X	58	X	78	-	2D	DC3	13	VT	0B
Y	59	у	79	•	2E	DC4	14		
Z	5A	Z	7A	/	2F	DEL	7F		

CHAPTER 12 - TROUBLESHOOTING & MAINTENANCE

12.1 Protective functions.

WARNING

When a fault occurs, the cause must be corrected before the fault can be cleared. If protective function keeps active, it could lead to reduction in product life and damage to the equipment.

• Fault Display and information

Keypad display	Protective functions	Descriptions
	Overcurrent	The inverter turns off its output when the output current of the inverter flows more than the inverter rated current.
	Overcurrent2	When IGBT's Arm is short and output short occurs, the inverter turns off its output
	Ground fault current	The inverter turns off its output when a ground fault occurs and the ground fault current is more than the internal setting value of the inverter.
1 111	Inverter Overload	The inverter turns off its output when the output current of the inverter flows more than the rated level (150% for 1 minute).
	Overload trip	The inverter turns off its output if the output current of the inverter flows at 150% of the inverter rated current for more than the current limit time (1 min).
	Inverter overheat	The inverter turns off its output if the heat sink overheats due to a damaged cooling fan or an alien substance in the cooling fan by detecting the temperature of the heat sink.
bür	Output Phase loss	The inverter turns off its output when the one or more of the output (U, V, W) phase is open. The inverter detects the output current to check the phase loss of the output.
	Over voltage	The inverter turns off its output if the DC voltage of the main circuit increases higher than 400 V when the motor decelerates. This fault can also occur due to a surge voltage generated at the power supply system.
[Lut	Low voltage	The inverter turns off its output if the DC voltage is below 180V because insufficient torque or overheating of the motor can occur when the input voltage of the inverter drops.
<u>EFH</u>	Electronic Thermal	The internal electronic thermal of the inverter determines the overheating of the motor. If the motor is overloaded the inverter turns off the output. The inverter cannot protect the motor when driving a motor having more than 4 poles or multi motors.
	Input phase loss	Inverter output is blocked when one of R, S, T is open or the electrolytic capacitor needs to be replaced.

• Fault Display and Information

Keypad display	Protective functions	Descriptions
FLLL	Self-diagnostic malfunction	Displayed when IGBT damage, output phase short, output phase ground fault or output phase open occurs.
(EEP)	Parameter save error	Displayed when user-setting parameters fails to be entered into memory.
H.,,F	Inverter hardware fault	Displayed when an error occurs in the control circuitry of the inverter.
Err	Communication Error	Displayed when the inverter cannot communicate with the keypad.
rgrr	Remote keypad communication error	Displayed when inverter and remote keypad does not communicate each other. It does not stop Inverter operation.
	Keypad error	Displayed after Inverter resets keypad when keypad error occurs and this status is maintained for a certain time.
FAn	Cooling fan fault	Displayed when a fault condition occurs in the inverter cooling fan.
		Used for the emergency stop of the inverter. The inverter instantly turns off the output when the EST terminal is turned on.
(ESE)	Instant cut off	△ Caution
	instant cut on	The inverter starts to regular operation when turning off the EST terminal while FX or RX terminal is ON.
(EFW)	External fault A contact input	When multi-function input terminal (I17-I24) is set to 18 {External fault signal input: A (Normal Open Contact)}, the inverter turns off the output.
(Etb)	External fault B contact input	When multi-function input terminal (I17-I24) is set to 19 {External fault signal input: B (Normal Close Contact)}, the inverter turns off the output.
	Operating method when the frequency command is lost	When inverter operation is set via Analog input (0-10V or 0-20mA input) or option (RS485) and no signal is applied, operation is done according to the method set in I62 (Operating method when the frequency reference is lost).
	NTC open	When NTC is not connected, outputs are cut off.
רמה	Brake control error	When Break control, if rating current flows below than set value, cut off the output without break open.

12.2 Fault remedy

Keypad display	Cause	Remedy
	<u> </u>	aution
Overcurrent	When an overcurrent fault occurs, operation removed to avoid damage to IGBT inside	
	Accel/Decel time is too short compared to the GD² of the load. Load is greater than the inverter rating. Inverter output is issued when the motor is free running. Output short circuit or ground fault has occurred. Mechanical brake of the motor is operating too fast.	 Increase the Accel/Decel time. Replace the inverter with appropriate capacity. Resume operation after stopping the motor or use H22 (Speed search). Check output wiring. Check the mechanical brake.
Overcurrent2	Short occurs between up and down of IGBT Inverter output short occurs. Accel/Decel time is very fast comparing	Check the IGBT.Check output Wring.Increase the Accel/Decel time.
Ground fault current	with GD ² Ground fault has occurred at the output wiring of the inverter The insulation of the motor is damaged due to heat	Check the wiring of the output terminal.Replace the motor.
Inverter overload Overload trip	Load is greater than the inverter rating. Torque boost scale is set too large.	Upgrade the capacity of motor and inverter or reduce the load weight.Reduce torque boost scale.
Inverter overheat	Cooling system has faults. An old cooling fan is not replaced with a new one. Ambient temperature is too high.	 Check for alien substances clogged in the heat sink. Replace the old cooling fan with a new one. Keep ambient temperature under 50°C.
Output Phase loss	Faulty contact of magnetic switch at output Faulty output wiring	Make connection of magnetic switch at output of the inverter securely.Check output wiring.
Cooling fan fault	An alien substance is clogged in a ventilating slot. Inverter has been in use without changing a cooling fan.	Check the ventilating slot and remove the clogged substances.Replace the cooling fan.

• Fault remedy

Keypad display	Cause	Remedy
Over voltage	Decel time is too short compared to the GD² of the load. Regenerative load is at the inverter output. Line voltage is too high.	 Increase the Decel time. Use Dynamic Brake Unit. Check whether line voltage exceeds its rating.
Low voltage	Line voltage is low. Load larger than line capacity is connected to line (ex: welding machine, motor with high starting current connected to the commercial line). Faulty magnetic switch at the input side of the inverter.	 Check whether line voltage is below its rating. Check the incoming AC line. Adjust the line capacity corresponding to the load. Change a magnetic switch.
Electronic thermal	Motor has overheated. Load is greater than inverter rating. ETH level is set too low. Inverter capacity is incorrectly selected. Inverter has been operated at low speed for too long.	 Reduce load weight and operating duty. Change inverter with higher capacity. Adjust ETH level to an appropriate level. Select correct inverter capacity. Install a cooling fan with a separate power supply.
External fault A contact input External fault External fault B contact input	The terminal set to "18 (External fault-A)" or "19 (External fault-B)" in I20-I24 in I/O group is ON.	Fliminate the cause of fault at circuit connected to external fault terminal or cause of external fault input.
Operating method when the frequency command is lost	No frequency command is applied to V1 and I.	© Check the wiring of V1 and I and frequency reference level.
Remote keypad communication error	Communication error between inverter keypad and remote keypad	Check for connection of communication line and connector.
Brake control error	Break open current is not flow any more.	Check the Motor Capacity & Wiring

Fault remedy

P	Protective functions & cause	Descriptions
		Contact your local LSIS sales representative.
EEP	: Parameter save error	
HWT	: Hardware fault	
Err	: Communication error	
COM	: Keypad error	
NTC	: NTC error	

Overload Protection

IOLT : IOLT(inverter Overload Trip) protection is activated at 150% of the inverter rated current for 1 minute and greater.

OLT: OLT is selected when F56 is set to 1 and activated at 200% of F57[Motor rated current] for 60 sec in F58. This can be programmable.

iG5A is not provided with "Overspeed Protection."

12.3 Precautions for maintenance and inspection

⚠ WARNING

Make sure to remove the input power while performing maintenance.

Make sure to perform maintenance after checking the DC link capacitor has discharged. The bus capacitors in the inverter main circuit can still be charged even after the power is turned off. Check the voltage between terminal P or P1 and N using a tester before proceeding.

SV-iG5A series inverter has ESD (Electrostatic Discharge) sensitive components. Take protective measures against ESD before touching them for inspection or installation.

Do not change any inner parts and connectors. Never modify the inverter.

12.4Check points

- Daily inspections
- ✓ Proper installation environment
- ✓ Cooling system fault
- ✓ Unusual vibration and noise
- ✓ Unusual overheating and discoloration
- Periodic inspection
- ✓ Screws and bolts may become loose due to vibration, temperature changes, etc.
- ✓ Check that they are tightened securely and retighten as necessary.
- ✓ Alien substances are clogged in the cooling system.
- ✓ Clean it using the air.
- Check the rotating condition of the cooling fan, the condition of capacitors and the connections with the magnetic contactor.
- ✓ Replace them if there are any abnormalities.

12.5 Part replacements

The inverter consists of many electronic parts such as semiconductor devices. The following parts may deteriorate with age because of their structures or physical characteristics, leading to reduced performance or failure of the inverter. For preventive maintenance, the parts must be changed periodically. The parts replacement guidelines are indicated in the following table. Lamps and other short-life parts must also be changed during periodic inspection.

Part name	Change period (unit: Year)	Description
Cooling fan	3	Exchange (as required)
DC link capacitor in main circuit	4	Exchange (as required)
Electrolytic capacitor on control board	4	Exchange (as required)
Relays	-	Exchange (as required)

CHAPTER 13 - SPECIFICATIONS

13.1 Technical data

• Input & output ratings: Single Phase 200V Class

SV IIIIIIG5A –1		004	015				
Max capacity ¹		[HP]	0.5	1	2		
		[kW]	0.4	0.75	1.5		
	Capacity [kVA] ²	0.95	1.9	3.0		
Output	Output FLA [A] ³		2.5 5 8				
ratings	Max Fred	luency	400 [Hz] ⁴				
	Max Voltage		3Ф 200 ~ 230V ⁵				
Input	Rated Voltage		1Ф 200 ~ 230 VAC (+10%, -15%)				
ratings	ratings Rated Frequency		50 ~ 60 [Hz] (±5%)				
Cooling method		Forced cooling					
Weight [kg]			0.77	1.12	1.84		

lacktriangle

• Input & output ratings: Three Phase 200V Class

SV 🔲	I∎iG5A –	2 🔲 🔲	004	008	015	022	037	040	055	075	110	150	185	220
Max capacity ¹		[HP]	0.5	1	2	3	5	5.4	7.5	10	15	20	25	30
		[kW]	0.4	0.75	1.5	2.2	3.7	4.0	5.5	7.5	11	15	18.5	22
	Capacity	[kVA] ²	0.95	1.9	3.0	4.5	6.1	6.5	9.1	12.2	17.5	22.9	28.2	33.5
	FLA [A] ³		2.5	5	8	12	16	17	24	32	46	60	74	88
Output ratings	·		400 [Hz] ⁴											
	Max Volta	age	3Ф 200 ~ 230V ⁵											
Input	Rated Vo	ltage	3Ф 200 ~ 230 VAC (+10%, -15%)											
ratings	l Dotod		50 ~ 60 [Hz] (±5%)											
Cooling method		N/C ⁶	N/C ⁶ Forced cooling											
Weight [kg]		0.76	0.77	1.12	1.84	1.89	1.89	3.66	3.66	9.0	9.0	13.3	13.3

- 1) Indicates the maximum applicable motor capacity when using a 4-pole standard motor.
- 2) Rated capacity is based on 220V for 200V class and 440V for 400V class.
- 3) Refer to 13-4 when Carrier frequency setting (H39) is above 3kHz.
- 4) Max frequency setting range is extended to 300Hz when H40 (Control mode select) is set to 3 (Sensorless vector control).
- 5) Maximum output voltage cannot be higher than the input voltage. It can be programmable below input voltage.
- 6) N/C: Natural Convention

• Input & output ratings: Three Phase 400V Class

SV 🔲	☐ iG5A –	4	004	800	015	022	037	040	055	075	110	150	185	220
May apparitu		[HP]	0.5	1	2	3	5	5.4	7.5	10	15	20	25	30
Max G	Max capacity [kW]		0.4	0.75	1.5	2.2	3.7	4.0	5.5	7.5	11	15	18.5	22
	Capacity	[kVA] ²	0.95	1.9	3.0	4.5	6.1	6.9	9.1	12.2	18.3	22.9	29.7	34.3
Output	FLA [A] ³		1.25	2.5	4	6	8	9	12	16	24	30	39	45
ratings	1 1/10 2		400 [H	400 [Hz] ⁴										
	Max Volta	age	3Ф 380 ~ 480V ⁵											
Input	Rated Vo	Itage	3Ф 380 ~ 480 VAC (+10%, -15%)											
ratings	Rated Frequency		50 ~ 6	50 ~ 60 [Hz] (±5%)										
Cooling	Cooling method		N/C	N/C Forced cooling										
Weight [kg]		0.76	0.77	1.12	1.84	1.89	1.89	3.66	3.66	9.0	9.0	13.3	13.3	

- 1) Indicates the maximum applicable motor capacity when using a 4-pole standard motor.
- 2) Rated capacity is based on 220V for 200V class and 440V for 400V class.
- 3) Refer to 13-4 when Carrier frequency setting (H39) is above 3kHz.
- 4) Max frequency setting range is extended to 300Hz when H40 (Control mode select) is set to 3 (Sensorless vector control).
- 5) Maximum output voltage cannot be higher than the input voltage. It can be programmable below input voltage.
- 6) N/C: Natural Convention

Control

Control method		V/F, Sensorless vector control		
Frequency	setting resolution	Digital command: 0.01Hz Analog command: 0.06Hz (Max freq.: 60Hz)		
Frequency accuracy		Digital command: 0.01% of Max output frequency Analog command: 0.1% of Max output frequency		
V/F pattern		Linear, Squared, User V/F		
Overload c	apacity	150% per 1 min.		
Torque boo	ost	Manual/Auto torque boost		
Dynamic	Max braking torque	20% 1)		
Braking	Time/%ED	150% ²⁾ when using optional DB resistor		

- 1) Means average braking torque during Decel to stop of a motor.
- 2) Refer to page 13-8 for DB resistor specification.

Operation

Operation mode		Keypad/ Terminal/ Communication option/ Remote keypad selectable				
Frequency setting		Analog: 0 ~ 10[V], -10 ~ 10[V], 0 ~ 20[mA] Digital: Keypad				
Operation	on features	PID, Up-down, 3-wire				
		NPN / PNP selectable	(See page 2-13)			
Input	Multi-function terminal P1 ~ P8	FWD/REV RUN, Emergency stop, Fault reset, Jog operation, Multi-step Frequency-High, Mid, Low, Multi-step Accel/Decel-High, Mid, Low, DC braking at stop, 2 nd motor select, Frequency UP/Down, 3-wire operation, External trip A, B, PID-Inverter (v/f) operation bypass, Option-inverter (v/f) operation bypass, 2 nd Source, Analog Hold, Accel/Decel stop, Up/Down Save Freq, Jog FX/RX				
	Open collector terminal	Fault output and	Less than DC 24V 50mA			
Output	Multi-function relay	inverter status output	(N.O., N.C.) Less than AC250V 1A, Less than DC 30V 1A			
	Analog output	0 ~ 10 Vdc (less than1 Output Voltage, DC lin	0mA): Output Freq, Output Current, k selectable			

Protective function

Trip	Over Voltage, Under Voltage, Over Current, Over Current 2, Ground Fault current detection, Inverter Overheat, Motor Overheat, Output Phase Open, Overload Protection, Communication Error, Loss of Speed Command, Hardware Fault, Fan trip, Brake error.
Alarm	Stall prevention, overload
Momentary	Below 15 msec: Continuous operation (should be within rated input voltage, rated
Power	output power.)
Loss ¹⁾	Above 15 msec: Auto restart enable

¹⁾ Single Phase products: Continuous operation (should be within rated input voltage, rated output power)


Environment

Protection degree	IP 20, UL TYPE1 (Ambient Temperature 40 °C) ²⁾
Ambient temp	-10°C ~ 50°C
Storage temp	-20°C ~ 65°C
Humidity	Below 90% RH (no condensation)
Altitude/Vibration	Below 1,000m, 5.9m/sec ² (0.6G)
Atmospheric	70~106 kPa
pressure	70 100 Ki a
Location	Protected from corrosive gas, combustible gas, oil mist or dust

2) UL TYPE1 with top cover and conduit box installed.

13.2 Temperature Derating Information

Load and ambient temperature classified by the Carrier Frequency

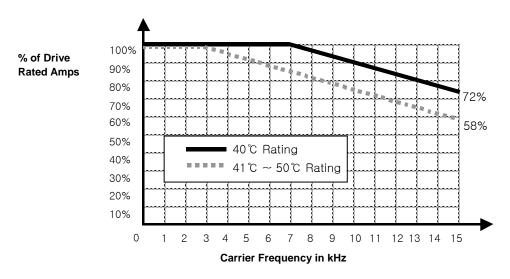



△Caution


- 1) The above graph is only applied when the inverter is operated in the allowable temperature. Pay attention to the air cooling when the inverter is installed in a panel box, and the inside temperature should be within an allowable temperature range.
- 2) This derating curve is based on inverter current rating when rated motor is connected.

13.3 Remote option

 - Parts
- 1) Remote Keypad

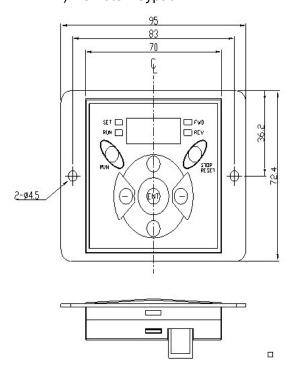



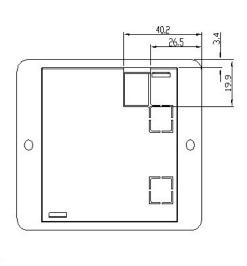

2) Remote Cable (1M,2M,3M,5M)




Remote Cable Model Number


Model number	Specification
64100022	INV, REMOTE 1M (SV-iG5A)
64100001	INV, REMOTE 2M (SV-iG5A)
64100002	INV, REMOTE 3M (SV-iG5A)
64100003	INV, REMOTE 5M (SV-iG5A)

Installation


1) Take off the top cover of the I/O board kit and remove the hole cover to connect remote cable on the side.

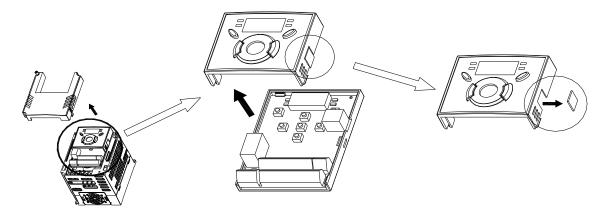

2) Attach the top cover of the I/O board kit and connect the remote cable as shown below.

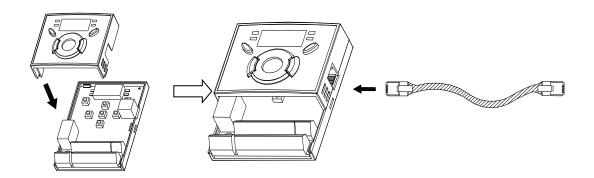

3) Connect the other side of the remote cable to the remote keypad as shown below.

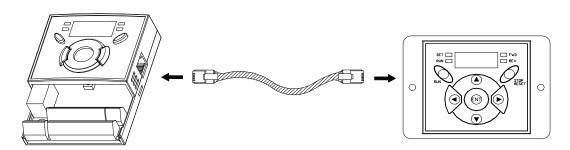


A CAUTION


- Without Parameter Read(H91), Parameter Write(H92) is not available since the Remote memory is empty when the Remote keypad is first used.
- Do not use the remote cable other than standard LS'. Otherwise, malfunction may occur due to noise input or voltage drop in the keypad.
- Check for disconnection of the communication cable and/or poor cable connection if "----" is displayed on the 7-segment display of the Remote keypad.
- When Parameter Read(H91) is executed, "rd"(Read) and "wr"(Verifiy) is displayed successively on the 7-segment display of the Remote keypad. On the other hand, when Parameter Write(H92) is executed, "wr"(Write) is displayed only.

13.4 Conduit Kit

- Installation
- 1) SV004IG5A-1, SV008IG5A-1, SV015IG5A-1, SV004IG5A-2, SV008IG5A-2, SV015IG5A-2, SV022IG5A-2, SV037IG5A-2, SV040IG5A-2, SV004IG5A-4, SV008IG5A-4, SV015IG5A-4, SV022IG5A-4, SV037IG5A-4, SV040IG5A-4

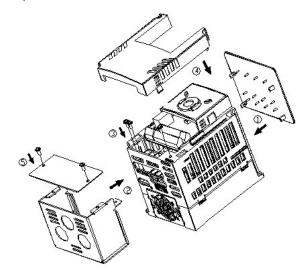

2) SV055IG5A-2, SV055IG5A-4, SV075IG5A-2, SV075IG5A-4, SV110IG5A-2, SV110IG5A-4, SV150IG5A-2, SV150IG5A-4, SV185IG5A-2, SV185IG5A-4, SV220IG5A-2, SV220IG5A-4

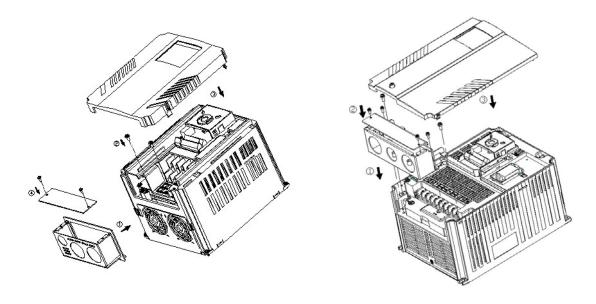

Conduit Kit

Conduit Kit	Model
Inverter Conduit Kit 1	SV004IG5A-2/4, SV008IG5A-2/4, SV004IG5A-1
Inverter Conduit Kit 2	SV015IG5A-2/4, SV008IG5A-1
Inverter Conduit Kit 3	SV022IG5A-2/4, SV037IG5A-2/4, SV040IG5A-2/4,
inverter Conduit Kit 3	SV015IG5A-1
Inverter Conduit Kit 4	SV055IG5A-2/4, SV075IG5A-2/4
Inverter Conduit Kit 5	SV110IG5A-2/4, SV150IG5A-2/4
Inverter Conduit Kit 6	SV185IG5A-2/4, SV220IG5A-2/4

13.5 Braking resistor

Input	Inverter capacity	100 %	braking	150% braking		
Voltage	[kW]	[Ω]	[W]*	[Ω]	[W]*	
200V	0.4	400	50	300	100	
	0.75	200	100	150	150	
	1.5	100	200	60	300	
	2.2	60	300	50	400	
	3.7/4.0	40	500	33	600	
	5.5	30	700	20	800	
	7.5	20	1000	15	1200	
	11.0	15	1400	10	2400	
	15.0	11	2000	8	2400	
	18.5	9	2400	5	3600	
	22.0	8	2800	5	3600	
400V	0.4	1800	50	1200	100	
	0.75	900	100	600	150	
	1.5	450	200	300	300	
	2.2	300	300	200	400	
	3.7/4.0	200	500	130	600	
	5.5	120	700	85	1000	
	7.5	90	1000	60	1200	
	11.0	60	1400	40	2000	
	15.0	45	2000	30	2400	
	18.5	35	2400	20	3600	
	22.0	30	2800	20	3600	

^{*} The wattage is based on Enable duty (%ED) 5% with continuous braking time 15 sec.

13.6 DeviceNet/Ethernet Communication Module

- iG5A for Communication
- 1) iG5A for communication type has to be used for using DeviceNet and Ethernet communication option modules.
- 2) Please refer to 'Installation of communication module' in user's manual for installation for iG5A DeviceNet and Ethernet communication.
- 3) iG5A for communication has been designed to install the communication option module easily.
- 4) Production name of communication type is as follows.
 - <Production name of communication type>

SV	XXX	iG5A	-	2	FB
LS Inverter	Capacity	Typo	-	Input Voltage Note2)	iG5A for
LO IIIVEITEI	Note1)	Туре		Input voltage	Communication

Note 1) The capacity range is applied from 0.4 to 22 kW products.

Note 2) Input Voltage is classified as 1 (Single phase 200V class),

2 (Three phase 200V class) and 4 (Three phase 400V class).

Remark

- To use the communication option module for iG5A, you must be use the iG5A for communication.
- The name of iG5A for communication is indicated as 'FB'.
- Communication function supports above the iG5A for communication's version of software
 2.3 (DeviceNet) and 2.4 (DeviceNet, Ethernet).
- Communication option
- 1) Please use the option user's manual contained in package for using option module for iG5A.
- 2) Communication option code

Product Code	Product Name
64100019	iG5A DeviceNet Module
61400020	iG5A Ethernet Module

DECLARATION OF CONFIRMITY



EC DECLARATION OF CONFORMITY

We, the undersigned,

Representative: LSIS Co., Ltd.

Address: LS Tower, 127, LS-ro, Dongan-gu,

Anyang-si, Gyeonggi-do,

Korea

Manufacturer: LSIS Co., Ltd.

> Address: 56, Samseong 4-gil, Mokcheon-eup,

> > Dongnam-gu, Cheonan-si, Chungcheongnam-do,

Korea

Certify and declare under our sole responsibility that the following apparatus:

Type of Equipment: Inverter (Power Conversion Equipment)

Model Name: STARVERT-iG5A series

Trade Mark: LSIS Co., Ltd.

Conforms with the essential requirements of the directives:

2014/35/EU Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits

2014/30/EU Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to electromagnetic compatibility

Based on the following specifications applied:

EN 61800-3:2004/A1:2012 EN 61800-5-1:2007

and therefore complies with the essential requirements and provisions of the 2014/35/CE and 2014/30/CE Directives.

Place: Cheonan, Chungnam,

Korea

Mr. Sang Chun Moon / General Manager

生活犯 2016.1.13

(Full name / Position)

EMI / RFI POWER LINE FILTERS LS inverters, iG5A series



RFI FILTERS

THE LS RANGE OF POWER LINE FILTERS **FF (Footprint) - FE (Standard) SERIES**, HAVE BEEN SPECIFICALLY DESIGNED WITH HIGH FREQUENCY **LS INVERTERS**. THE USE OF LS FILTERS, WITH THE INSTALLATION ADVICE OVERLEAF HELP TO ENSURE TROUBLE FREE USE ALONG SIDE SENSITIVE DEVICES AND COMPLIANCE TO CONDUCTED EMISSION AND IMMUNITY STANDARS **TO EN 50081 -> EN61000-6-3:02 and EN61000-6-1:02**

CAUTION


IN CASE OF A LEAKAGE CURRENT PROTECTIVE DEVICES IS USED ON POWER SUPPLY, IT MAY BE FAULT AT POWER-ON OR OFF. IN AVOID THIS CASE, THE SENSE CURRENT OF PROTECTIVE DEVICE SHOULD BE LARGER THAN VALUE OF LEAKAGE CURRENT AT WORST CASE IN THE BELOW TABLE.

RECOMMENDED INSTALLATION INSTRUCTIONS

To conform to the EMC directive, it is necessary that these instructions be followed as closely as possible. Follow the usual safety procedures when working with electrical equipment. All electrical connections to the filter, inverter and motor must be made by a qualified electrical technician.

- 1-) Check the filter rating label to ensure that the current, voltage rating and part number are correct.
- 2-) For best results the filter should be fitted as closely as possible to the incoming mains supply of the wiring enclousure, usually directly after the enclousures circuit breaker or supply switch.
- 3-) The back panel of the wiring cabinet of board should be prepared for the mounting dimensions of the filter. Care should be taken to remove any paint etc... from the mounting holes and face area of the panel to ensure the best possible earthing of the filter.
- 4-) Mount the filter securely.
- 5-) Connect the mains supply to the filter terminals marked LINE, connect any earth cables to the earth stud provided. Connect the filter terminals marked LOAD to the mains input of the inverter using short lengths of appropriate gauge cable.
- 6-) Connect the motor and fit the <u>ferrite core</u> (output chokes) as close to the inverter as possible. Armoured or screened cable should be used with the 3 phase conductors only threaded twice through the center of the ferrite core. The earth conductor should be securely earthed at both inverter and motor ends. The screen should be connected to the enclosure body via and earthed cable gland.
- 7-) Connect any control cables as instructed in the inverter instructions manual.

IT IS IMPORTANT THAT ALL LEAD LENGHTS ARE KEPT AS SHORT AS POSSIBLE AND THAT INCOMING MAINS AND OUTGOING MOTOR CABLES ARE KEPT WELL SEPARATED.

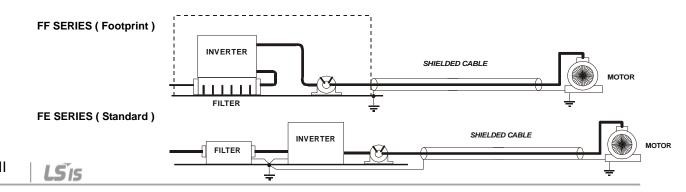


EMI / RFI POWER LINE FILTERS LS inverters, iG5A series





	s /	Footprint Filt	ers								
iG5A series	POWER	CODE	CURRENT	VOLTAGE	LEAKAGE CURRENT	DIMENSIONS L W H	MOUNTING Y X	WEIGHT	MOUNT	FIG.	OUTPUT CHOKES
SINGLE PHASE				250112	(MAX.)			1		1 .	
SV004iG5A-1	0.4kW	FFG5A-M005-3	5A	250VAC	3.5mA	175x76.5x40	161x53	1.2Kg.	M4	Α	FS - 1
SV008iG5A-1	0.75kW	FFG5A-M006-3	6A	250VAC	3.5mA	176.5x107.5x40	162.5x84	1.3Kg.	M4	Α	FS - 1
SV015iG5A-1	1.5kW	FFG5A-M012-3	12A	250VAC	3.5mA	176.5x147.5x45	162.5x124	1.8Kg.	M4	Α	FS – 1
THREE PHASE	O ALAM				NOM. MAX.						
SV004iG5A-2 SV008iG5A-2	0.4kW 0.75kW	FFG5A-T005-3	5A	480VAC	0.5mA 27mA	175x76.5x40	161x53	1.2Kg.	M4	Α	FS – 1
SV008iG5A-2NC	0.75kW	FFG5A-T006-3	6A	480VAC	0.5mA 27mA	176.5x107.5x40	162.5x84	1.2Kg.	M4	Α	FS - 1
SV015iG5A-2	1.5kW	FFG5A-T012-3	12A	480VAC	0.5mA 27mA	176.5x107.5x40	162.5x84	1.2Kg.	M4	A	FS - 2
SV022iG5A-2	2.2kW	11 GJA-1012-3	IZA	400VAC	U.SIIIA ZIIIA	170.38107.3840	102.3704	r.sky.	1014	А	13-2
SV037iG5A-2	3.7kW	FFG5A-T020-3	20A	480VAC	0.5mA 27mA	176.5x147.5x45	162.5x124	1.8Kg.	M4	Α	FS – 2
SV040iG5A-2	4.0kW							. 3			
SV055iG5A-2	5.5kW	FFG5A-T050-3	50A	480VAC	0.5mA 27mA	266x185.5x55	254x140	2.5Kg.	M4	В	FS – 2
SV075iG5A-2	7.5kW	11 G3A-1030-3	307	400VAC	0.31171 271171	200/103.3/33	2347140	2.5Kg.	101-	D	13-2
SV110iG5A-2	11kW										
SV150iG5A-2 SV180iG5A-2	15kW 18kW										
SV220iG5A-2	22kW										
SV004iG5A-4	0.4kW	FEOFA TOOL O	A	400) (4.0	05 4 07 4	475 77 5 40	4/4 50	4.01/			FO 4
SV008iG5A-4	0.75kW	FFG5A-T005-3	5A	480VAC	0.5mA 27mA	175x76.5x40	161x53	1.2Kg.	M4	Α	FS – 1
SV008iG5A-4NC	0.75kW	FFG5A-T012-3	6A	480VAC	0.5mA 27mA	176.5x107.5x40	162.5x84	1.2Kg.	M4	Α	FS - 1
SV015iG5A-4	1.5kW	71 GUN 1012-3	U/ \	100170	0.0.1111 27111/1	770.08107.0840	102.000	r.zivy.	/VI-T	7.	13 1
SV022iG5A-4 SV037iG5A-4	2.2kW 3.7kW	EECEA TOOO 2	20.4	480VAC	0.5mA 27mA	176.5x147.5x45	160 Ev104	1 01/~	1.1.4	Λ.	FS – 2
SV03/IG5A-4 SV040iG5A-4	3.7KW 4.0kW	FFG5A-T020-3	20A	40UVAC	U.DINA Z/MA	170.0X147.5X45	162.5x124	1.8Kg.	M4	Α	г3-2
SV055iG5A-4	5.5kW									_	
SV075iG5A-4	7.5kW	FFG5A-T030-3	30A	480VAC	0.5mA 27mA	266x185.5x60	252x162	2Kg.	M4	В	FS – 2
SV110iG5A-4	11kW	FFCEA TOE1 2	E1 A	400\/AC	0 Fm 1 27m 1	368x258.5x65	354x217	2.5Kg.	N/4	В	FS – 2
SV150iG5A-4	15kW	FFG5A-T051-3	51A	480VAC	0.5mA 27mA	300X230.3X03	334X217	2.5Kg.	M6	В	r3-2
SV185iG5A-4	18kW	FFG5A-T070-3	70A	480VAC	0.5mA 27mA	460x288x65	446x246	2.8Kg.	M8	В	FS - 2
SV220iG5A-4	22kW	11 00/1 10/0 0	7071	100 17 10		100//200//00	T TONE TO	Z.o.tg.	1110		
iG5A series	c 1	Standard Fill	tors								
	3 /		1013		LEAKACE	DIMENSIONS	MOUNTING				OUTDUT
INVERTER	POWER	CODE	CURRENT	VOLTAGE	LEAKAGE	DIVILIVIONS	MOONTING	WEIGHT	MOUNT	FIG.	OUTPUT
		OODL	OUNTERN	VOLIAGE	CURRENT	L W H	Y X	WLIGITI	WOON	110.	CHOKES
SINGLE PHASE		OODE	OOMMENT	VOLTAGE	CURRENT (MAX.)	L W H	Y X	WLIGITI	MODIVI	110.	CHOKES
SINGLE PHASE SV004iG5A-1	0.4kW				(MAX.)						
	0.4kW 0.75kW	FE-M010-3	10A	250VAC		L W H	Y X	0.6 Kg		C	FS - 1
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1					(MAX.)						
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE	0.75kW 1.5kW	FE-M010-3	10A	250VAC	(MAX.) 3.5mA	150 x 55 x 45	140 x 36	0.6 Kg		С	FS - 1
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2	0.75kW 1.5kW	FE-M010-3 FE-M015-3	10A 15A	250VAC 250VAC	3.5mA 3.5mA NOM. MAX.	150 x 55 x 45 150 x 55 x 45	140 x 36 140 x 36	0.6 Kg 0.6 Kg		C	FS-1 FS-1
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW	FE-M010-3	10A	250VAC	(MAX.) 3.5mA 3.5mA	150 x 55 x 45	140 x 36	0.6 Kg		С	FS - 1
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2NC	0.75kW 1.5kW 0.4kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3	10A 15A 6A	250VAC 250VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60	140 x 36 140 x 36 238x76	0.6 Kg 0.6 Kg 1.6Kg.		C C	FS - 1 FS - 1
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2NC SV015iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW	FE-M010-3 FE-M015-3	10A 15A	250VAC 250VAC	3.5mA 3.5mA NOM. MAX.	150 x 55 x 45 150 x 55 x 45	140 x 36 140 x 36	0.6 Kg 0.6 Kg		C	FS-1 FS-1
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2NC SV015iG5A-2 SV022iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3	10A 15A 6A 12A	250VAC 250VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60	140 x 36 140 x 36 238x76	0.6 Kg 0.6 Kg 1.6Kg.		C C	FS-1 FS-1 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2NC SV015iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW	FE-M010-3 FE-M015-3 FE-T006-3	10A 15A 6A	250VAC 250VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60	140 x 36 140 x 36 238x76 238x76	0.6 Kg 0.6 Kg 1.6Kg.		C C C	FS - 1 FS - 1
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2NC SV015iG5A-2 SV022iG5A-2 SV037iG5A-2 SV040iG5A-2 SV055iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3	10A 15A 6A 12A 20A	250VAC 250VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60	140 x 36 140 x 36 238x76 238x76 258x106	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg.		C C C	FS-1 FS-1 FS-2 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV015iG5A-2 SV022iG5A-2 SV037iG5A-2 SV040iG5A-2 SV055iG5A-2 SV075iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3	10A 15A 6A 12A	250VAC 250VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60	140 x 36 140 x 36 238x76 238x76	0.6 Kg 0.6 Kg 1.6Kg.		C C C	FS-1 FS-1 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV040iG5A-2 SV055iG5A-2 SV075iG5A-2 SV110iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3	10A 15A 6A 12A 20A	250VAC 250VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60	140 x 36 140 x 36 238x76 238x76 258x106	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg.		C C C	FS-1 FS-1 FS-2 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV040iG5A-2 SV055iG5A-2 SV075iG5A-2 SV110iG5A-2 SV110iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T050-3 FE-T100-3	10A 15A 6A 12A 20A 50A 100A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90	140 x 36 140 x 36 238x76 238x76 258x106	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg.		C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV055iG5A-2 SV075iG5A-2 SV110iG5A-2 SV150iG5A-2 SV150iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 11kW 15kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T050-3	10A 15A 6A 12A 20A 50A	250VAC 250VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90	140 x 36 140 x 36 238x76 238x76 258x106	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg.		C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV040iG5A-2 SV055iG5A-2 SV075iG5A-2 SV110iG5A-2 SV110iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T050-3 FE-T100-3	10A 15A 6A 12A 20A 50A 100A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130	140 x 36 140 x 36 238x76 238x76 258x106 408x166	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg.		C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-2 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV075iG5A-2 SV110iG5A-2 SV110iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 18kW 22kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T050-3 FE-T100-3 FEP-T150	10A 15A 6A 12A 20A 50A 100A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg.		C C C C D	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV015iG5A-2 SV022iG5A-2 SV037iG5A-2 SV040iG5A-2 SV055iG5A-2 SV110iG5A-2 SV150iG5A-2 SV150iG5A-2 SV185iG5A-2 SV185iG5A-2 SV185iG5A-2 SV180iG5A-4 SV008iG5A-4 SV008iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 18kW 22kW 0.4kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T050-3 FE-T100-3	10A 15A 6A 12A 20A 50A 100A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130	140 x 36 140 x 36 238x76 238x76 258x106 408x166	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg.		C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-2 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV015iG5A-2 SV022iG5A-2 SV037iG5A-2 SV040iG5A-2 SV055iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV180iG5A-2 SV180iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 22kW 0.4kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T050-3 FE-T100-3 FEP-T150	10A 15A 6A 12A 20A 50A 100A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg.		C C C C D	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV075iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV185iG5A-2 SV200iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV015iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 122kW 0.4kW 0.75kW 1.5kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T100-3 FE-T150 FE-T006-3	10A 15A 6A 12A 20A 50A 100A 120A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155 238x76	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg.		C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV075iG5A-2 SV115iG5A-2 SV155iG5A-2 SV155iG5A-2 SV155iG5A-2 SV155iG5A-2 SV155iG5A-2 SV104iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T050-3 FE-T100-3 FEP-T150	10A 15A 6A 12A 20A 50A 100A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg.		C C C C D	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV075iG5A-2 SV110iG5A-2 SV110iG5A-2 SV185iG5A-2 SV120iG5A-2 SV220iG5A-2 SV220iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T050-3 FE-T100-3 FE-T006-3 FE-T012-3	10A 15A 6A 12A 20A 50A 100A 120A 6A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60	140 x 36 140 x 36 238x76 238x76 258x106 258x106 408x166 115x155 238x76	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg. 1.6Kg.		C C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV110iG5A-2 SV110iG5A-2 SV150iG5A-2 SV120iG5A-2 SV120iG5A-2 SV185iG5A-2 SV20iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T020-3 FE-T100-3 FE-T150 FE-T006-3	10A 15A 6A 12A 20A 50A 100A 120A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155 238x76	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg.		C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV075iG5A-2 SV110iG5A-2 SV110iG5A-2 SV185iG5A-2 SV120iG5A-2 SV220iG5A-2 SV220iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T050-3 FE-T100-3 FE-T150 FE-T006-3 FE-T012-3 FE-T012-3 FE-T030-3	10A 15A 6A 12A 20A 50A 100A 120A 6A 12A 30A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60 250x110x60 270x140x60	140 x 36 140 x 36 238x76 238x76 258x106 258x106 408x166 115x155 238x76 238x76 258x106	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg. 1.6Kg.		C C C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV055iG5A-2 SV110iG5A-2 SV150iG5A-2 SV120iG5A-2 SV120iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV058iG5A-4 SV058iG5A-4 SV058iG5A-4 SV058iG5A-4 SV058iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW 0.75kW 0.75kW	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T050-3 FE-T100-3 FE-T006-3 FE-T012-3	10A 15A 6A 12A 20A 50A 100A 120A 6A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60	140 x 36 140 x 36 238x76 238x76 258x106 258x106 408x166 115x155 238x76	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg. 1.6Kg.		C C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV055iG5A-2 SV110iG5A-2 SV110iG5A-2 SV150iG5A-2 SV150iG5A-4 SV008iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 1.5	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T050-3 FE-T100-3 FE-T150 FE-T012-3 FE-T012-3 FE-T030-3 FE-T030-3 FE-T050-3	10A 15A 6A 12A 20A 50A 100A 120A 6A 12A 30A 50A	250VAC 250VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60 270x140x60 270x140x60 270x140x90	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155 238x76 238x76 258x106 258x106	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg. 1.6Kg. 2.4 Kg. 3.2Kg.		C C C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3 FS-2 FS-2 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV075iG5A-2 SV110iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV055iG5A-4 SV055iG5A-4 SV055iG5A-4 SV055iG5A-4 SV055iG5A-4 SV055iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 1.5kW 1.5kW 2.2kW 1.5	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T050-3 FE-T100-3 FE-T150 FE-T006-3 FE-T012-3 FE-T012-3 FE-T030-3	10A 15A 6A 12A 20A 50A 100A 120A 6A 12A 30A	250VAC 250VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60 250x110x60 270x140x60	140 x 36 140 x 36 238x76 238x76 258x106 258x106 408x166 115x155 238x76 238x76 258x106	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg. 1.6Kg.		C C C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3 FS-3
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV022iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV055iG5A-2 SV110iG5A-2 SV110iG5A-2 SV150iG5A-2 SV150iG5A-4 SV008iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 1.5	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T050-3 FE-T100-3 FE-T150 FE-T012-3 FE-T012-3 FE-T030-3 FE-T030-3 FE-T050-3	10A 15A 6A 12A 20A 50A 100A 120A 6A 12A 30A 50A 70A	250VAC 250VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60 270x140x60 270x140x90 350x180x90	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155 238x76 238x76 258x106 258x106	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg. 1.6Kg. 2.4 Kg. 3.2Kg.		C C C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3 FS-2 FS-2 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV015iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV055iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV007iG5A-4 SV007iG5A-4 SV075iG5A-4 SV075iG5A-4 SV075iG5A-4 SV075iG5A-4 SV075iG5A-4 SV075iG5A-4 SV075iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV055iG5A-4 SV055iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 1.5	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T050-3 FE-T100-3 FE-T150 FE-T012-3 FE-T012-3 FE-T030-3 FE-T030-3 FE-T050-3 FE-T050-3	10A 15A 6A 12A 20A 50A 100A 120A 6A 12A 30A 50A 70A	250VAC 250VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60 270x140x60 270x140x90 350x180x90	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155 238x76 238x76 258x106 338x146	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg. 1.6Kg. 2.4 Kg. 3.2Kg. 7.5Kg.		C C C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3 FS-2 FS-2 FS-2 FS-2
SV004iG5A-1 SV008iG5A-1 SV015iG5A-1 THREE PHASE SV004iG5A-2 SV008iG5A-2 SV008iG5A-2 SV015iG5A-2 SV022iG5A-2 SV037iG5A-2 SV055iG5A-2 SV055iG5A-2 SV110iG5A-2 SV150iG5A-2 SV150iG5A-2 SV150iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV008iG5A-4 SV075iG5A-4 SV075iG5A-4 SV075iG5A-4 SV075iG5A-4 SV110iG5A-4 SV110iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4 SV150iG5A-4	0.75kW 1.5kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 4.0kW 5.5kW 7.5kW 11kW 12kW 0.4kW 0.75kW 0.75kW 1.5kW 2.2kW 3.7kW 1.5	FE-M010-3 FE-M015-3 FE-T006-3 FE-T012-3 FE-T050-3 FE-T100-3 FE-T150 FE-T012-3 FE-T012-3 FE-T030-3 FE-T030-3 FE-T050-3 FE-T050-3 FE-T050-3 FE-T050-3	10A 15A 6A 12A 20A 50A 100A 120A 6A 12A 30A 50A 70A	250VAC 250VAC 250VAC 480VAC	(MAX.) 3.5mA 3.5mA NOM. MAX. 0.5mA 27mA 0.5mA 27mA 0.5mA 27mA 1.3mA150mA 1.3mA150mA 0.5mA 27mA	150 x 55 x 45 150 x 55 x 45 250x110x60 250x110x60 270x140x60 270x140x90 420x200x130 332x170x120 250x110x60 270x140x60 270x140x90 350x180x90	140 x 36 140 x 36 238x76 238x76 258x106 408x166 115x155 238x76 238x76 258x106 258x106 338x146 C/EN 61800-3	0.6 Kg 0.6 Kg 1.6Kg. 1.6Kg. 2.2Kg. 3.2Kg. 13.8Kg. 8Kg. 1.6Kg. 2.4 Kg. 3.2Kg. 7.5Kg.		C C C C C C C C	FS-1 FS-1 FS-2 FS-2 FS-2 FS-3 FS-3 FS-2 FS-2 FS-2 FS-2

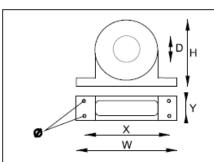


FS SERIES (output chokes)

CODE	D	W	Н	Х	Ø
FS – 1	21	85	46	70	5
FS – 2	28.5	105	62	90	5
FS – 3	48	150	110	125 x 30	5

DIMENSIONS


FF SERIES (Footprint)

H Output cables

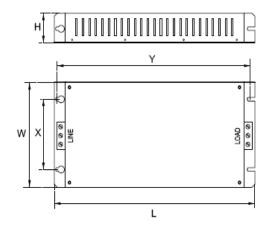

FE SERIES (Standard)

FIG. C

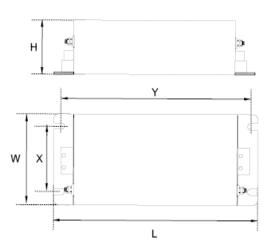





Vector Motor Control Ibérica S.L.
C/ Mar del Carib, 10
Pol. Ind. La Torre del Rector
08130 Santa Perpètua de Mogoda
(BARCELONA) ESPAÑA
Tel. (+34) 935 748 248
info@ymc.es
www.ymc.es

FEP SERIES (Standard)

 FIG. D



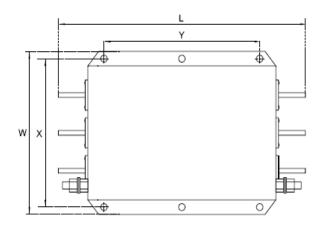

Warranty

Maker	LS Industrial Systems Co., Ltd.		Installation (Start-up) Date	
Model No.	SV-iG5A		Warranty Period	
Customer Information	Name			
	Address			
	Tel.			
Sales Office (Distributor)	Name			
	Address			
	Tel.			

Warranty period is 12 months after installation or 18 months after manufactured when the installation date is unidentified. However, the guarantee term may vary on the sales term.

IN-WARRANTY service information

If the defective part has been identified under normal and proper use within the guarantee term, contact your local authorized LS distributor or LS Service center.

OUT-OF WARRANTY service information

The guarantee will not apply in the following cases, even if the guarantee term has not expired.

- Damage was caused by misuse, negligence or accident.
- ▶ Damage was caused by abnormal voltage and peripheral devices' malfunction (failure).
- ▶ Damage was caused by an earthquake, fire, flooding, lightning, or other natural calamities.
- When LS nameplate is not attached.
- When the warranty period has expired.

Revision History

No	Date	Edition	Changes
1	2004. 2	First Release	Only 5.5, 7.5kW included
2	2004. 9	2 nd Edition	0.4~4.0kW added to first release
3	2005. 6	4 th Edition	CI changed
4	2006. 5	5 th Edition	S/W Version up (V1.7)
5	2007. 11	6 th Edition	S/W Version up (V2.0)
6	2008. 4	7 th Edition	S/W Version up (V2.2)
7	2008. 11	8 th Edition	Contents of EMI / RFI POWER LINE FILTERS updated
8	2009. 7	9 th Edition	S/W Version up (V2.3)
9	2010.12	10 th Edition	Contents of EMI / RFI POWER LINE FILTERS changed